


corob

D410x

Automatic dispenser

User's Manual

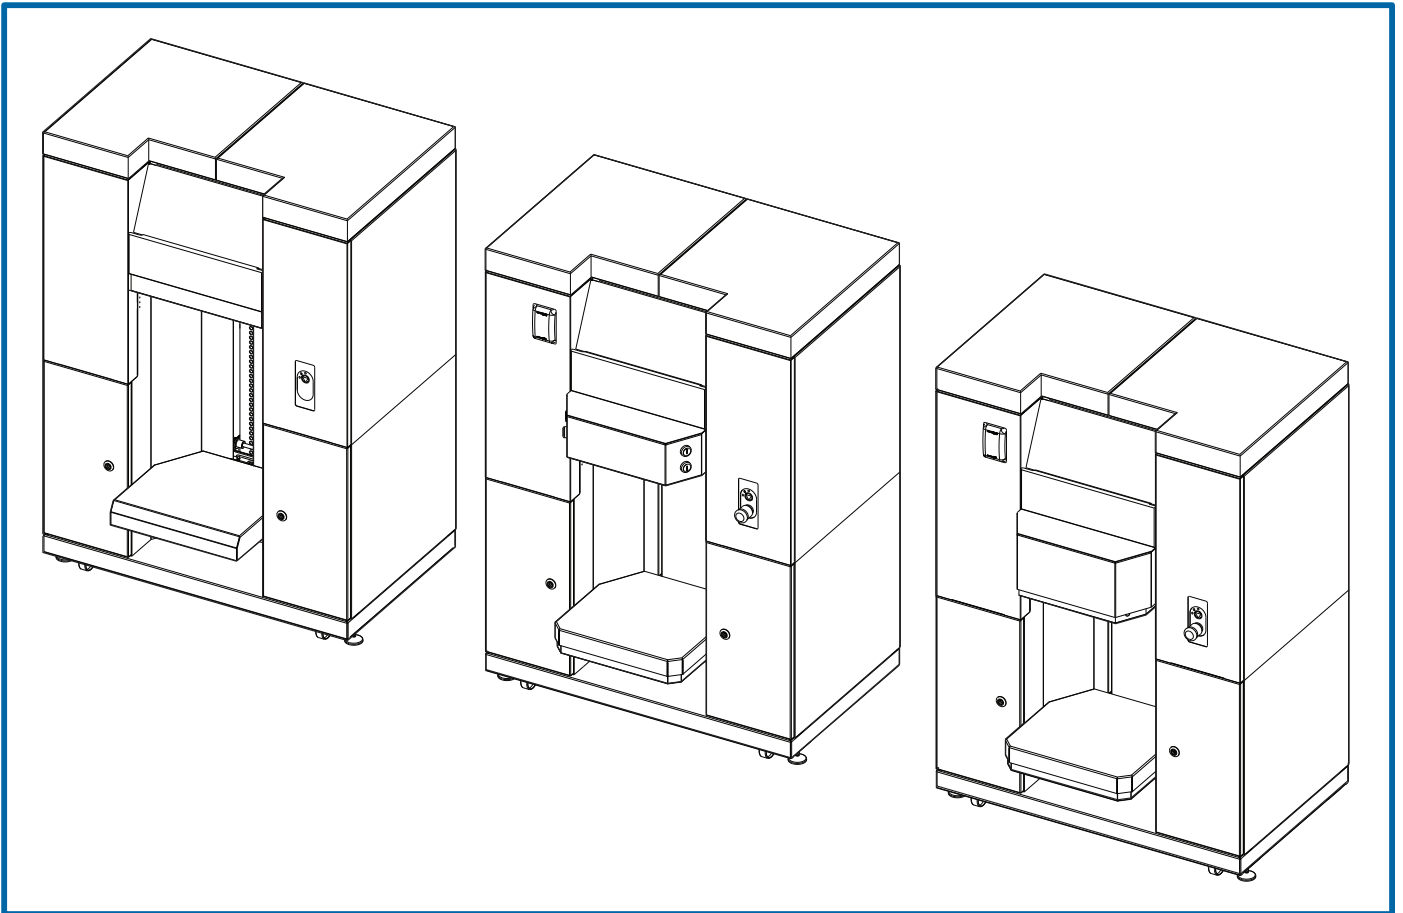

V2.0R1 (02/2026)

COPYRIGHT

© COPYRIGHT 2026, COROB S.p.A.

All rights reserved in all countries

If you require additional copies of this manual or further technical information about it, please write to:

Corob S.p.A., with a sole shareholder, a company subject to the management and coordination of Graco Inc.

Via Agricoltura 103 • 41038 San Felice s/P • Modena • Italy

Phone: +39-0535-663111 • Fax: +39-0535-663285

www.corob.com

INTELLECTUAL PROPERTY RIGHTS AND DISCLAIMER

No part of this manual may be translated into any other languages and/or adapted and/or reproduced in any form, or by any means, electronic or mechanical, including but not limited to photocopying and recording, without prior written permission of COROB S.p.A.

COROB is a registered trademark and/or commercial trademark used on an exclusive basis by COROB S.p.A. and its affiliated companies (hereinafter "COROB").

A failure of a trademark to appear hereunder does not mean that COROB does not use the trademark in question nor does it constitute a waiver by COROB of any related intellectual property rights.

Valuable proprietary technical information contained in the present manual are referring to proprietary know-how, designs, drawings and/or applications used on an exclusive basis by COROB frequently covered by Patents and/or Patent Applications and thus protected by International and National Intellectual Property Laws.

Unless otherwise indicated, all references to the names, data and addresses of companies other than COROB and its affiliated companies are purely examples and serve to clarify the use of the COROB products.

COROB has carefully reviewed the wording and images contained in the present manual, nevertheless COROB reserves the right to modify and/or update the information herein to correct editorial errors and/or inaccuracy of the information herein without notice or commitment on its part.

This manual contains all information necessary for the foreseeable and normal use of the COROB products by the final user.

The manual does not contain guidelines and/or information for product repair. For safety reasons, only trained and authorised technical personnel should perform such interventions. Failure to do so may result in personal injury or damage to the product.

For the purpose mentioned above, COROB has appointed authorised technical personnel.

Authorized technical personnel shall mean technicians who have attended a technical training course held by COROB and/or its affiliated companies.

Unauthorised interventions could void the warranty coverage of your COROB product pursuant to the sales contract or to the General Sales Conditions of COROB. COROB can be held responsible only within the limits of the warranty coverage provided by the General Sales Conditions.

COROB does not intend to limit or exclude its liability against any statutory provisions under any applicable law. Therefore the reference to above warranty limitations or exclusions may not apply.

The final user can ask COROB or visit the web site www.corob.com for contact details about the nearest authorized technical service.

QUICK GUIDE

At the beginning of the working day

- Check that the nozzle center is clean.
- (With humidifier for solvent-based colorants or without humidifier) Check that the sponge is clean and saturated; if it is necessary to saturate, use only appropriate liquid (the choice of the liquid depends on the nature of the colorants, and must be done directly by the manufacturer of the products used).
- (With humidifier for water-based colorants) Check that the water in the bottle is not below the minimum level.
- (With Puncher) Check the cutting tool is clean.
- Carry out system Purge.

Things to remember

- Never let the machine in the OFF position.
- In the canisters, stirring of each colorant takes place automatically (stirring times can however be customized).
- Be careful not to fill the canisters with too much colorant. In case of overfilling, act as indicated in the user's manual.
- The colorant to be poured inside the canisters must be stirred manually. Do not use automatic shakers.
- Close the canisters with their lids right after filling operations.
- Remember to update accordingly the canisters filling levels via the management software.
- (With humidifier for solvent-based colorants or without humidifier) The sponge must be saturated at least twice a week (the frequency of intervention is indicative, since it depends on the nature of colorants and the environment conditions).
- (With humidifier for water-based colorants) Top up the water bottle as soon as the minimum level is reached. Do not exceed the maximum level.

At the end of the working day

- Refill the canisters.
- Update the canister filling levels in the management software.
- Shut down the computer. Do not shut off the machine.

It is recommended to carefully read the user's manual.

COPYRIGHT	2
QUICK GUIDE.....	3
1 GENERAL INFORMATION	6
1.1 Purpose and use of the manual.....	6
1.1.1 Conventionally used graphics	6
1.2 Definitions	6
2 PROPERTIES.....	7
2.1 Description of the machine.....	7
2.2 Description of units	8
2.3 Usable cans.....	11
2.4 Intended use and misuse	12
2.5 Identifying information	12
3 SAFETY.....	13
3.1 Safety warnings and unauthorized use.....	13
3.2 Warnings on the use of products	14
3.3 Residual risk.....	15
3.4 Position of labels	18
3.5 Safety devices	19
3.6 Emergency stop	19
3.6.1 Checking the safety devices	20
3.7 Emergency situations.....	20
3.8 Requirements of the installation site	21
4 SHIPPING AND HANDLING	22
4.1 General warnings.....	22
4.2 Unpacking and placement.....	23
4.2.1 Standard material supplied.....	25
4.3 Storage	26
4.4 Disposal and recycling	26
5 STARTING UP	27
5.1 General warnings.....	27
5.2 Management computer.....	27
5.3 Control devices and connections	28
5.4 Buttons and lamps	29
5.5 Off-line button and WHITE lamp.....	31
5.6 “Easy-On” computer function (optional)	31
5.7 Electrical connection and start-up	32
5.8 Shut-down	33
6 USING THE DISPENSER	34
6.1 General warnings.....	34
6.2 At the beginning of the working day	34
6.3 Running the machine	34
6.3.1 Loading the can - Manual shelf.....	35
6.3.2 Loading the can - Semiautomatic shelf.....	35
6.3.3 Loading the can - Automatic shelf.....	36
6.3.4 Use of can centering device and Bung Hole Locator	36
6.3.5 Punching the can.....	37
6.3.6 Dispensing	37
6.4 Automatic stirring.....	37
6.5 Refilling the canisters.....	38
6.6 Troubleshooting	41
7 ROUTINE MAINTENANCE	43
7.1 General warnings.....	43
7.2 Maintenance table.....	43
7.3 Products to be used.....	43
7.4 External cleaning	44

7.5	Cleaning the nozzle centre (Autocap).....	44
7.6	Cleaning and moistening the sponge.....	45
7.7	Checking and replacing the puncher	47
7.8	Refilling the humidifier bottle.....	48
8	TECHNICAL DATA.....	49
8.1	Technical data.....	49
8.2	Dimensions and weight.....	51
8.3	Declaration of conformity	52
8.4	Warranty.....	55
9	ASSEMBLY INSTRUCTIONS.....	56
9.1	Manual plugger.....	56
10	SUPPORT ASSEMBLY INSTRUCTIONS.....	57
10.1	Monitor support kit assembly instructions	57
10.1.1	<i>Box contents</i>	<i>57</i>
10.1.2	<i>Mounting the mouse support shelves (optional)</i>	<i>58</i>
10.1.3	<i>Mansioning connection cables</i>	<i>58</i>
10.1.4	<i>Mounting the column support</i>	<i>59</i>
10.1.5	<i>Mounting the keyboard support shelf</i>	<i>59</i>
10.1.6	<i>Mounting the monitor on the column.....</i>	<i>60</i>
10.1.7	<i>Mounting the column on the machine</i>	<i>60</i>
10.1.8	<i>Preparing the workstation.....</i>	<i>61</i>
10.2	LCD support assembly instructions.....	61

1 GENERAL INFORMATION

1.1 Purpose and use of the manual

Read this manual carefully before using the machine.

This manual, inserted in the product packaging, contains instructions on the use and routine maintenance needed to uphold the machine's performance over time. The manual contains all information needed to correctly use the machine and avoid any accident.

The manual is to be considered an integral part of the machine, and must be stored until it is fully dismantled.

The manual contains all information available at the time of preparation regarding the machine and any accessories; for accessories, the manual includes any variations or changes that involve different operating procedures.

Should it be lost or partially ruined, so that its contents can no longer be read in full, you must request a new manual from the manufacturer.

If the images contained in this manual show the machine without the guards and/or employees without personal protective equipment, it is only for the purpose to make clearer the discussion of the issues.

Some of the illustrations in this manual were taken from prototypes; some details may differ on machines in standard production.

1.1.1 Conventionally used graphics

Boldface type is used to highlight notes or information of particular importance to a topic.

 HAZARD
Indicates a risk of personal injury.

 WARNING
Indicates a risk of damage to the machine that could interfere with its operation.

 ATTENTION
Indicates important instructions referring to precautionary rules and/or measures to adopt.

 NOTE
Indicates situations and/or operations that involve the management software installed on the computer.

SAFETY INSTRUCTIONS
Indicates that to carry out the intervention described, the use of the specified tools is required.

1.2 Definitions

OPERATOR
A person familiar with the methods to produce paints or similar products, trained and authorized to operate and use the machine by its controls and to load and unload production materials with all safety devices installed and enabled. He or she must work only in safety conditions and is allowed to carry out routine maintenance operations.


MAINTENANCE TECHNICIAN/INSTALLATION TECHNICIAN
Specialist prepared and trained in a technical field (mechanical and electrical) and assigned by the manufacturer to work on the machine to perform machine installation, adjustments, repair breakdowns or carry out maintenance.

2 PROPERTIES

2.1 Description of the machine

The automatic dispenser is a device for automatically dosing (or dispensing) fluid colorants into containers (metal or plastic cans or pails) of the dimensions specified in this manual, pre-filled with base, in order to obtain finished products such as coatings, paints, enamels and inks of the desired color, as selected using the machine management software.

The dispenser is able to recover an interrupted formula, when used with firmware and dispensing programs that support this function.

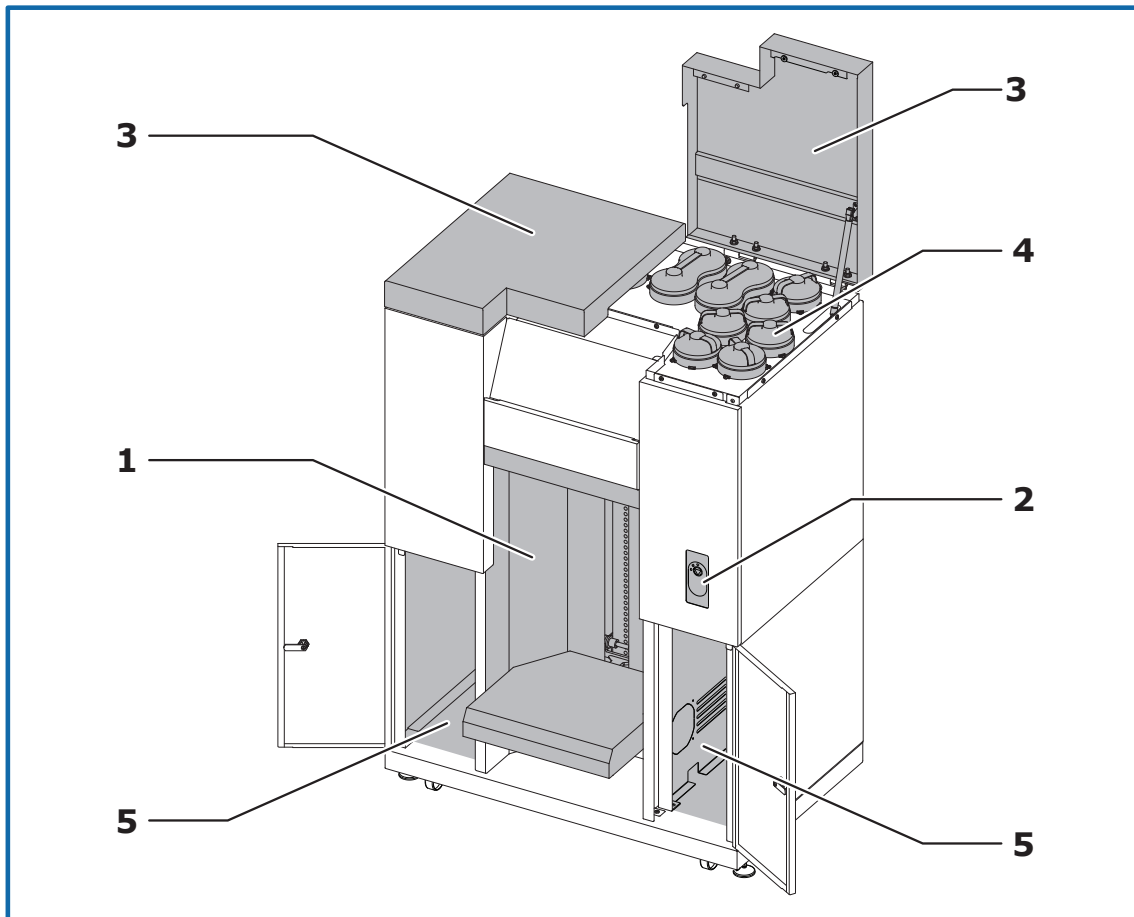

The machine is available in the [S] version (small) up to 20 circuits, in the [M] version (medium) up to 24 circuits and in the [L] version (large) up to 32 circuits.

The dispenser consists of:

1. Dispensing and service area in which the cans are placed.
2. Control panel.
3. Upper covers.
4. Tank filling zone.
5. Computer storage compartment.

The dispenser is managed by the computer. The manufacturer provides a wide range of software applications for managing all of the machine functions.

If the computer is positioned in an area not easily accessible by the operator, it is possible to request the optional function Easy-On that allows to turn on the computer directly from the machine control panel, using the off-line button (chapter [Off-line button and WHITE lamp](#)).

If the machine is supplied with the option **COROB Connect**, it will be possible to drive it through the use of an Android or Windows device, with its corresponding dispensing software. The connection between the device where the dispensing software is installed and the machine is automatic.


2.2 Description of units

Canisters

The machine canisters can be of different capacities and are suitable for containing the product to be dispensed.


Covers in the upper part of the machine provide access for filling the canisters.

Each tank is closed with a lid.

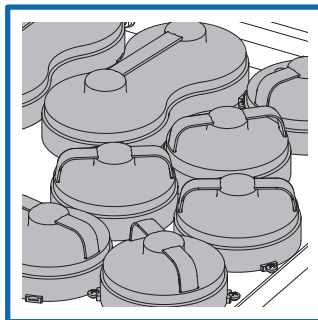

Nozzles centre

The ends of the dispensing pipes coming from the canisters converge and are fixed to the nozzle center, from which the tinting product to fill the can is dispensed.

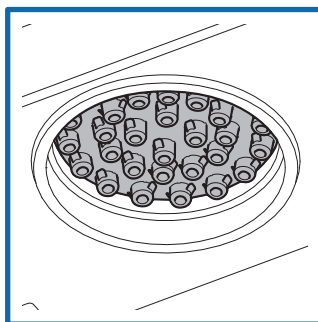


Shelf

The can shelf allows for the correct positioning of the can under the dispensing nozzle.

Lift manual shelf - The shelf is fixed to the machine and can be raised or lowered by the operator. The shelf is provided with a locking handle that must be pulled to release the shelf and allow it to be moved to the desired height.


Semiautomatic shelf - The shelf is commanded by the operator with the activation buttons (two-handed control); the shelf stops when the can is detected by the photocell.

Automatic shelf - The shelf is managed by the computer that controls its movement and checks that the can placed on it is actually the one selected for dispensing. A photocell checks for the presence of the can and that the shelf is correctly positioned.

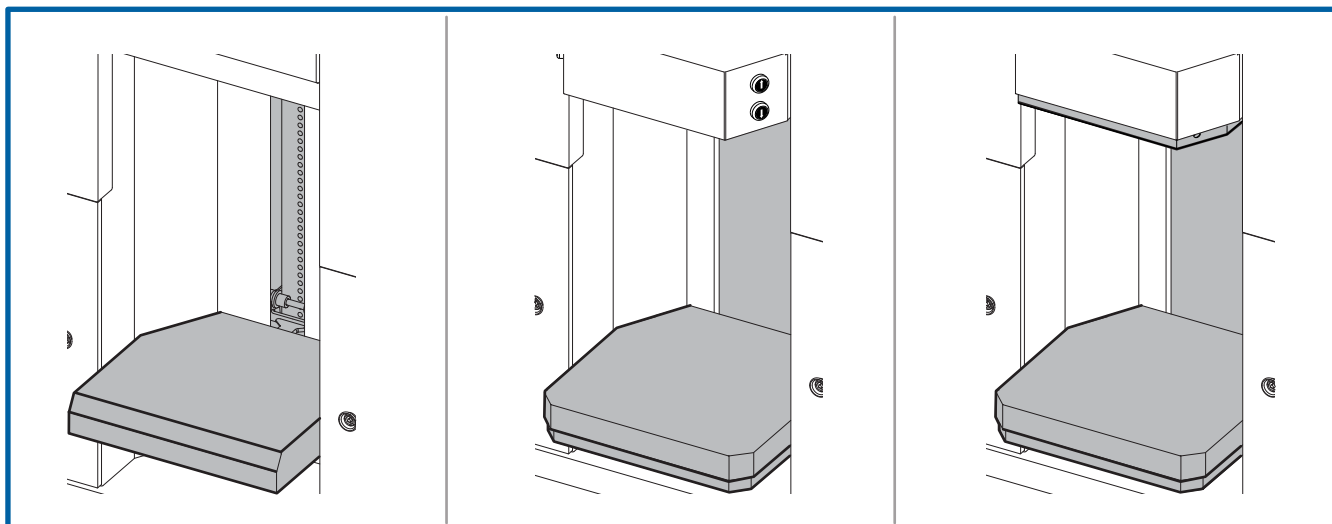


Can centering device

As an option, a sheet metal plate with centering rings can be requested, useful for positioning pre-punched cans right under the dispensing nozzle.

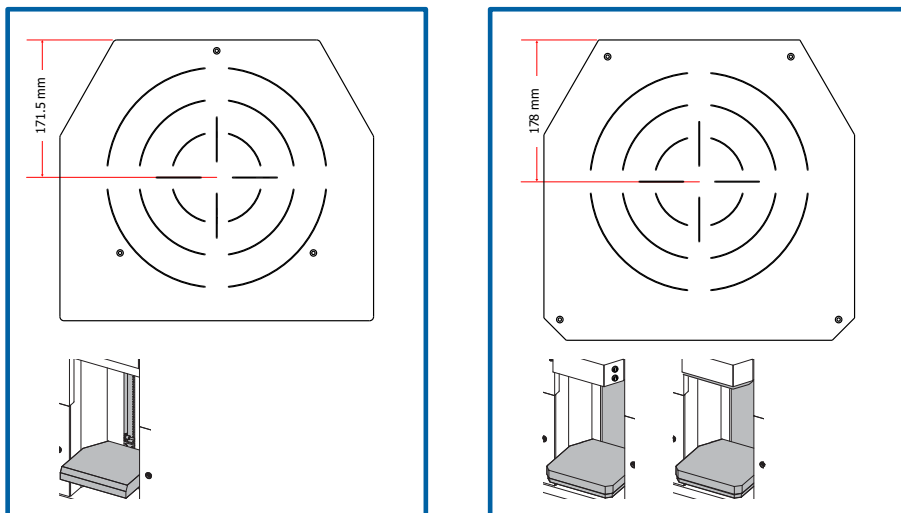

Bung Hole Locator (B.H.L.)


This is a system that emits laser beams that allow the positioning of pre-punched cans, so that the hole is in line with the center of the dispensing nozzles.

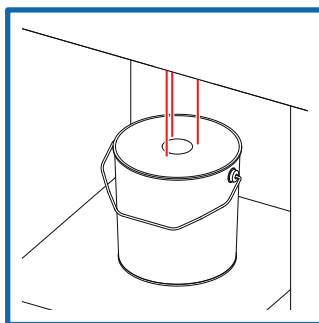

AUTOCAP

To prevent colorants from drying out in the nozzle center, the machine is equipped with a humidifier cap or a nozzle cleaning device.

The **Autocap** is an automatic cap which ensures that the nozzles are hermetically sealed. It is managed by the software, which opens it automatically before dispensing and closes it immediately afterwards. It contains a humidifying sponge.

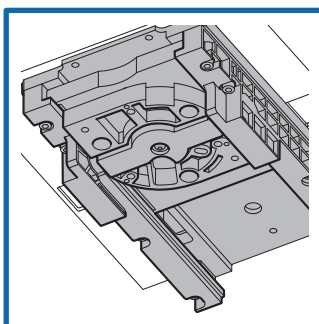


Puncher

The puncher is a device that perforates the can lid.

With *semiautomatic puncher*, punching is carried out by the operator by pushing contemporaneously the semiautomatic shelf activation buttons (two-handed control).

The shelf upward movement pushes the can resting on it against the puncher, and with a downward movement brings it to the correct position for dispensing.

With the puncher, a manual plugger is also supplied, which allows you to insert a plastic plug in the hole made.

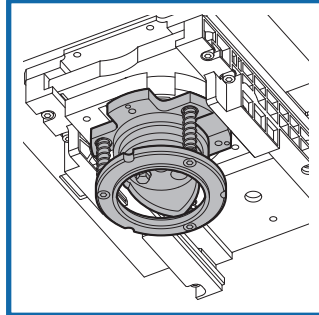


No-Dry-Nozzle Humidifier




The humidifier for water-based colorants guarantees the nozzles are constantly humidified. The air, humidified by the water contained in the bottle, is transferred to the nozzles area. Based on the humidity level detected, the system activates or shuts off whenever needed.




The humidifier for solvent-based colorants humidifies the nozzles when the cap is closed. The solvent, contained in a small tank inside the cap, keeps the nozzles area constantly saturated.

The two systems can be present individually or together according to the tinting system used on the machine.

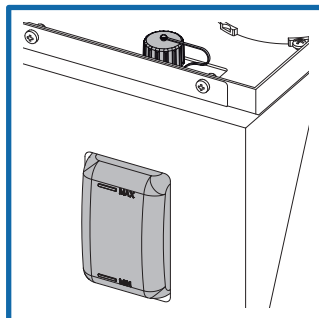

   2.3 Usable cans

Shelf	Manual	Automatic
	AUTOCAP 	AUTOCAP 
	550 mm [21.7"]	430 mm [16.9"]
	60 mm [2.4"]	100 mm [3.9"]
	 390 mm [15.4"]  340 mm [13.4"]  390 mm [15.4"]	
	110 mm [4.3"]	

   Shelf	Semiautomatic	
	AUTOCAP 	AUTOCAP + PUNCHER 
	430 mm [16.9"]	400 mm [15.7"]
	100 mm [3.9"]	
	 390 mm [15.4"]  340 mm [13.4"]  390 mm [15.4"]	
	110 mm [4.3"]	

Due to the high fill level of 0.5 and 1-liter cans (1-Pint and 1-Quart cans), COROB advises not to perforate them.

2.4 Intended use and misuse

Intended use and reasonably foreseeable misuse

The machine is intended for professional use to dispense colorants in small, medium and large point of sales or professional paint stores.

The machine must be used only with cans within the limits set forth in chapter [Usable cans](#), with the colorants specified in the table of chapter [Technical data](#) and according to the procedures described in this manual.

Any use of the machine other than that stated, which cannot be implied or deduced from this manual, is to be considered improper and unintended therefore it voids any manufacturer's liability arising from non-compliance with these requirements.

2.5 Identifying information

The machine has an identification plate (chapter [Position of labels](#)) indicating:

1. Manufacturer's name.
2. Marking.
3. Machine model.
4. Month and year of manufacture.
5. Serial number.
6. Electrical specifications.



ATTENTION

Do not remove or tamper with the identification plate in any way.

3 SAFETY

3.1 Safety warnings and unauthorized use



SAFETY INSTRUCTIONS

COMPULSORY

- **Read the user's manual carefully before carrying out any operation on the machine.**
- The machine must be used only for its intended purpose.
- Pay close attention to the signs on the machine.
- When prescribed, wear personal protective equipment.
- Only qualified and appropriately trained personnel (MAINTENANCE TECHNICIAN) are authorized to access the machine parts protected by panels for extraordinary maintenance and repair interventions.
- Any routine maintenance intervention performed by the operator must be carried out with the machine off and the power supply cable disconnected from the mains socket outlet.
- The machine must be used by **a single operator**. Unauthorized people who could reach or touch machine parts during operation must not be admitted in the nearby area.
- The workplace for the operator who must use the machine is located at the front.
- The machine must be used by an operator who has attained the age of majority and is in suitable psychophysical conditions defined by an occupational physician.
- The substances that may be used on the machine -- such as colorants, paints, solvents, lubricants and cleansers -- may be hazardous to your health; handle, store and dispose of these substances in keeping with current regulations and the instructions provided with the product.



SAFETY INSTRUCTIONS

PROHIBITED

- The machine must not be used with cans exceeding the limits set forth in chapter [Usable cans](#) and with colorants other than those specified in the technical data table.
- **THE MACHINE IS NOT EXPLOSION PROOF. DO NOT USE IT IN CLASSIFIED ZONES (ENVIRONMENTS AT RISK OF EXPLOSION).**
- **Do not pour highly flammable liquids in the machine. In case of use of colorants containing volatile solvents, follow specific indications of chapter [Emergency situations](#).**
- Do not smoke near the machine.
- Avoid naked flames or material that may create sparks and cause a fire.
- The machine must not be employed for food use.
- The OPERATOR must not carry out operations reserved to the MAINTENANCE TECHNICIAN or the INSTALLATION TECHNICIAN. The manufacturer CANNOT BE HELD RESPONSIBLE for damages deriving from the non-observance of this prohibition.
- It is strictly forbidden to use the machine without protections or with any safety devices present on the machine disabled, broken down, or removed. The panels must be kept closed at all times.
- Do not stare the light source of the Laser Bung Hole Locator (Class II laser product).
- If the machine catches fire, **never use water**. Use only dry powder or carbon dioxide fire extinguishers, and strictly follow the instructions and warnings indicated by the manufacturer and listed on the extinguisher.



SAFETY INSTRUCTIONS

ELECTRICAL HAZARD

- The user must connect the machine to a TN or TT power supply system, equipped with an RCD (Residual Current Devices) protection device that automatically intervenes in the event of a fault.
- **ALWAYS PLUG THE MACHINE INTO A SOCKET THAT ENSURES PROPER GROUNDING.** The line must be protected from overloads, short-circuits and direct contacts according to current accident prevention regulations. Incorrect grounding may lead to the risk of electrical shock.
- The machine must not be powered by a power source having specifications other than those listed on the identification plate.
- When the power returns after a blackout, the machine restarts automatically so that it can execute the automatic processes to prevent the products from drying.
- To prevent any risk of electrical shock or injuries, use the machine indoors only. It is prohibited to use the machine outdoors where it could be subjected to rain or high humidity.
- Always unplug the power supply cable from the socket outlet before carrying out any maintenance operations.
- The machine is isolated from the power supply line when the power cable is disconnected; it must therefore be installed near an easily accessible mains socket outlet.
- Do not use extension cords to power the machine.
- Do not use multisockets to connect other equipment to the same socket that powers the machine. Make sure that the power supply of the equipment connected to the machine via serial port, like the computer, is equipotential (which has a single access point to earth) because potential differences cause interferences and/or damage to the serial ports.
- Periodically check the condition of the power supply cable; if it is damaged, replace it with a new cable supplied by the manufacturer.

3.2 Warnings on the use of products



HAZARD

The machine is suitable for use with tinting products in general. Scrupulously follow the instructions for use given on the colorant can and carefully read the **MATERIAL SAFETY DATA SHEETS (MSDS)** that the dealer or manufacturer of the product is required to provide.

Observe all of the safety instructions provided. When compulsory, wear the specified personal protective equipment.

Below are some of the most common warnings and safety precautions provided by tinting products manufacturers.

1. Harmful if swallowed.
2. Avoid eye and skin contact. In case of eye and skin contact, rinse with plenty of water.
3. Keep out of the reach of children.
4. When compulsory, wear the specified personal protective equipment.
5. In case of accidental product leaks or spills, thoroughly ventilate the area and proceed as indicated in this manual and in the instructions provided with the product itself.
6. Do not dispose of colorant in the sewage system. Follow local regulations when disposing of waste.

3.3 Residual risk

Risk
 Risk of electrocution - Risk of electrical shock if you power the machine from a socket not equipped with ground connection.
Preventive measure & P.P.E.
Power the machine through a grounded socket outlet.
Re. in the manual
ch. Starting up
Risk
 Risk of electrocution - Risk of electrical shock if you access machine parts protected by panels without first cutting off electrical power.
Preventive measure & P.P.E.
<p>The operator is not authorised to access the machine parts protected by panels.</p> <p>For the maintenance technician: before performing any maintenance intervention, shut off the machine and disconnect the power supply cable from the mains socket outlet.</p>
Risk
 Dorsal/lumbar injuries - Handling heavy loads when moving the machine and loading cans on the shelf may cause injuries.
Preventive measure & P.P.E.
<p>Do not exceed the weight limits stated by the current regulations in force.</p> <p>If necessary, use appropriate lifting equipment.</p>
 MECHANICAL RISK PROTECTION GLOVES (TEAR, WEAR)
Re. in the manual
ch. Shipping and handling - Using the dispenser
Risk
 Risk of falling objects / crushing - When positioning a can on the shelf, there is a risk it may fall onto the operator.
Preventive measure & P.P.E.
Position the can so that the whole base rests on the shelf surface.

Re. in the manual
ch. Using the dispenser
Risk
 Risk of crushing / entanglement - The automatic movement of the humidifier cap and of the shelf may cause injuries.
Preventive measure & P.P.E.
<p>The machine must be used by a single operator.</p> <p>Keep hands away from the dispensing area at all times while the machine is operating.</p>
 MECHANICAL RISK PROTECTION GLOVES (TEAR, WEAR)
Re. in the manual
ch. Using the dispenser

Risk	
	Risk of crushing / entanglement - During colorant refilling operations, the stirrer inside the canister may automatically start rotating.
Preventive measure & P.P.E.	
Before performing any intervention, press the off-line button.	
	MECHANICAL RISK PROTECTION GLOVES (TEAR, WEAR)
Re. in the manual	
ch. Refilling the canisters	
Risk	
	Risk of cuts - During the punching operations or maintenance operations on the punching device, the contact with the puncher blade may cause injuries.
Preventive measure & P.P.E.	
The machine must be used by a single operator. Keep hands away from the dispensing area at all times while the machine is operating. Use the special tool to remove the puncher.	
	MECHANICAL RISK PROTECTION GLOVES (TEAR, WEAR)
Re. in the manual	
ch. Using the dispenser - Routine maintenance	
Risk	
	Risk of slipping / falling - Misuse of the shelf may cause injuries.
Preventive measure & P.P.E.	
Do not climb onto the shelf and/or sit on it. Do not use the shelf as a ladder.	
 	MECHANICAL RISK PROTECTION GLOVES (TEAR, WEAR)
Re. in the manual	
ch. Using the dispenser	
Risk	
	Risk of explosion
Preventive measure & P.P.E.	
Do not use the machine in classified areas (areas at risk for explosion). Avoid naked flames or material that may create sparks and cause a fire. Respect the conditions for the intended use of the machine and the recommendations indicated in chapter Intended use and misuse . Respect the environment working conditions indicated in chapter Requirements of the installation site .	
Re. in the manual	
ch. Intended use and misuse ch. Requirements of the installation site	

Risk
 Risk of exposure to laser beam - The Bung Hole Locator (B.H.L.) uses red laser light sources which can be potentially dangerous for the eyes.
Preventive measure & P.P.E.
Avoid staring at the light source.
Re. in the manual
ch. Using the dispenser
Risk
 Risk of poisoning and sensitization - Fumes generated by the colorants used may cause poisoning and/or sensitization during canister refilling operations, machine cleaning and disposal.
Preventive measure & P.P.E.
Read the warnings in the Material Safety Data Sheets of the colorants used. The MSDS must be provided by the colorant manufacturer. Keep the room suitably ventilated.
Personal Protective Equipment as specified in MSDS.
Re. in the manual
ch. Warnings on the use of products - Shipping and handling - Using the dispenser - Routine maintenance


3.4 Position of labels

1. Identification plate (chapter [Identifying information](#))
2. Label “General warnings”
3. Label “Risk of crushing”
4. Label “Risk of cuts”
5. Label “Laser danger”
6. Label “Electrical danger”




ATTENTION

Do not remove or make illegible the safety or instruction labels. Replace any label which has become illegible or is missing, by requesting it to the manufacturer.

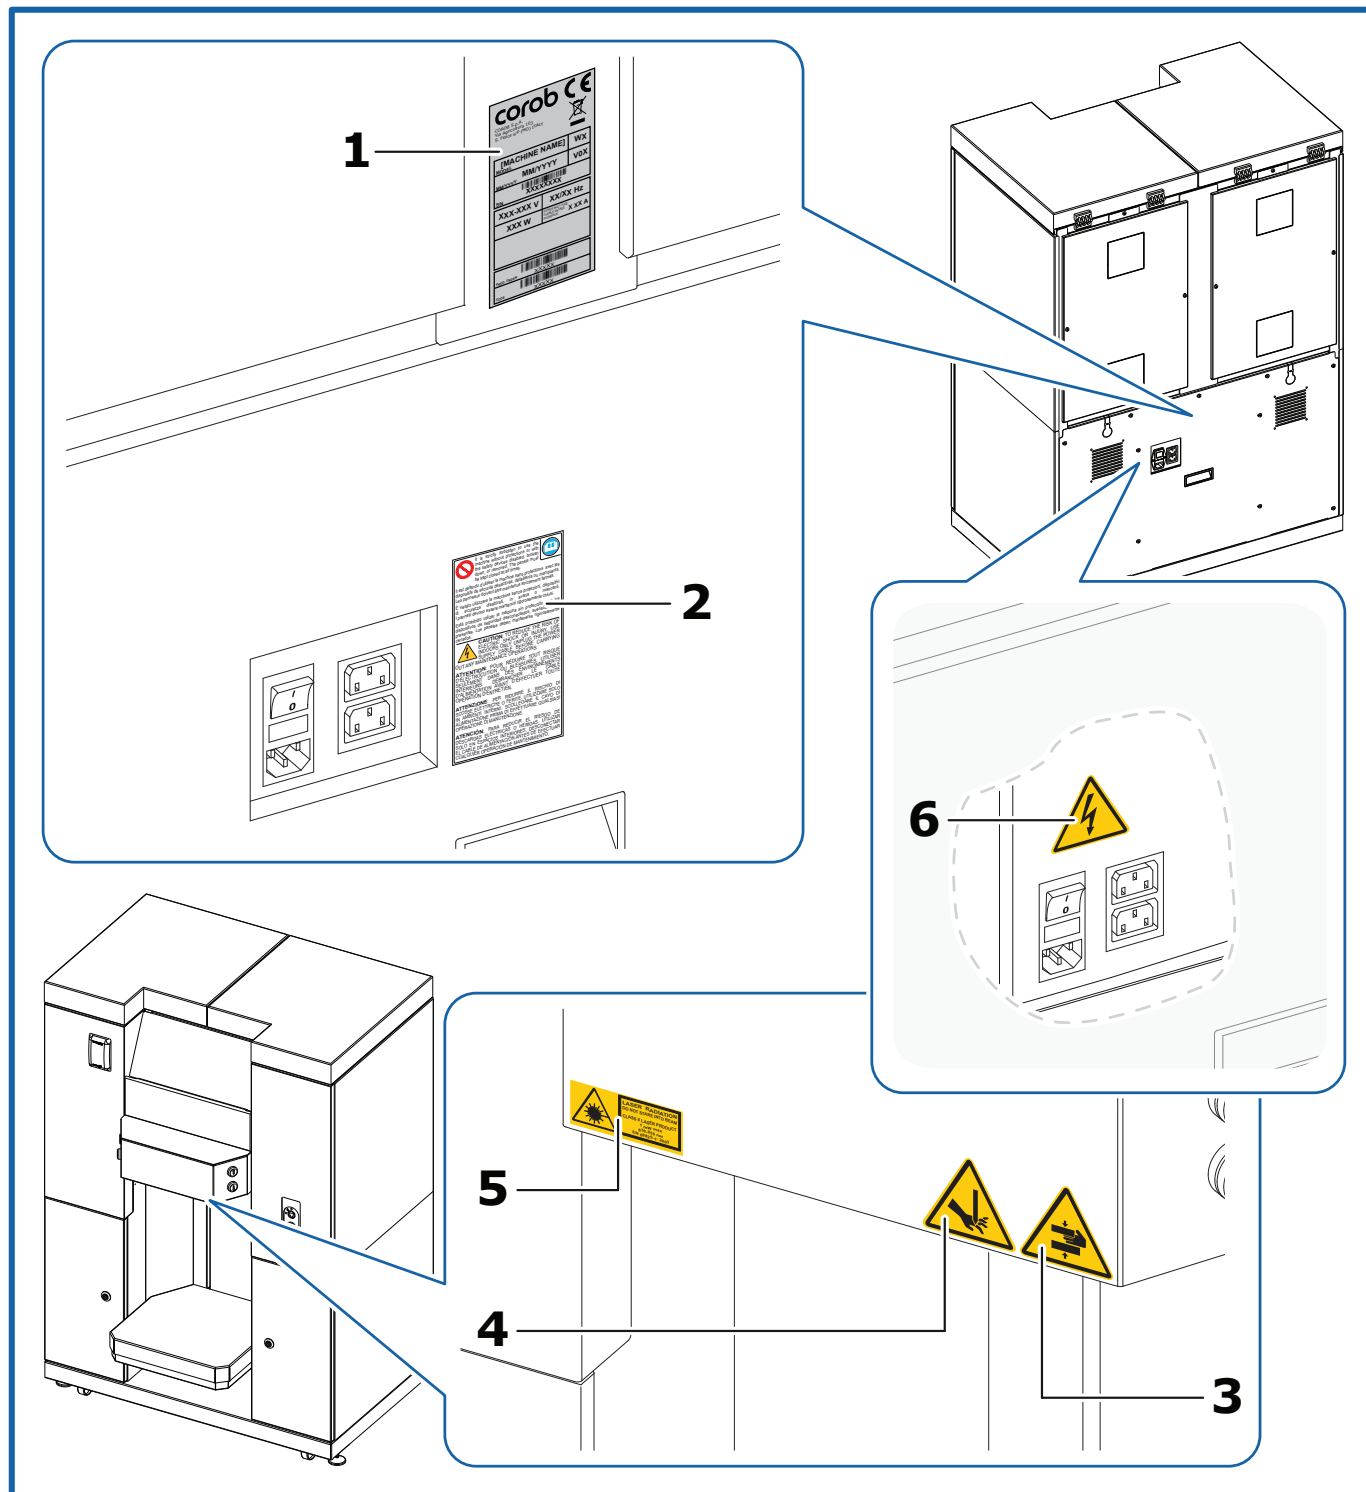

3.5 Safety devices

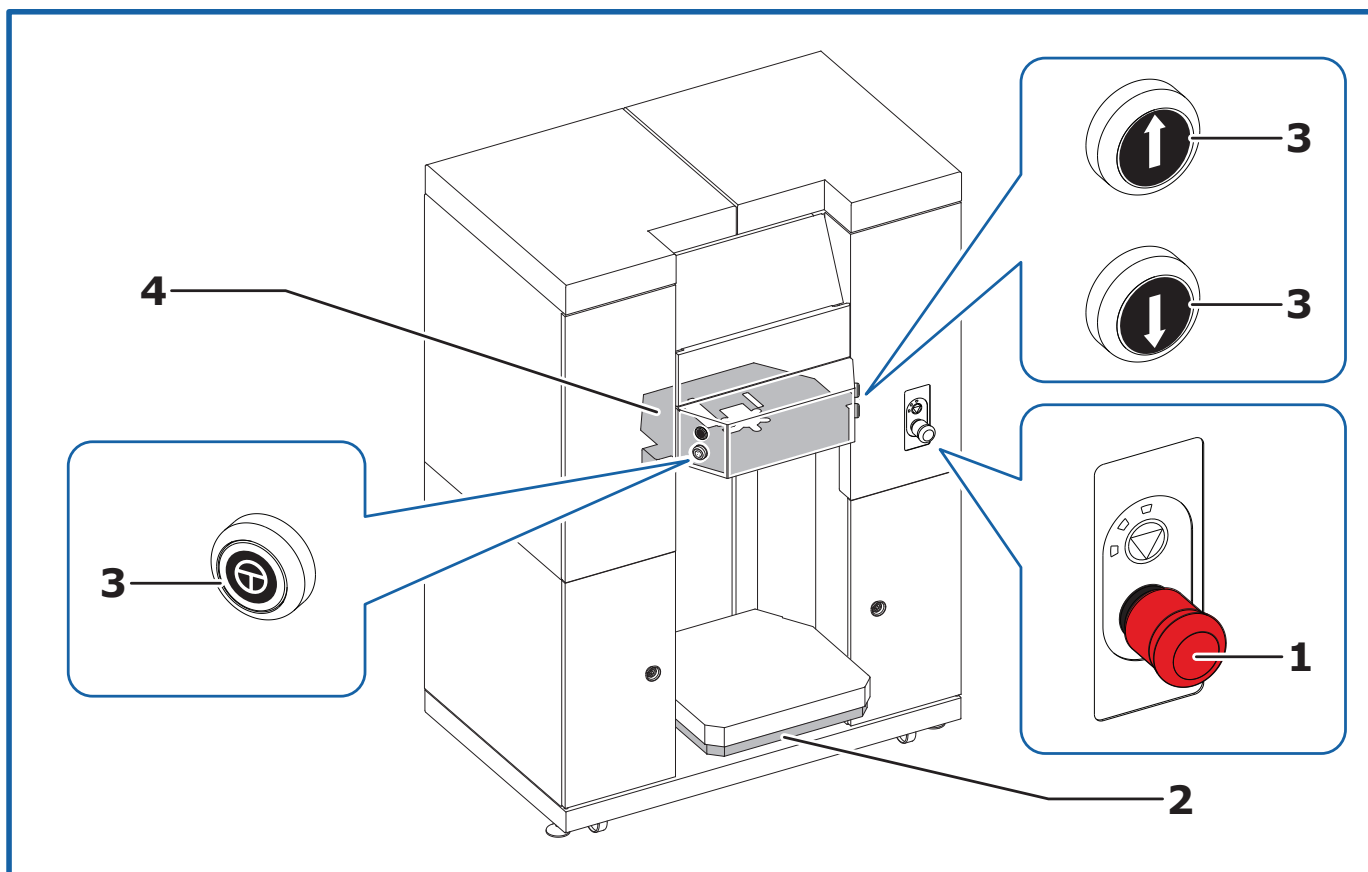

The machine is equipped with the following safety devices:

with shelf:	semiauto	auto
Emergency button	•	•
Shelf lower safety plate	•	•
Buttons to enable and move the shelf	•	
Shelf upper safety plate		•



HAZARD

In the event of a breakdown of the safety devices, it is forbidden to use components not provided by the manufacturer. If necessary, contact the manufacturer's authorized technical service only.

3.6 Emergency stop

In case of a breakdown or dangerous conditions, press the emergency stop button (chapter [Emergency stop](#)). Pressing the button stops all hazardous machine movements and disconnects all power circuits. The red lamp on the control panel turns on (chapter [Buttons and lamps](#)).



HAZARD

The emergency button does not completely cut off power to the entire machine. The power supply box inside the machine remains powered.

To isolate the machine completely, it is necessary to switch it off and unplug the power cable from the socket.



ATTENTION

The emergency button does not turn the computer off, since it requires special shut-down procedures (the auxiliary sockets remain powered).

After eliminating the cause of the malfunction or solved the dangerous condition, reset the button by pulling it.



WARNING

DO NOT ROTATE THE BUTTON: SIMPLY PULL IT.



WARNING

The use of the emergency stop button is to be considered as an emergency action exclusively, and not as a standard stop mode, in order to prevent machine deterioration.

3.6.1 Checking the safety devices

At least twice a year, you have to check the efficiency of the safety devices of the machine and the correct operation of the control and signaling devices (chapter [Starting up](#)).

In the event of unexpected results or malfunctions, contact the manufacturer's technical service immediately.

Device and action	Expected outcome
Emergency button With the machine on, and with colorant stirring process in progress, press the emergency stop button.	All mobile parts of the machine must stop.
Shelf lower safety plate. With the machine on, move the shelf down and place an object (e.g. a paint can) between the shelf lower safety plate and the floor.	As soon as the safety plate is touched, the shelf movement must stop.
① ① Buttons to enable and move the electrical shelf / to command punching. Two-handed control. With the machine on, press and hold down the two ① buttons at the same time to raise the shelf, and then the two ① buttons to lower the shelf.	The shelf must only move if both buttons are activated at the same time. By releasing one of the two buttons, the movement must stop. ① : the shelf lifts up to the reading area of the photocell or to the fully up position. ① : the shelf lowers down to the lowest position.
Shelf upper safety plate. With the machine on, move the shelf up and place an object between the safety plate under the dispensing head and the lid of the paint can.	As soon as the safety plate is touched, the shelf movement must stop.

3.7 Emergency situations

In case of emergency situations, such as accidents, breakdowns or malfunctions:

1. Turn off the machine and unplug the power cable from the power outlet (chapter [Shut-down](#)).
2. Contact the manufacturer's authorized technical service.



HAZARD

Following emergency situations, the operator is prohibited from carrying out repairs to the machine. If necessary, contact the manufacturer's authorized technical service only.

3.8 Requirements of the installation site

Environment requirements for the site where the machine is to be used:

- Clean and dust-free.
- With level and stable floor.
- Fitted with a dedicated grounded power supply socket.
- Equipped with sufficient lighting to ensure good visibility from every point of the machine (light value not lower than 500 Lux).
- Ventilated to prevent the concentration of harmful fumes: for example, for a 3 m high, 4x4 m room (total volume of 48 m³) an air change rate [ac/h] of 3 required.
- Temperature between 10 °C (50 °F) and 40 °C (104 °F) and relative humidity between 5% and 85%, without condensation.



WARNING

The environment working conditions are strictly related to the type of products used (ask for information from the paint manufacturer). The requirements indicated above are valid for the machine only.

Do not place the machine near heat sources or in direct sunlight. Also humidity sources should be avoided. The machine must be used indoors only.

Environment conditions outside the values indicated (chapter [Technical data](#)) may cause serious damage to the machine, especially the electronic equipment.



HAZARD

When using **products containing volatile solvents**, the room in which the machine is installed must be spacious and with good ventilation: for example, for a 3 m high, 4x4 m room (total volume of 48 m³) an air change rate [ac/h] of 3 required. No type of parts must be leant against or stocked close to the machine.

Avoid naked flames or material that may create sparks and cause a fire.

Do not smoke near the machine.

4 SHIPPING AND HANDLING

4.1 General warnings

Personnel in charge of these operations must wear the following personal protective equipment:



MECHANICAL RISK PROTECTION GLOVES (TEAR, WEAR)



HAZARD

To avoid personal injuries and property damage, use the utmost care and caution when handling the machine, and carefully follow the instructions given in this chapter.




WARNING

The packing must be handled only by qualified personnel using appropriate handling equipment. Do not stack items on the packing.



ATTENTION

If the machine is installed near a wall, keep it at least 10 cm (4") away to prevent the cables from being crushed.

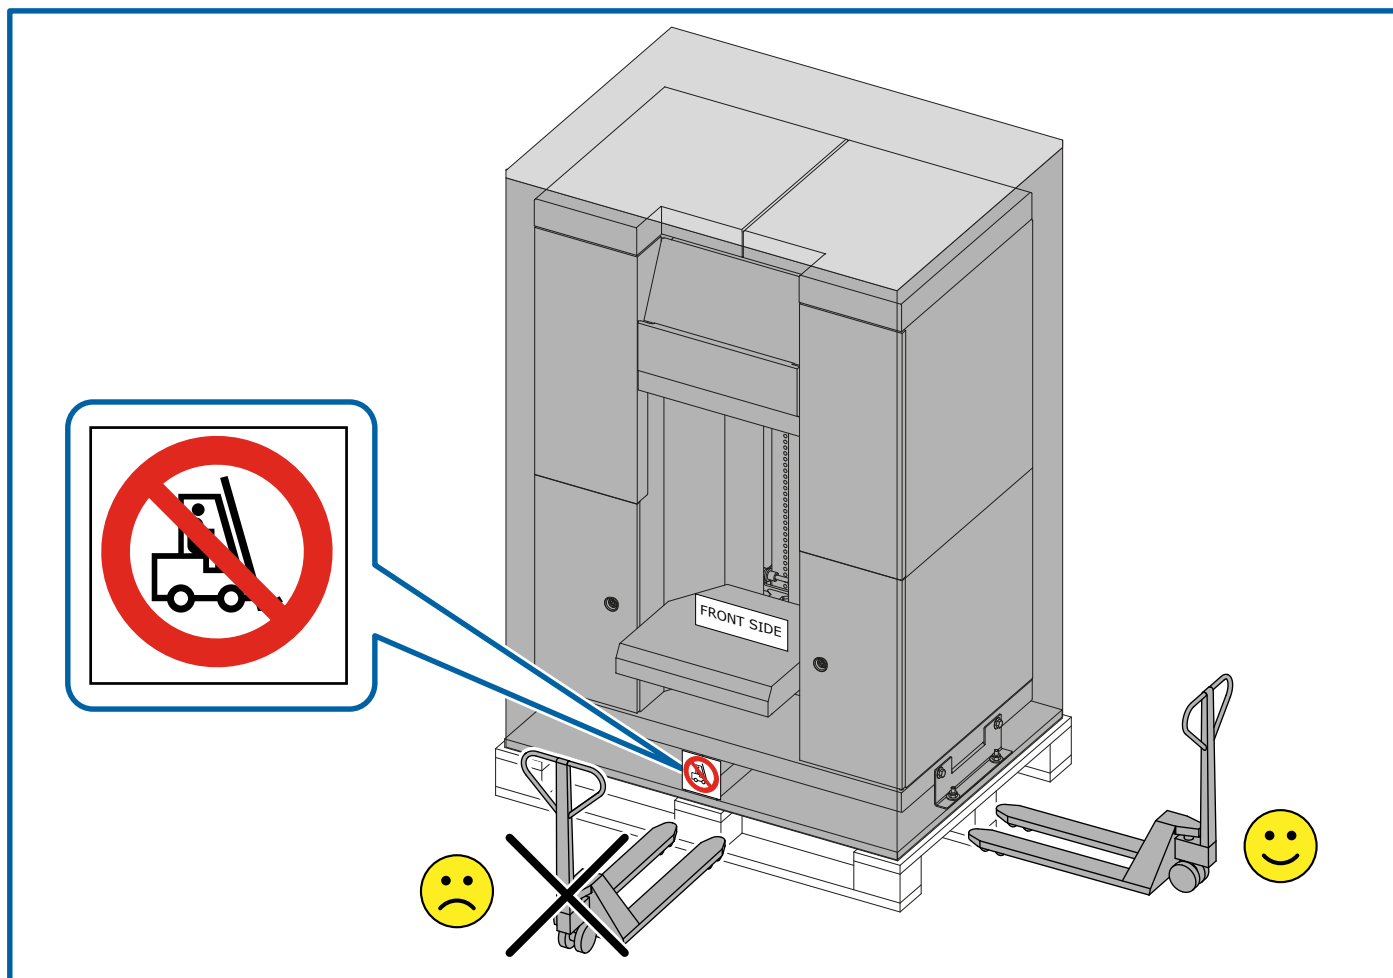

4.2 Unpacking and placement

		8 mm [0.31"] Package
		2 x 10 mm [0.39"] To remove the fixing brackets
		1 x 13 mm [0.51"] To remove the fixing brackets
		1 x 17 mm [0.67"] To adjust machine feet
		1 x 8 mm [0.31"] To adjust machine feet



HAZARD

The following procedure must be carried out by at least 2 people.

Store the packing material for future use, or dispose of it according to current regulations. In any case, we recommend that you keep it for the entire duration of the machine warranty.

Make sure the packing has not suffered any damage or tampering during shipping; if so, contact the authorized technical service or your dealer.


1. Cut the straps and remove the cover **A**.
2. Remove cardboard box.
3. Remove machine wrapping. Take out any accessories and/or material supplied with the machine.



HAZARD

Should the machine appear damaged during shipping, do not attempt to start it and contact the authorized technical service or dealer.


To move the machine without external cardboard, but still fixed to the pallet, use suitable lifting equipment. Fork the pallet in such a way as to distribute the weight equally on the forks and thus prevent the machine from tipping over.

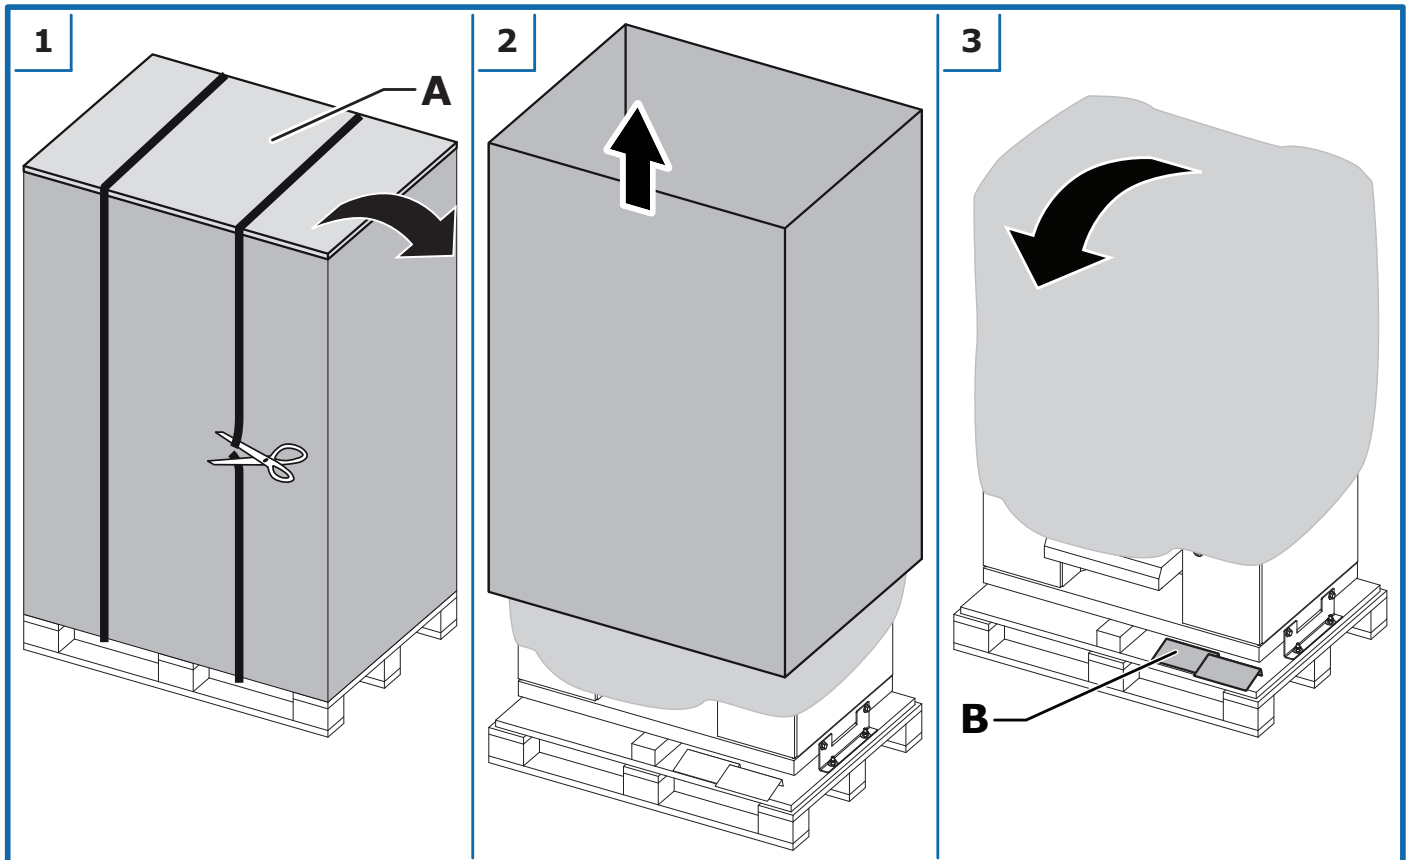


4. Remove the brackets **C** that fix the machine to the base of the pallet.
5. Fix cover **A** to the pallet and place the two sliding plates **B** previously removed from inside the packing. Grasp then the machine on the sides, then slide it to the ground along the cover.

6. Lower the feet to support and level the machine properly, and make sure that the wheels are not resting.

To repack the machine, follow the unpacking instructions in reverse order. We recommend reusing the original packing any time the machine must be moved or shipped.

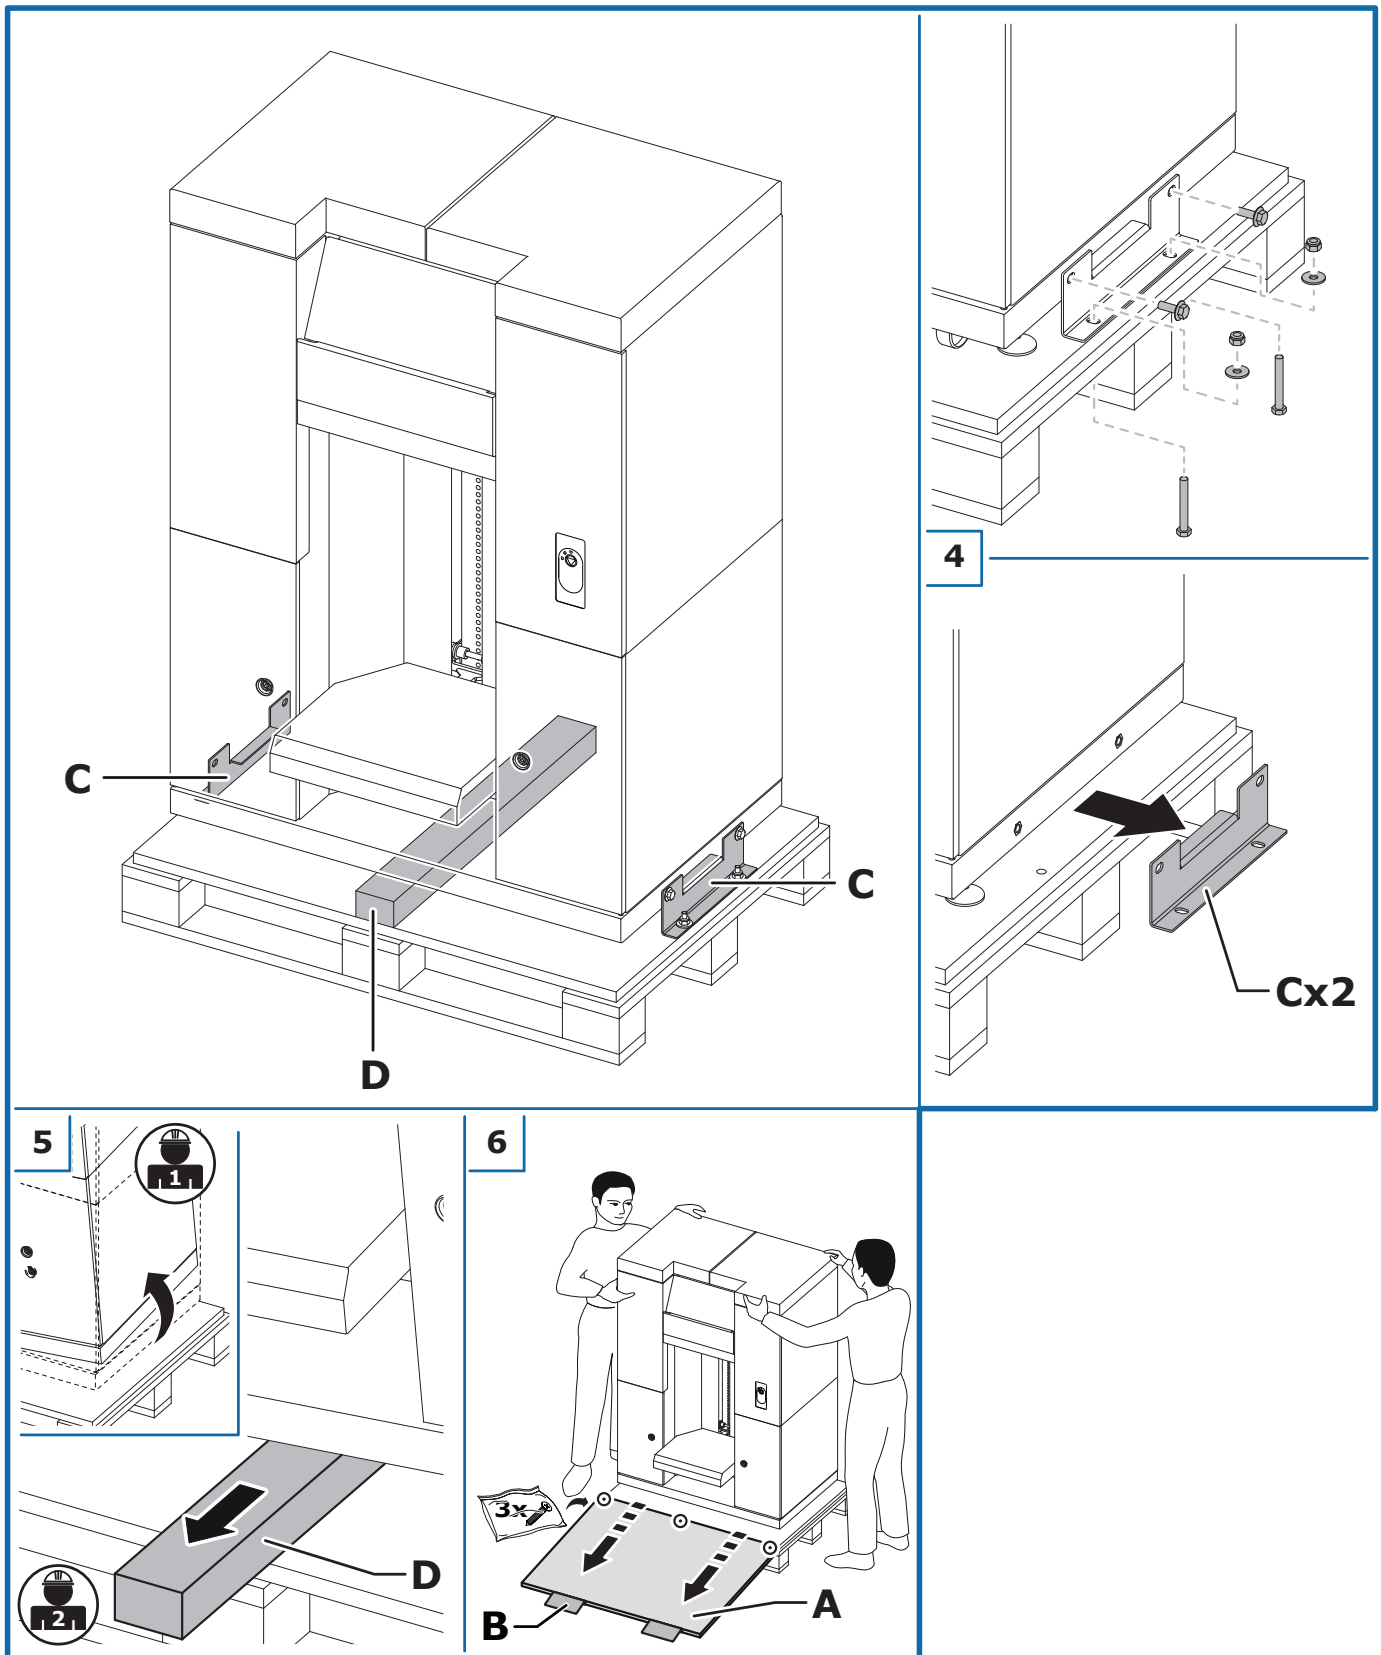

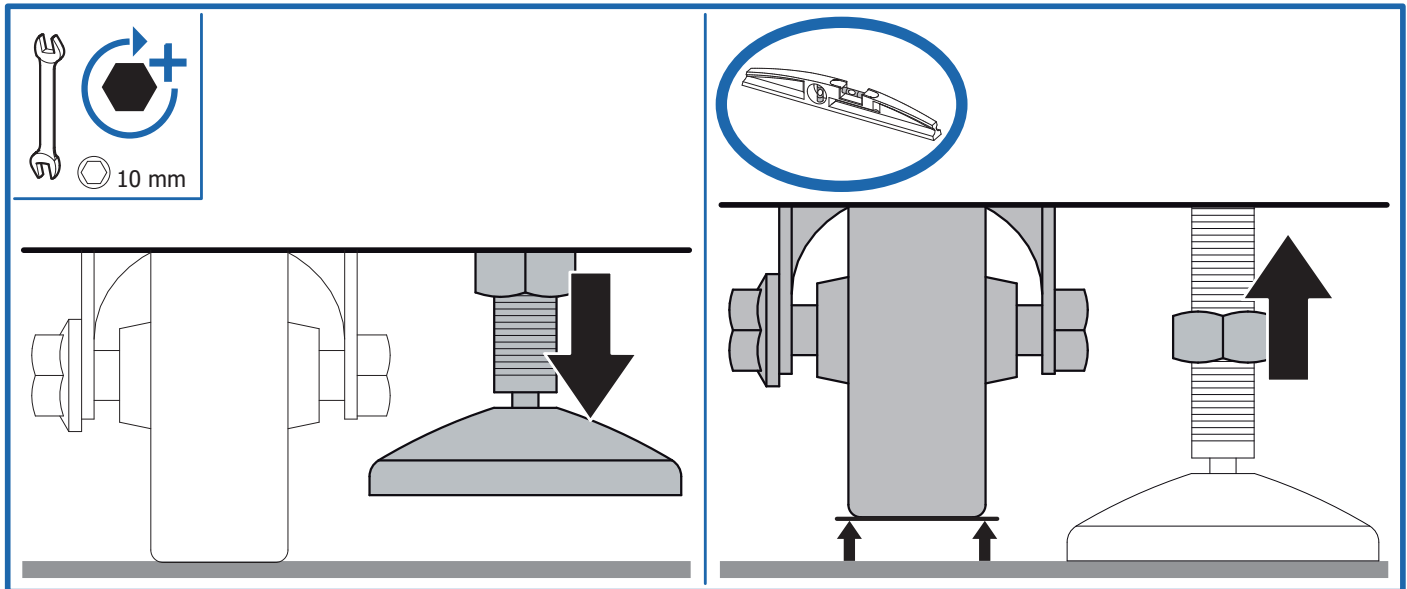

4.2.1 Standard material supplied

After unpacking the machine, make sure the following items are present:

1. Power supply cable.
2. Computer power cables.
3. USB cable.
4. Panel key.
5. User's manual and product documentation.
6. Spare parts.

With puncher only:

7. T-wrench.
8. Tool for punch removal.
9. Manual plugger.

Depending on the options specified on the purchase order, you may also find:

- Management software.
- Any accessories to be installed on the machine.

Make sure that all of the above items are included in the packing; if not, contact the manufacturer.

4.3 Storage

If stored, the machine must be kept in a safe and protected environment, with a suitable temperature and humidity degree and protected from dust.

4.4 Disposal and recycling

This equipment must not be disposed of with unsorted municipal waste. Carry out a separate collection.

Pursuant to the WEEE Directive, collection, treatment, recovery and environmentally sound disposal of Waste Electrical and Electronic Equipment (WEEE) shall be carried out in compliance with the national measures of each EU-Member State implementing the Directive.

Differentiate the parts making up the machine based on the various materials they are made of (plastic, iron, etc.).

For the colorants remaining in the canisters, for the machine components most soiled with product and if any products have been used on the machine that require special disposal procedures, follow local regulations when disposing of waste.



5 STARTING UP

5.1 General warnings

Personnel in charge of these operations must wear the following personal protective equipment.



MECHANICAL RISK PROTECTION GLOVES (TEAR, WEAR)



HAZARD

The user must connect the machine to a TN or TT power supply system, equipped with an RCD (Residual Current Devices) protection device that automatically intervenes in the event of a fault.

THIS EQUIPMENT MUST BE GROUNDED. Check the grounding of the power supply system before connecting the machine.

Do not use extension cords to power the machine.

The computer and any other devices connected to the machine via a serial line or connected to the computer itself must be powered by an equipotential power supply network or, if present, by the auxiliary sockets (optional).

Do not connect devices other than computer, label printer or calibration scale to the auxiliary sockets.

Do not use multisockets to connect other equipment to the same socket that powers the machine.



WARNING

Do not attempt to power the machine from a source having specifications other than those listed on the identification plate.

The machine is isolated from the power supply line when the power plug is disconnected; it must therefore be installed near an easily accessible mains socket outlet.

The power supply of the equipment connected to the machine via serial port, like the computer, must be equipotential (which has a single access point to earth) because potential differences cause interferences and/or damage to the serial ports.

5.2 Management computer


The dispenser is managed by the computer. The manufacturer provides a wide range of software applications for managing all of the machine functions.

If the machine is supplied with the option COROB Connect, it will be possible to drive it through the use of an Android or Windows device, with its corresponding dispensing software.

Only a specialist maintenance technician may install the machine, including connecting the computer, installing the management software and configuring the system.

5.3 Control devices and connections

1. **Machine main switch**
2. **Fuse compartment** - The value of fuses is shown in the technical specifications table (chapter [Technical data](#)).
3. **Main plug**
4. **Auxiliary sockets** (optional) - Power supply to the computer and other equipment (calibration scale or label printer)
5. **Control panel** - With the off-line button and the signal lamps.
6. **Buttons enable and to move the shelf** (two-handed control).

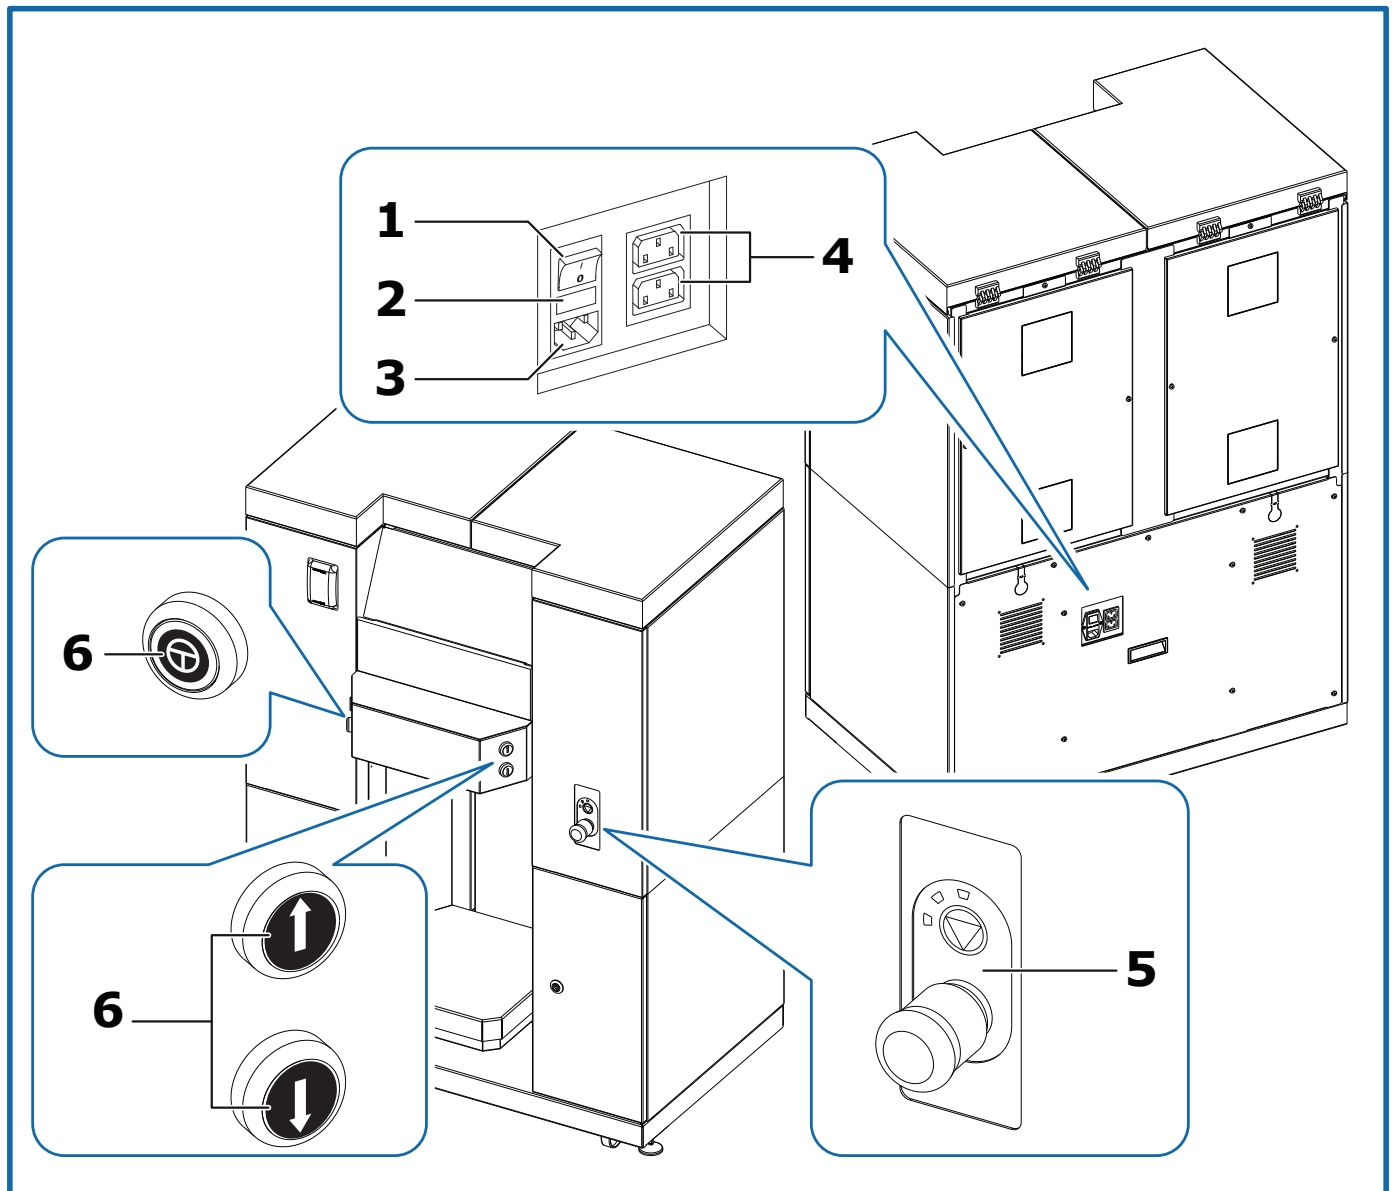

5.4 Buttons and lamps



Button/Lamp	Description																											
<div></div> <div>Off-line button</div>	To interrupt machine functions, without shutting it off. It also enables opening and closing the automatic cap and allow cleaning the nozzle area (chapter Routine maintenance).																											
WHITE lamp	<div>Indicates machine status:</div> <table><tr><td>Lamp</td></tr><tr><td>OFF</td></tr><tr><td>Condition</td></tr><tr><td>OFF</td></tr><tr><td>Meaning</td></tr><tr><td>The machine is OFF.</td></tr><tr><td></td></tr><tr><td>Lamp</td></tr><tr><td>ON</td></tr><tr><td>Condition</td></tr><tr><td>On-line</td></tr><tr><td>Meaning</td></tr><tr><td>The machine is ON and is waiting for communication.</td></tr><tr><td></td></tr><tr><td>Lamp</td></tr><tr><td>Blinking slow</td></tr><tr><td>Condition</td></tr><tr><td>Off-line 1</td></tr><tr><td>Meaning</td></tr><tr><td>Machine functions are interrupted and any command is refused.</td></tr><tr><td></td></tr><tr><td>Lamp</td></tr><tr><td>Blinking fast</td></tr><tr><td>Condition</td></tr><tr><td>Off-line 2</td></tr><tr><td>Meaning</td></tr><tr><td>The cap is open, machine functions are interrupted and any command is refused.</td></tr></table>	Lamp	OFF	Condition	OFF	Meaning	The machine is OFF.		Lamp	ON	Condition	On-line	Meaning	The machine is ON and is waiting for communication.		Lamp	Blinking slow	Condition	Off-line 1	Meaning	Machine functions are interrupted and any command is refused.		Lamp	Blinking fast	Condition	Off-line 2	Meaning	The cap is open, machine functions are interrupted and any command is refused.
Lamp																												
OFF																												
Condition																												
OFF																												
Meaning																												
The machine is OFF.																												
Lamp																												
ON																												
Condition																												
On-line																												
Meaning																												
The machine is ON and is waiting for communication.																												
Lamp																												
Blinking slow																												
Condition																												
Off-line 1																												
Meaning																												
Machine functions are interrupted and any command is refused.																												
Lamp																												
Blinking fast																												
Condition																												
Off-line 2																												
Meaning																												
The cap is open, machine functions are interrupted and any command is refused.																												

GREEN lamp	Indicates a particular machine status, which the operator should pay special attention to, or requiring the operator's intervention.	
	Lamp	
	OFF	
	Meaning	
	The machine is ready for use.	
	Lamp	
	ON	
	Meaning	
	The can is in position and it is possible to proceed with dispensing.	
	Lamp	
	Blinking	
	Meaning	
	The humidifier cap is open.	
		<i>With puncher</i>
	Lamp	
	ON	
	Meaning	
	The machine is ready for punching.	
RED lamp	Indicates and error condition or an emergency stop condition.	
	Lamp	
	OFF	
	Meaning	
	The machine is ready for use.	
	Lamp	
	ON	
	Meaning	
	The emergency button has been pressed.	
	Lamp	
	Blinking	
	Meaning	
	Errors have been detected.	
	This button, when pressed with the safety button, causes the shelf to rise and, when released, to stop immediately. If it is not released, the shelf stops automatically when the can resting on it is detected by the photocell.	
Shelf UP button		
	This button, when pressed with the safety button, causes the shelf to lower and, when released, to stop immediately. If it is not released, the shelf stops automatically when it reaches the bottom down position.	
Shelf DOWN button		
	This button, when pressed with the up or down button, enables the shelf to move respectively up or down and, when released, to stop immediately.	
SAFETY button, to enable shelf movement		

With puncher - When the punching lamp is on, pressing the three buttons simultaneously will cause the shelf to be raised to punch the can lid.

5.5 Off-line button and WHITE lamp

When the off-line button is pressed, all functions of the machine are interrupted; the WHITE lamp blinks to indicate that the machine is switched on but with the functions blocked (condition off-line 1 or off-line 2). In these conditions, any commands are refused.

Press the off-line button...	Initial condition	Final condition	WHITE lamp
...for an instant	On-line	Off-line 1 - machine functions blocked	Blinking slow
	Off-line 1	On-line - machine functions restored	ON
	Off-line 2	Off-line 2	Blinking fast
...for a few seconds	On-line	Off-line 2 - the automatic cap opens, machine functions blocked	Blinking fast
	Off-line 1		
	Off-line 2	On-line - the automatic cap closes, machine functions restored	ON

The machine must be set to off-line 1 condition to perform canister refilling (chapter [Refilling the canisters](#)) and to off-line 2 condition to execute maintenance operations that require the automatic cap to be open (chapter [Routine maintenance](#)).



WARNING

Pressing the off-line button while a formula is being dispensed will cause dispensing to be interrupted.

The interrupted formula recovery function, i.e. the ability to resume dispensing the quantity necessary to complete the formula, is enabled only if the firmware and the dispensing program support this function.

After interrupting the machine functions, it will be possible to carry out canister refilling.

5.6 “Easy-On” computer function (optional)

The “Easy-On” function allows to turn on the computer positioned in an area not easily accessible by the operator, directly from the machine control panel using the off-line button.

To turn on the computer, press and hold down the off-line button for at least 10 seconds.

When the signal lights come on, to indicate that the process is in progress, release the button.

Lamps of the control panel	the three lamps blink simultaneously
-----------------------------------	--------------------------------------

Wait for the process to be concluded, until the computer is turned on.

At the end of the process, the machine is in on-line condition and ready for use.

If the “Easy-On” option is present, an additional USB port is mounted on the machine to connect any device such as calibration scale or usb pendrive.

5.7 Electrical connection and start-up



ATTENTION


If the WHITE lamp does not come on, make sure that the emergency button is not pressed (chapter [Emergency stop](#)). If the computer and monitor do not come on, make sure the power cables have been properly connected to the power sockets, and that the corresponding switches have been turned on.

If, after turning the machine on, the white lamp on the panel is blinking, it means that the machine is in the off-line condition. Restore machine normal on-line condition, by pressing the off-line button.



NOTE

When the software is launched it offers the operator a series of procedure requests that have the purpose to get the machine ready for use. These procedures are strictly related to the type of management software used.

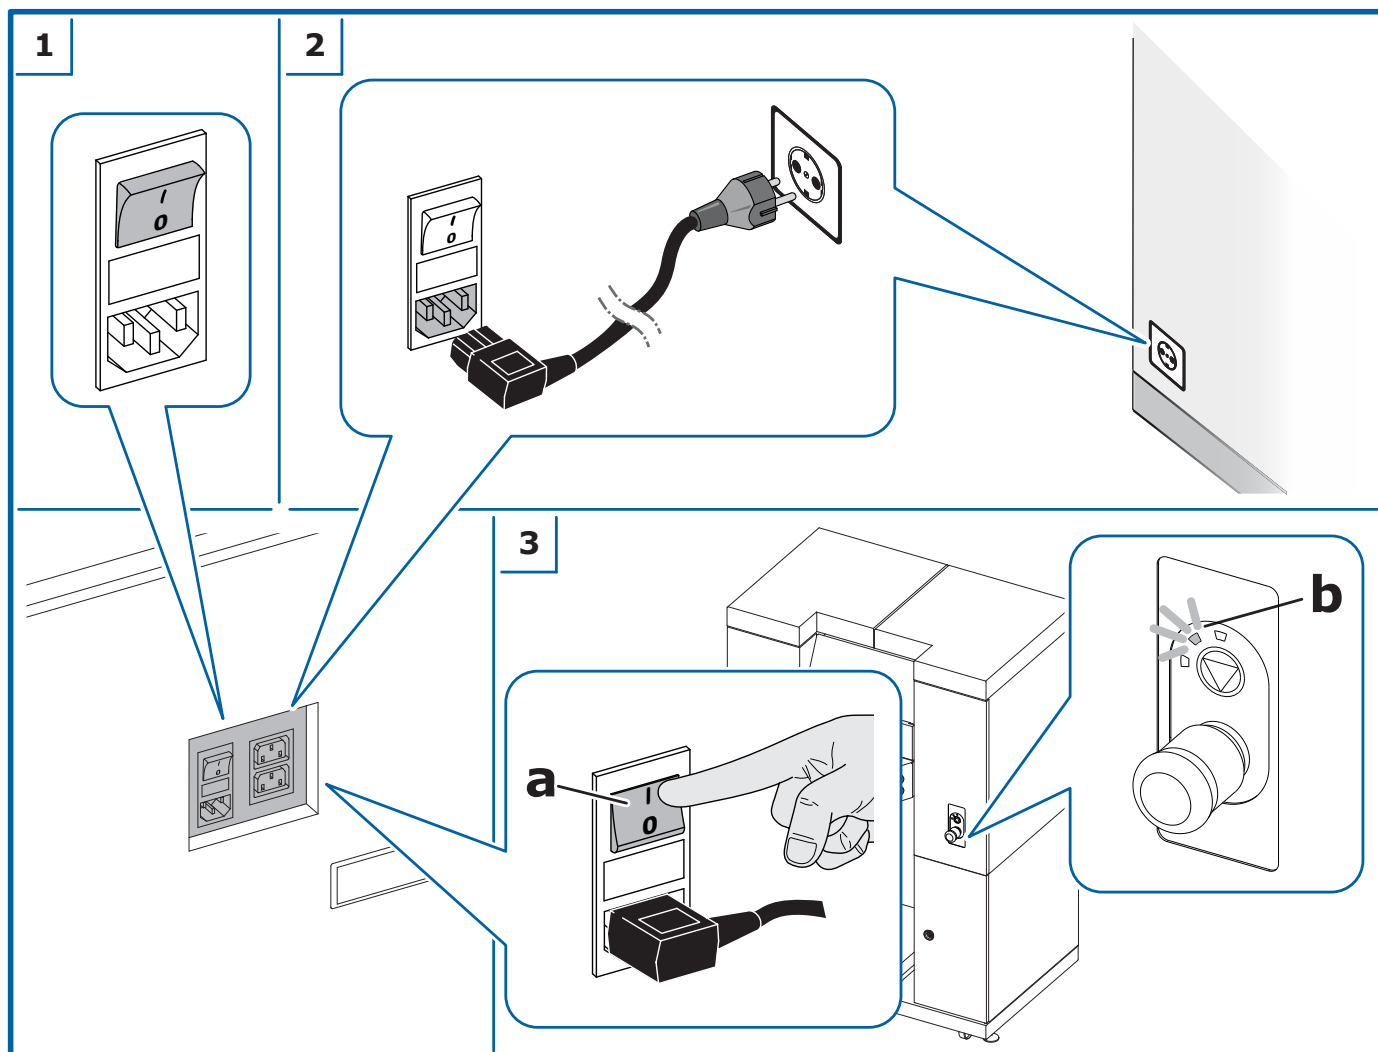

5.8 Shut-down



WARNING


WE RECOMMEND THAT YOU NEVER SHUT DOWN THE MACHINE, even when closed for business, because the automatic, timed functions help keep the colorant preserved and homogeneous.

Should it be essential to shut down the machine, avoid keeping it off for extended periods of time. When the machine is not being used, if necessary shut off only the computer.



ATTENTION

Very little power is used by the machine itself when inactive or during a stirring cycle.

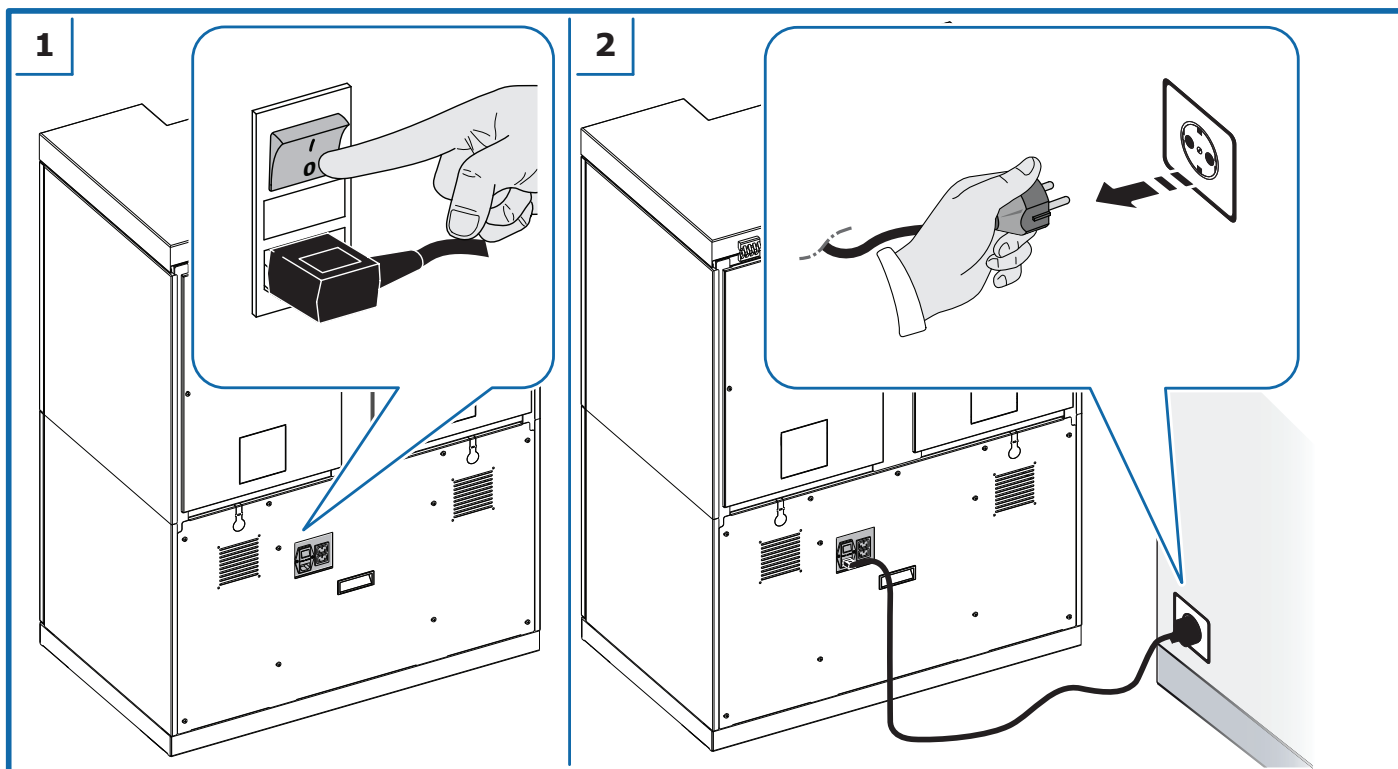

6 USING THE DISPENSER

6.1 General warnings

Personnel in charge of these operations must wear the following personal protective equipment.



MECHANICAL RISK PROTECTION GLOVES (TEAR, WEAR)



HAZARD

The machine must be used by a single operator. Unauthorized people who could reach or touch machine parts during operation must not be admitted in the nearby area.

It is strictly forbidden to use the machine without protections or with any safety devices present on the machine disabled, broken down, or removed. The panels must be kept closed at all times.

Do not, for any reason, place your hands in the dispensing area when running the machine, except for loading and unloading the cans.

When handling cans, do not exceed the weight limits stated by the current regulations in force.

Carry out the single procedures described in the following chapters respecting the sequence of operations indicated. This guarantees correct use of the machine, reduces any risks for the operator and avoids damage to the machine itself.

6.2 At the beginning of the working day

At the beginning of each work shift, always carry out the following operations:

- Check that the nozzle center is clean.
- (With humidifier for solvent-based colorants or without humidifier) Check that the sponge is clean and saturated; if it is necessary to saturate, use only appropriate liquid (the choice of the liquid depends on the nature of the colorants, and must be done directly by the manufacturer of the products used).
- (With humidifier for water-based colorants) Check that the water in the bottle is not below the minimum level.
- (With Puncher) Check the cutting tool is clean.
- Carry out system Purge.


6.3 Running the machine

The management software displays the instructions to be followed and the actions taken by the machine in order to guide the operator.

Steps:


1. Make the appropriate selections from the software (choose the product, formula and container).
2. Load the can in the machine and adjust the height of the can shelf.
 - with manual shelf (ch. [Loading the can - Manual shelf](#))
 - with manual shelf (ch. [Loading the can - Semiautomatic shelf](#))
 - with semiautomatic shelf (ch. [Loading the can - Automatic shelf](#))
3. Adjust can position with respect to the dispensing center.
 - with can centering device (ch. [Use of can centering device and Bung Hole Locator](#))
 - with Laser B.H.L. (ch. [Use of can centering device and Bung Hole Locator](#))
4. Carry out punching of the can lid (optional).
 - with puncher (ch. [Punching the can](#))
5. Via the software, enter the formula dispensing command (ch. [Dispensing](#))
6. After dispensing, remove the containers and continue with the next dispensing.

6.3.1 Loading the can - Manual shelf

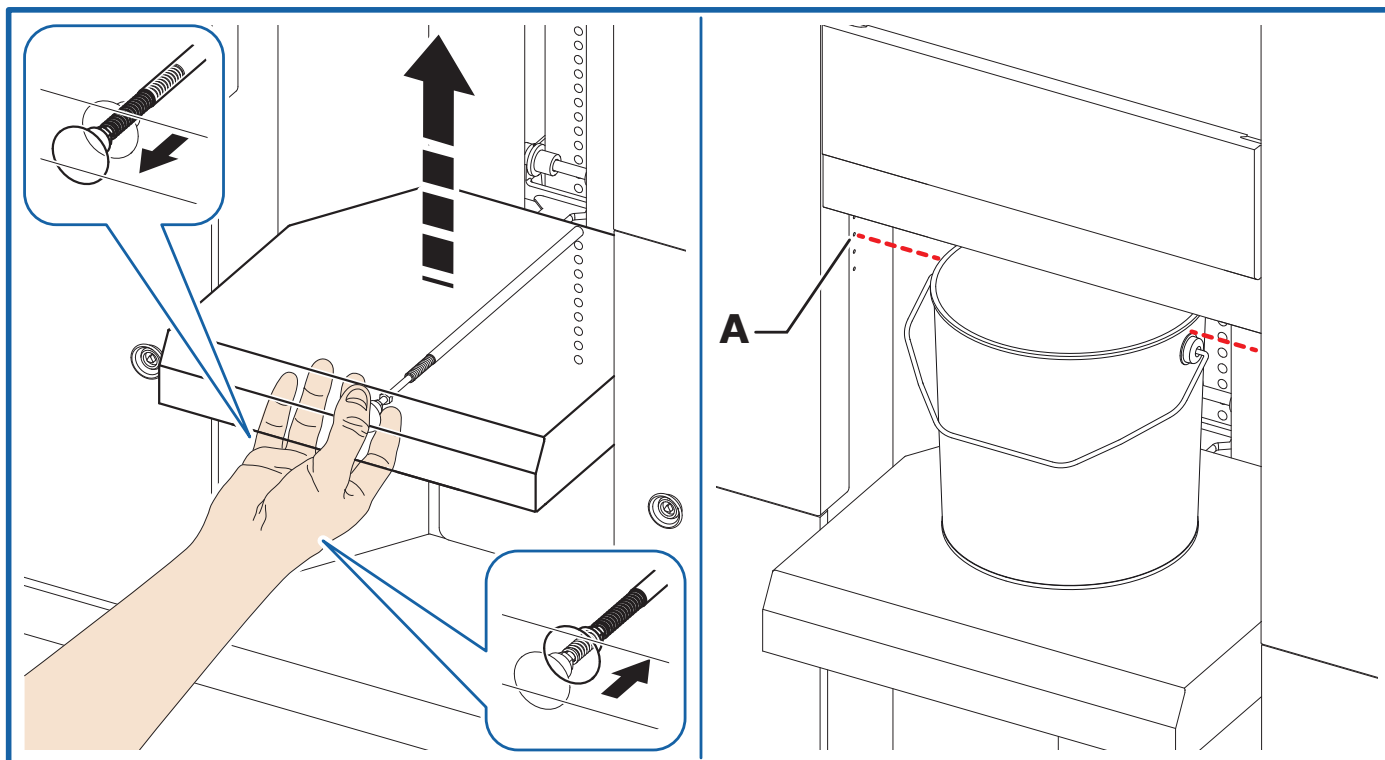

1. Release the shelf by pulling the handle.
2. Raise or lower the shelf, adjusting its height based on the size of the can to be used.
3. Release the handle to lock the shelf in the desired position.
4. Place the can on the shelf, making sure that photocell **A** is obscured.

6.3.2 Loading the can - Semiautomatic shelf

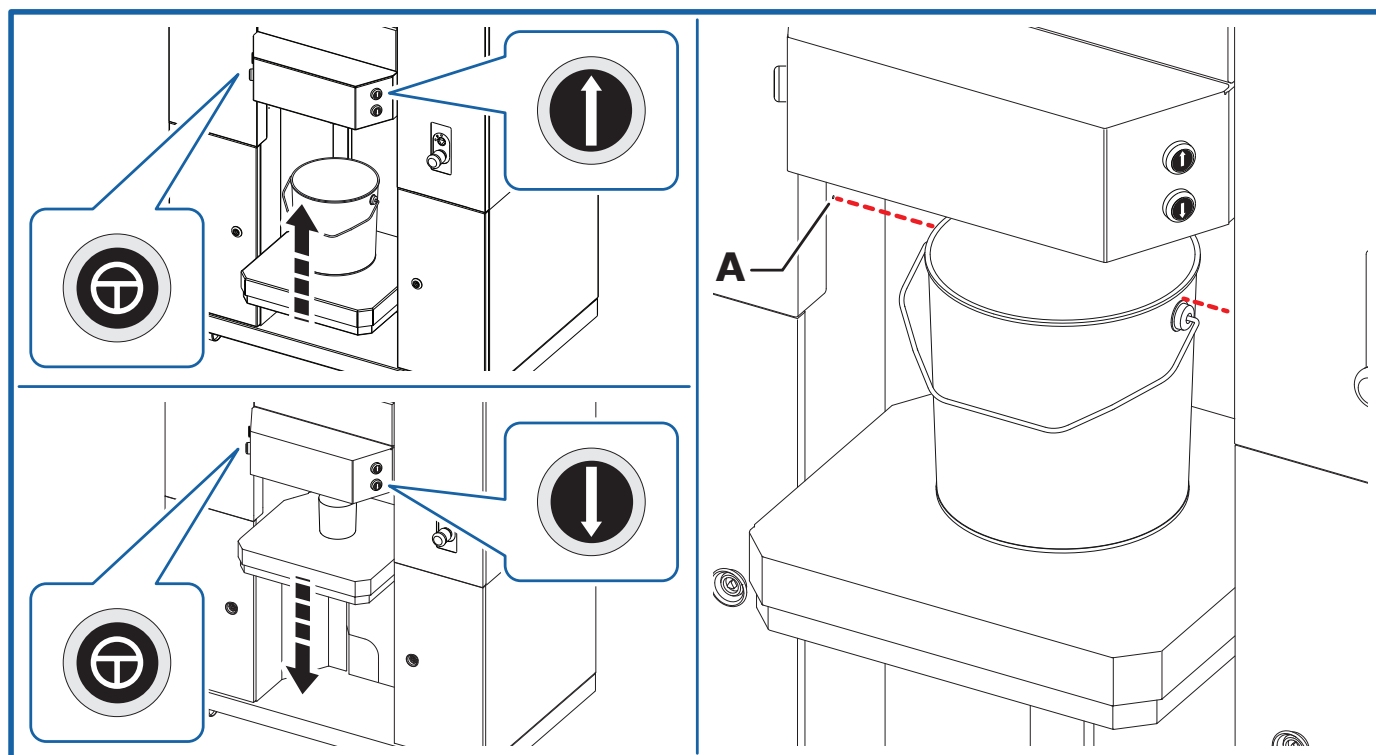

ATTENTION

With the purpose to prevent any crushing risks, the semiautomatic shelf is fitted with a lower safety plate (chapter [Safety devices](#)). The safety plate intervenes by causing the shelf to stop if it is inadvertently touched by the operator.

1. Place the can on the shelf.
2. Press and hold down the two buttons **Safety**  and **Up**  at the same time, to raise the shelf, which stops when the can is correctly positioned.
3. If necessary, lower the shelf by pressing the two buttons **Safety**  and **Down**  at the same time.

6.3.3 Loading the can - Automatic shelf



ATTENTION

With the purpose to prevent any crushing risks, the machine is fitted with two safety plates (chapter [Safety devices](#)). The safety plates intervene by causing the shelf to stop if they are inadvertently touched by the operator.


Place the can on the shelf.

The management program controls the movement of the automatic shelf, checks for the can presence and that the can placed on it is actually the one selected through the program for dispensing the formula.

These checks are also carried out by a photocell located underneath the nozzle center. The shelf automatically stops when the can is detected by the photocell.

After a can has been positioned, the program will indicate an error if the can is missing from the shelf, or if it is larger or smaller than the one selected for dispensing.

6.3.4 Use of can centering device and Bung Hole Locator

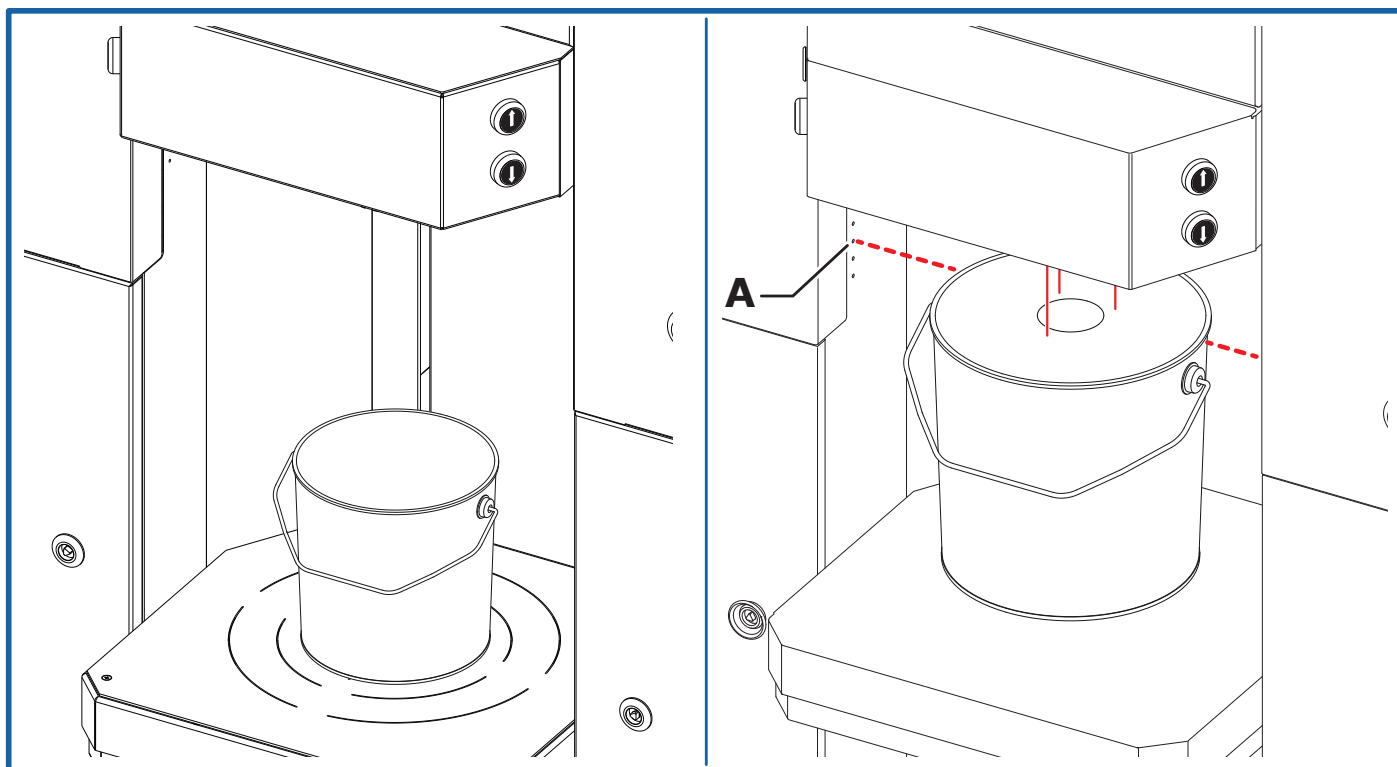

With can centering device

Place the can in the centering ring of the suitable diameter.

With Bung Hole Locator

1. After having correctly positioned the can so as to obscure photocell **A**, the laser beams will switch on.
2. Position the can in such a way that the hole on the lid is in the center of the laser beams.

6.3.5 Punching the can



ATTENTION

Remember to carry out punching **BEFORE** commanding the dispensing from the software.

1. When the can has been positioned so as to obscure photocell **A** (chapter [Loading the can - Semiautomatic shelf](#)) the green lamp **B** will light, to indicate that it is now possible to proceed with punching.




WARNING

The punch tool is sharp. The can-holding plate is installed for safety purposes as well. Never push the plate upward. Do not touch the puncher blade with your hands.

Ensure that there is a lid on the can.

2. Press and hold down contemporaneously the **Safety**, **Up** and **Down** buttons ( +  + ); the shelf will rise further in order to push the can against the puncher and then return to the initial position. During shelf descent, it is possible to release the buttons.

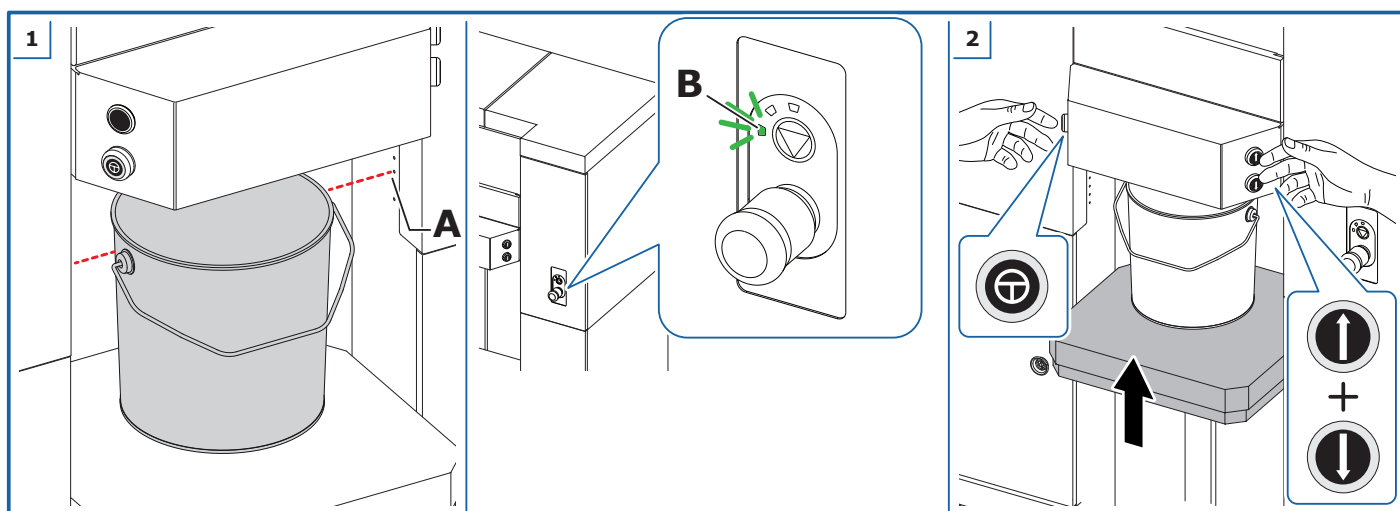

6.3.6 Dispensing

The dispensing system depends on the machine version.

When the dispensing command is entered, the automatic cap opens to expose the nozzles and the machine begins to dispense the products included in the formula in the set amounts; the cap will automatically close when dispensing is finished.

The semiautomatic shelf can be configured in EVOSERVICE to automatically move down, at the end of dispensing, to a set height.

6.4 Automatic stirring

Stirring is a timed process, activated automatically to properly store the product in the canisters and keep it in ideal, homogeneous conditions for dispensing, through the movement of stirring paddles inside canisters.

The duration and time between one stirring cycle and the next can be customised using the configuration software to suit the nature of the products used in the machine.



ATTENTION

We recommend to keep the canisters closed with their corresponding lids; do not insert hands in the canister even when no colorant is present

When an automatic process is in progress, the machine can still be used; the process will be suspended and restarted after a few seconds that the machine is inactive.

6.5 Refilling the canisters

1. Press the off-line button for an instant (chapter [Off-line button and WHITE lamp](#)). The white lamp on the control panel blinks.
2. Open the top covers.
3. Remove the lid of the tank to be filled.



ATTENTION

Shake the container of colorant to be poured into the canister manually. Do not use automatic shakers.

4. Make sure that the bottle draining system is correctly positioned, then add the desired colorant to the canister, by pouring it directly on the bottle drainer, so as to avoid spattering or creating air emulsions in the colorant.



WARNING

To avoid colorant spills from the shaft of the stirring system, it is essential that you **DO NOT REMOVE** the bottle drainer while topping up. The colorant level **MUST NOT** exceed the maximum level, placed at 5 cm (2") from the upper edge of the canister. Colorant spills cause the circuit pumping unit to be blocked.

5. Close the canister with its corresponding lid.
6. Bring the machine back to the on-line condition using the off-line button (chapter [Off-line button and WHITE lamp](#)).
7. Repeat the above steps to fill other canisters.



WARNING

In case of improper actions, which caused canister overfilling with colorant:

- In case the colorant has poured inside the machine, do not try to clean; turn the machine off at once and contact an authorized service center.
- If, on the contrary, the product has already poured out of the canister, it is necessary to shut off the machine immediately and clean with paper or a moistened cloth. Whenever possible, leave the colorant to dry itself and remove with a spatula.
- If the product has not yet come out of the canister borders, it is necessary to avoid closing the canister with its lid and provide immediately to dispense the exceeding colorant until the correct level is reached. Clean carefully the upper border of the canister with paper or a moistened cloth before closing it with the lid.
- To avoid the risk of slipping, keep the floor around the machine clean from possible product spills.

**NEVER USE WATER OR SOLVENT-BASED CLEANING PRODUCTS
TO CLEAN THE MACHINE.**

USING AGGRESSIVE CLEANING LIQUIDS CAN DAMAGE COMPONENTS AND EXTERNAL PANELS PAINT COATING.



HAZARD

When using **colorants containing volatile solvents** the canister top up must be carried out opening one canister at the time. Avoid naked flames or material that may create sparks and cause a fire.
Do not smoke near the machine.



WARNING



Failure to update the colorant levels in the canisters may compromise the accuracy of the hue produced or, worse yet, lead to emptying the machine canisters and circuits.




ATTENTION


We recommend that you keep the canisters full at all times by topping up frequently

After topping up the colorant, it is advisable to carry out the stirring process using the functions provided in the management software, to eliminate any air that may be emulsified and incorporated into the colorant

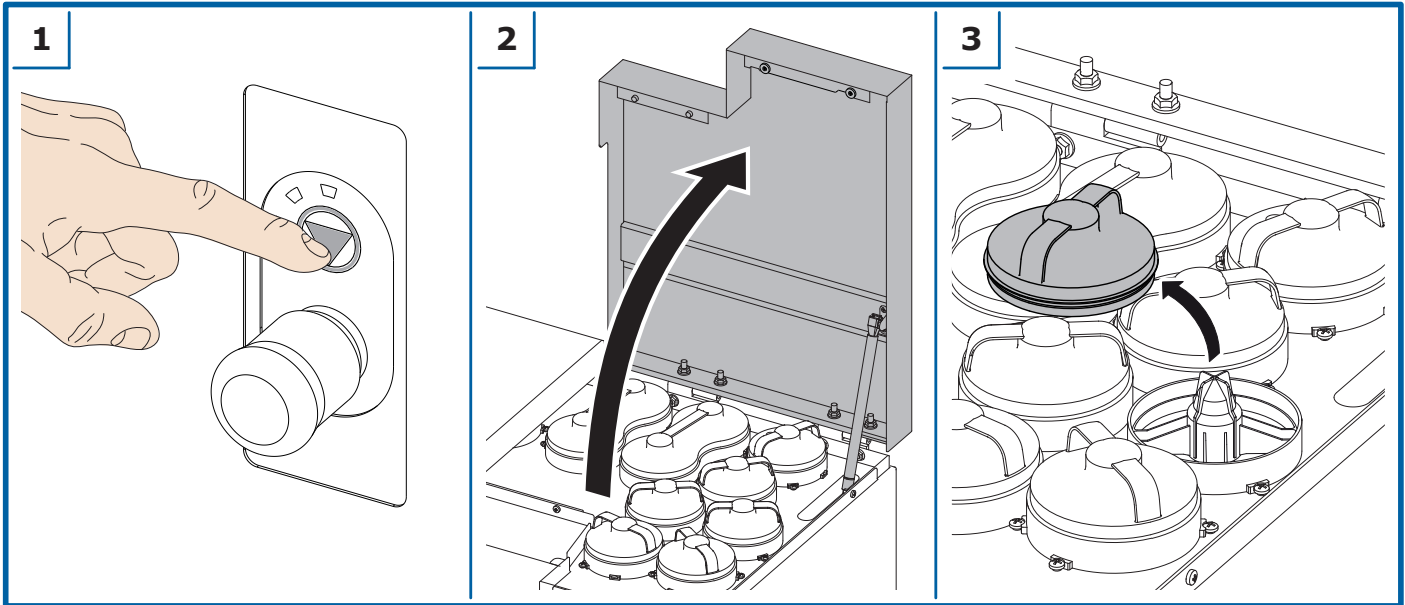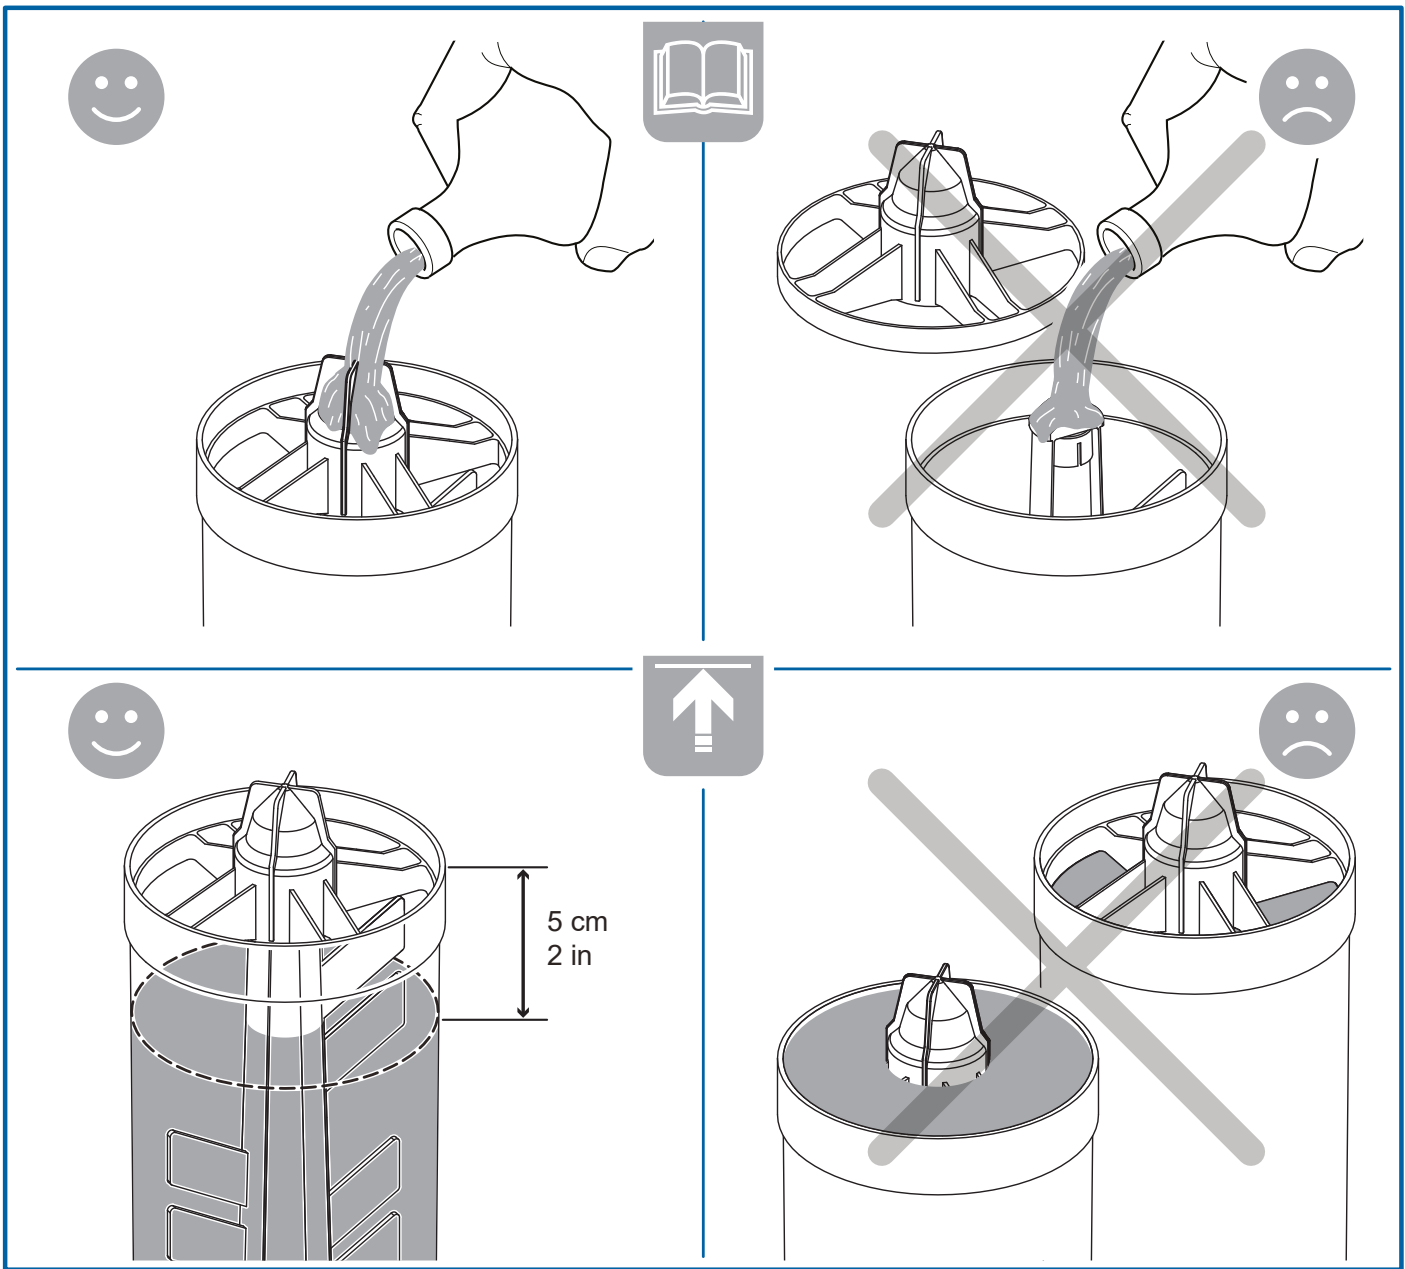

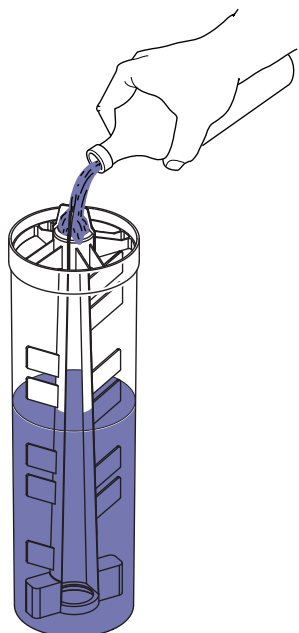

		A	B	C	D	E	F
	lt	0,5	1	-	1,5	2	2,5
	qt	0.5	1.1	-	1.6	2.1	2.6
	lt	1	2	2,5	3	4	5
	qt	1.1	2.1	2.6	3	4.2	5.3
	lt	0,5	1	1,5	-	-	-
	qt	0.5	1.1	1.6	-	-	-

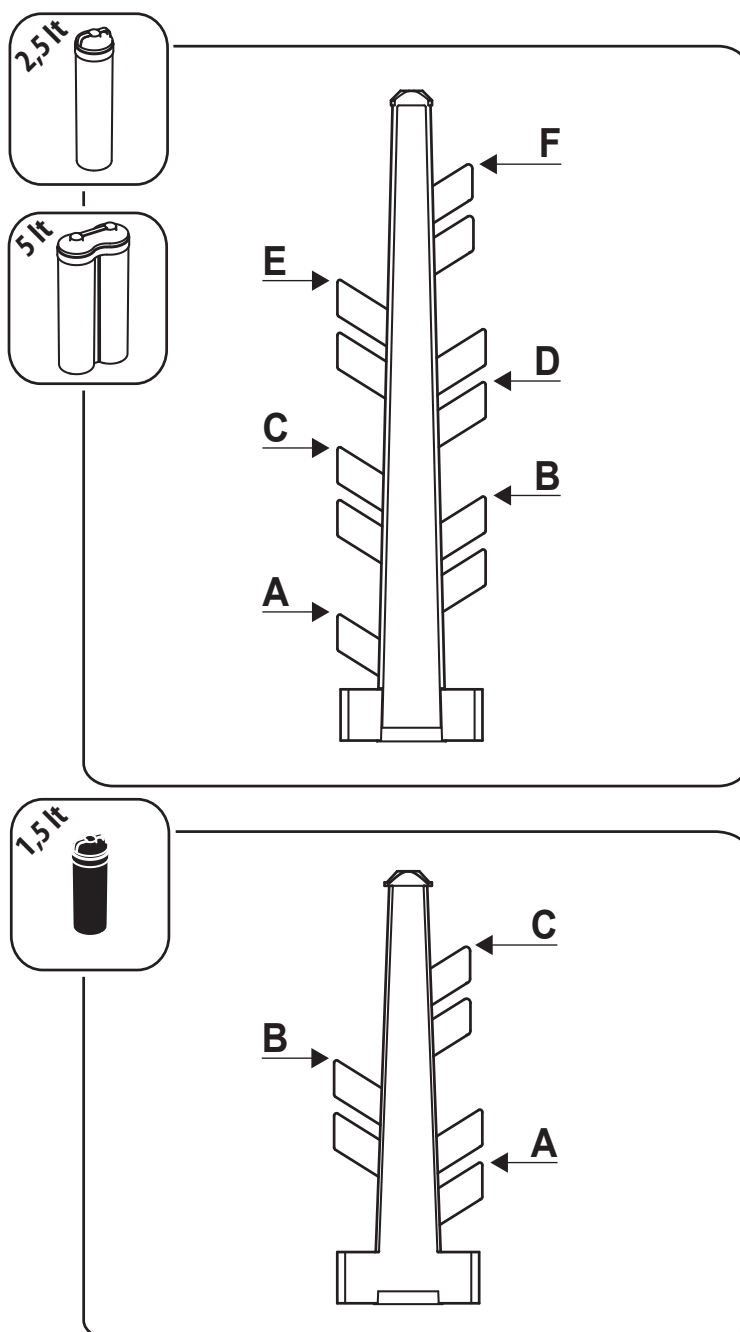

6.6 Troubleshooting

Problem: the machine does not turn on.	
Cause	Solution
Power supply is missing.	Check the connections at the back of the machine (chapter Control devices and connections).
Main switch in OFF position (O).	Set the main switch to the ON position (I) (chapter Electrical connection and start-up).
One or more fuses may be blown up.	Replace any blown fuse inside the fuse compartment (chapter Control devices and connections).
The power supply unit is in overcurrent.	Wait a few minutes and try to restart the machine. If the problem persists, contact the authorized technical service.
Electrical connections are defective.	Contact the authorized technical service.

Problem: The management software shows an error in the communication protocol.	
Cause	Solution
Machine is OFF.	Turn the machine on (chapter Electrical connection and start-up) and restart the management software.
Machine disconnected from the computer.	Check the connections at the back of the machine (chapter Control devices and connections).
Computer serial port or USB port wrongly configured or defective.	Use the configuration and calibration software to make sure you have correctly configured the port used to communicate with the machine. Repair the computer serial port or USB port.
Serial cable damaged.	Replace the communication cable using manufacturer's original spare parts.
Connection defective.	Contact the authorized technical service.

Problem: the WHITE lamp blinks slowly and the machine refuses the commands.	
Cause	Solution
The machine is in the off-line 1 condition.	Bring the machine to the on-line condition by using the off-line button.

Problem: The machine does not work.	
Cause	Solution
The off-line is pressed. The WHITE lamp blinks.	Release the off-line button (chapter Off-line button and WHITE lamp).
An error has occurred. The RED lamp blinks.	Check the error message displayed in the software. After removing the cause of the error, restore the machine by sending a reset command or by turning the machine off and on again. If the problem persists, contact the authorized technical service.

Problem: The WHITE lamp blinks fast and the machine refuses the commands.	
Cause	Solution
The automatic cap is open and the machine is in the off-line 2 condition.	Close the automatic cap and bring the machine to the on-line condition by using the off-line button.

Problem: The machine does not work and the RED lamp on the control panel is on.	
Cause	Solution
Emergency button is pressed.	Release the emergency button (chapter Emergency stop).

Problem: The punching operation failed and the can got stuck in the punching group.	
Cause	Solution
The punch tool is worn or dirty and therefore does not cut well, or the sliding columns of the punch group are dirty.	<p>Lower the shelf slightly and push the can down by hand to disengage it. The use of safety gloves is mandatory.</p> <p> MECHANICAL RISK PROTECTION GLOVES (TEAR, WEAR)</p> <p>Perform routine maintenance on the punch tool (cleaning) or request replacement</p>
The paint can is deformed.	Check that the cans are in good condition and that they are of the right size and intended for use with the machine.
The punching sensors are not properly adjusted.	Call the technical service for extraordinary maintenance on the punching group.

7 ROUTINE MAINTENANCE

7.1 General warnings

Personnel in charge of these operations must wear the following personal protective equipment.



MECHANICAL RISK PROTECTION GLOVES (TEAR, WEAR)



HAZARD

Before carrying out any maintenance operations, you must turn off the machine and unplug the power supply cable from the mains socket outlet.

During machine maintenance operations there is a high risk of contact with the coloring product; strictly follow the indications of chapter [Warnings on the use of products](#).

7.2 Maintenance table



WARNING

The frequencies indicated are approximate, since they depend on the type of colorants, environment conditions and frequency of use of the machine.

Operations	Frequency
Purge	Beginning of shift
Cleaning the nozzle centre	Beginning of shift
Check the sponge / pad is clean	Beginning of shift
Check the sponge is saturated Accessory: solvent humidifier or without humidifier	Beginning of shift
Moisten the sponge Accessory: solvent humidifier or without humidifier	Twice a week
Clean the sponge	Beginning of shift
Check condition of puncher Accessory: puncher	Twice a week
Clean the dispenser externally	When necessary
Refilling the humidifier bottle Accessory: humidifier (water)	When necessary

7.3 Products to be used

We recommend to use products compatible with the type of colorants in the machine when cleaning.

Type of colorant	Suggested product
Solvent-based colorants	slow-evaporating solvent, compatible with the colorants used
Water-based colorants	water
Mixed systems	the choice depends on the type of vehicles used to produce the colorants; for more information, contact the dealer or colorant manufacturer

Should growths form in the cap, in the sponges or in the humidifier water bottle, it is advisable to use the following fluids:

- Propylene glycol solution, 50% by volume, in water;
- AgCl solution in water;
- Bleach (dilution 1%).

7.4 External cleaning



HAZARD

NEVER USE WATER OR SOLVENT-BASED CLEANING PRODUCTS TO CLEAN THE MACHINE.

USING AGGRESSIVE CLEANING LIQUIDS CAN DAMAGE COMPONENTS AND EXTERNAL PANELS PAINT COATING.

In case the colorant has poured inside the machine, do not try to clean; turn the machine off at once and contact an authorized service center.

In the even of product spills, clean the machine immediately.


1. Disconnect power supply (chapter [Shut-down](#)).
2. To remove dirt, dust and any colorant stains, clean the cladding, panels and control devices of the machine with a soft and cloth, either dry or moistened slightly with a mild detergent solution.
3. Connect power supply and switch on the machine (chapter [Electrical connection and start-up](#)).

To clean the computer, refer to the manufacturer's manual.

7.5 Cleaning the nozzle centre (Autocap)



1. Open the humidifier cap.
2. Disconnect power supply (chapter [Shut-down](#)).
3. Accurately clean the nozzles using a sharp tool; remove any dried colorant residue delicately, to avoid damaging the ends of the circuits.
4. Connect power supply and switch on the machine (chapter [Electrical connection and start-up](#)).
5. Close the humidifier cap.
6. Carry out purge using the command in the management software.

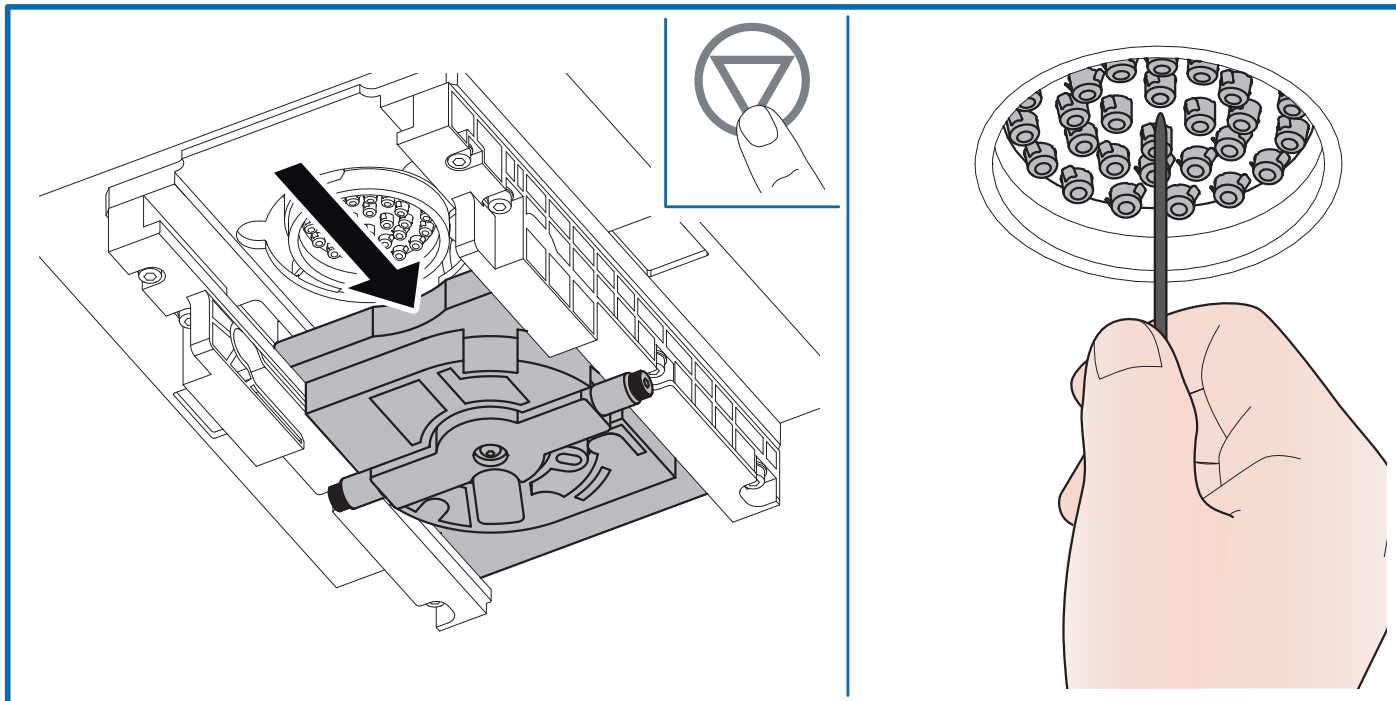


7.6 Cleaning and moistening the sponge



ATTENTION

 In case of humidifier cap sponge replacement, use only those supplied with the machine.



8 mm [0.31"] To remove the screw(s)



HAZARD

IF THE MACHINE IS EQUIPPED WITH PUNCHING DEVICE, YOU MUST WEAR CUT-PROOF GLOVES.



MECHANICAL RISK PROTECTION GLOVES (TEAR, WEAR)



1. Open the cap.
2. Disconnect power supply (chapter [Shut-down](#)).
3. Remove the sponge holding lid.

WITHOUT HUMIDIFIER:


- a. Check the sponge condition and moisten it. The liquid level must not exceed the sponge height. If it is very dirty remove the sponge from the cap and wash it thoroughly.




WITH SOLVENT HUMIDIFIER:

- b. Check the condition of the sponge. If it is very dirty remove the sponge from the cap and wash it thoroughly. Top up with a small quantity of solvent the tank inside the sponge support; when repositioning the sponge on the filter, be careful to dip the tail into the solvent.

WITH WATER HUMIDIFIER:

- c. Check the condition of the sponge. If it is very dirty remove the sponge from the cap and wash it thoroughly.
4. In all cases, if the sponge is severely damaged, replace it.
 5. Re-install the sponge holding lid.
 6. Connect power supply and switch on the machine (chapter [Electrical connection and start-up](#)).
 7. Close the cap.

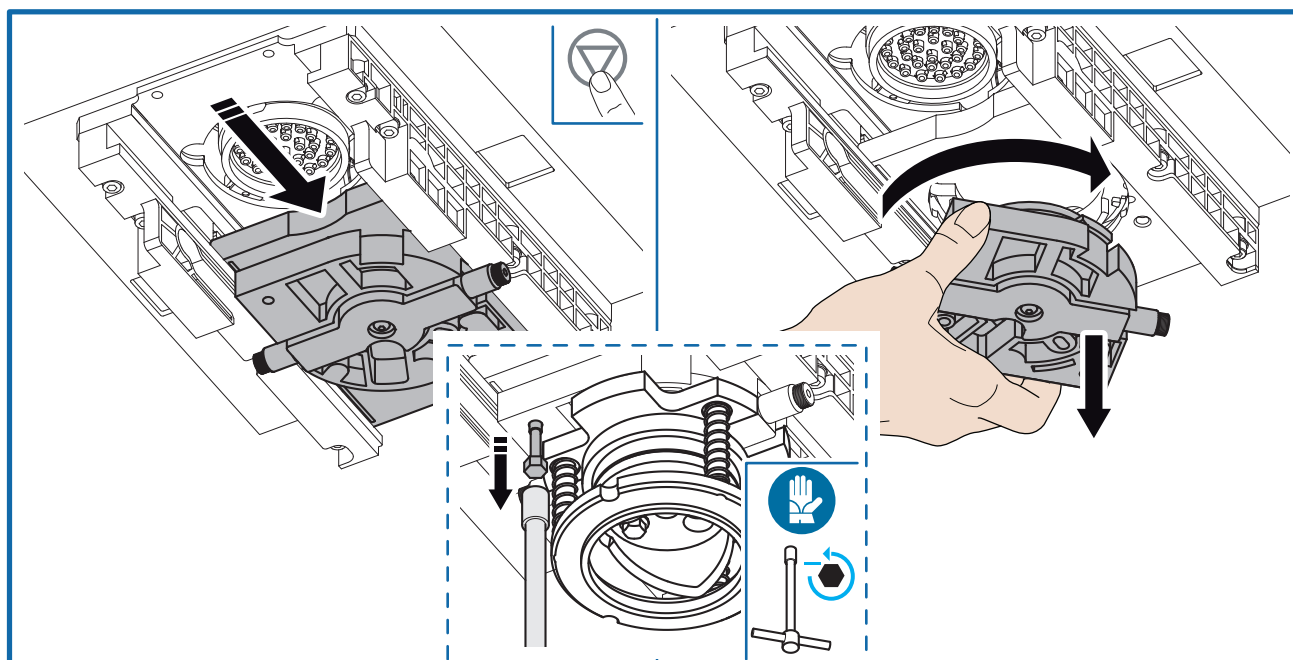

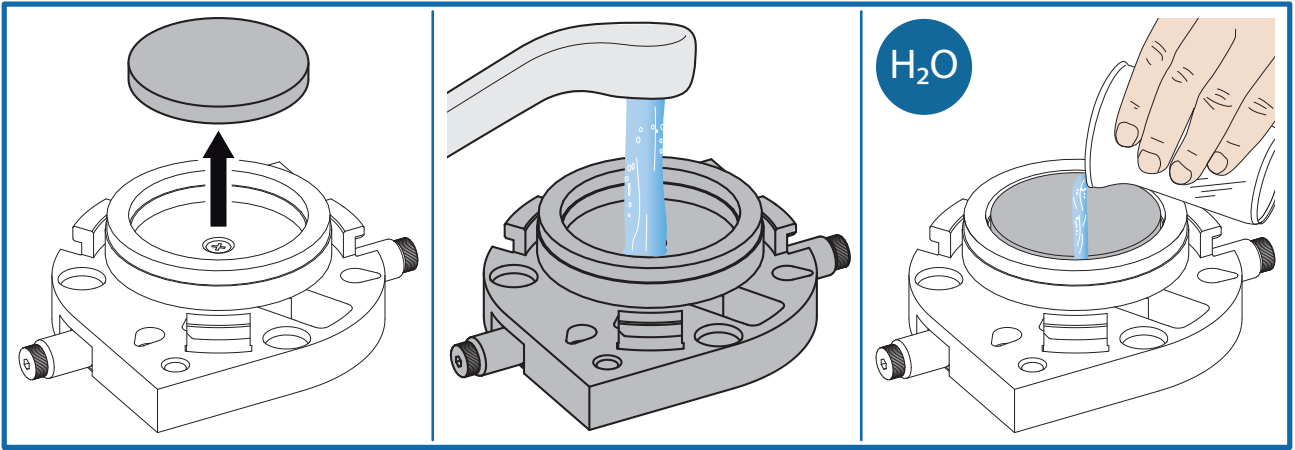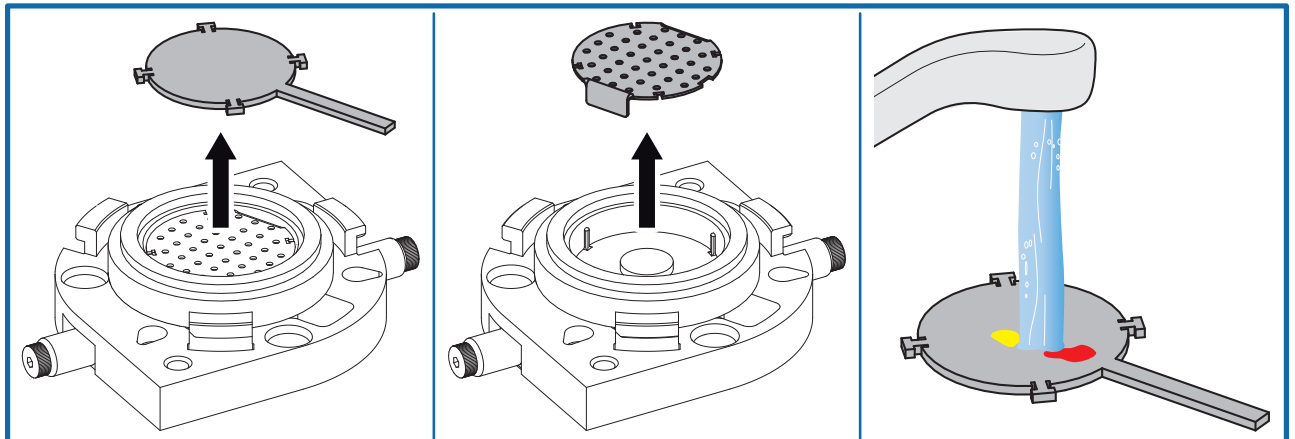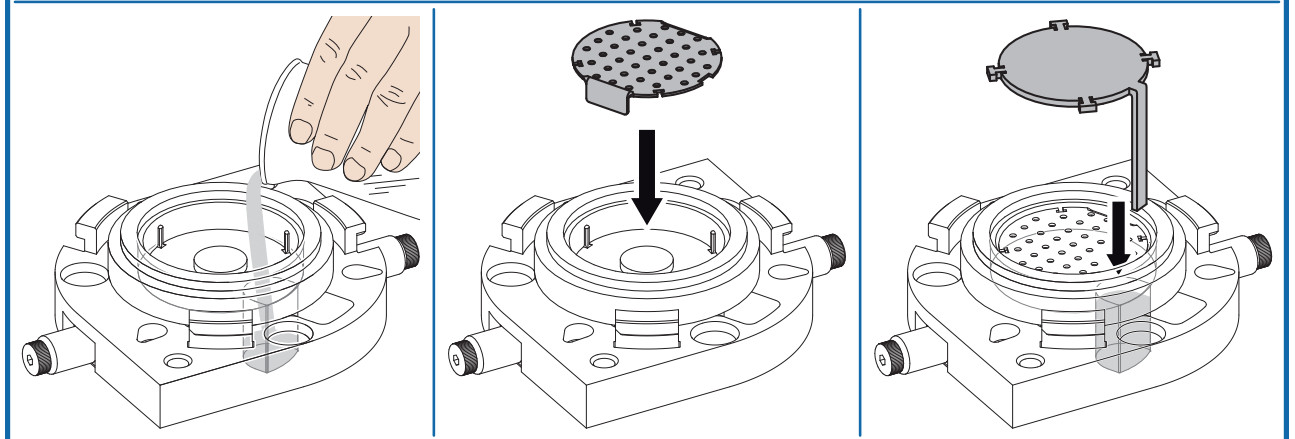

7.7 Checking and replacing the puncher




HAZARD

TO PERFORM THIS OPERATION YOU MUST WEAR CUT-PROOF GLOVES.



MECHANICAL RISK PROTECTION GLOVES (TEAR, WEAR)

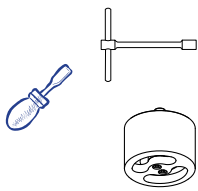


8 mm [0.31"] To remove the puncher



1. Disconnect power supply (chapter [Shut-down](#)).
2. Screw tool **A** to puncher **B**.
3. Insert wrench **C** in the tool slots and slightly loosen screws **D** (do not unscrew them completely).
4. Rotate and pull down tool **A**, so as to remove puncher **B**, then separate the puncher from the tool.
5. If necessary, clean the surfaces of the puncher to remove encrusted matter, using a product compatible with the type of bases used in your system. We recommend lubricating the puncher walls with a common, non-contaminant lubricant (ENOTAP or similar).
6. Reassemble the puncher following the above steps in reverse order.
7. Connect power supply and switch on the machine (chapter [Electrical connection and start-up](#)).

If the can punching is inadequate because the cutting edge of the puncher is excessively worn, replace the worn puncher.

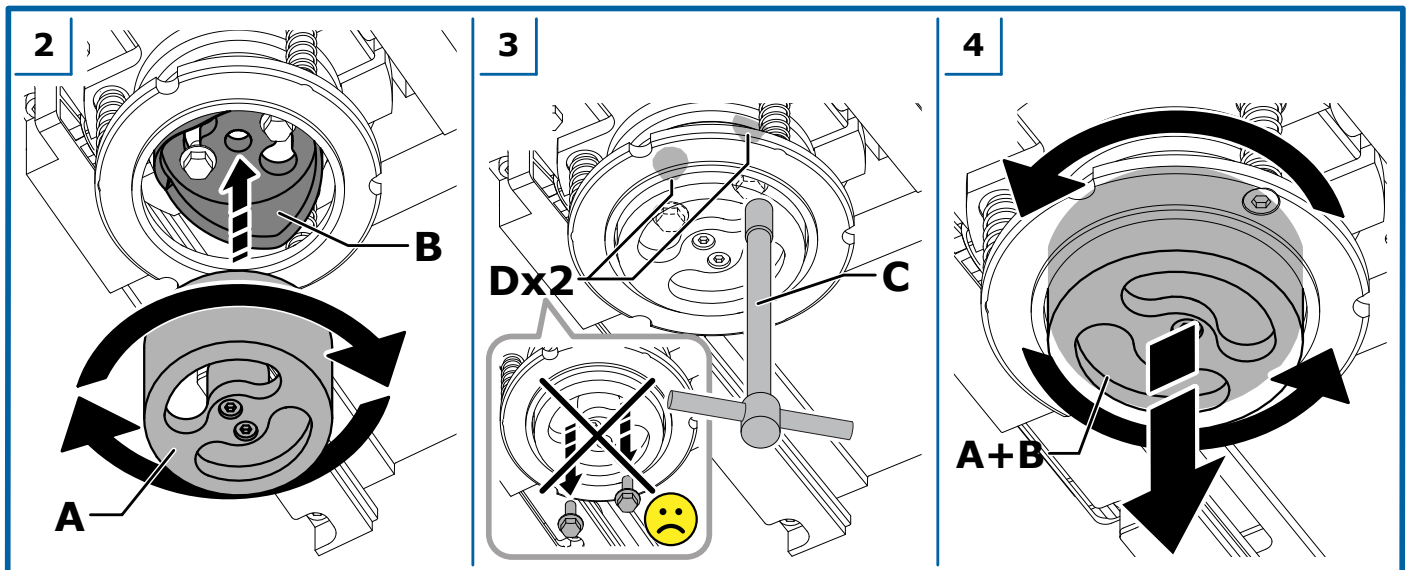

7.8 Refilling the humidifier bottle



WARNING

When the water in the bottle reaches the minimum level, fill up immediately.


1. Disconnect power supply (chapter [Shut-down](#)).
2. Remove the bottle cap and add water (0.5 liters / 1 Pint maximum), paying attention NOT TO EXCEED THE MAXIMUM LEVEL.



ATTENTION

To reduce the risk of lime encrustations due to hard water, it is recommended to use distilled water

3. Re-place the cap and firmly tighten.
4. Connect power supply and switch on the machine (chapter [Electrical connection and start-up](#)).

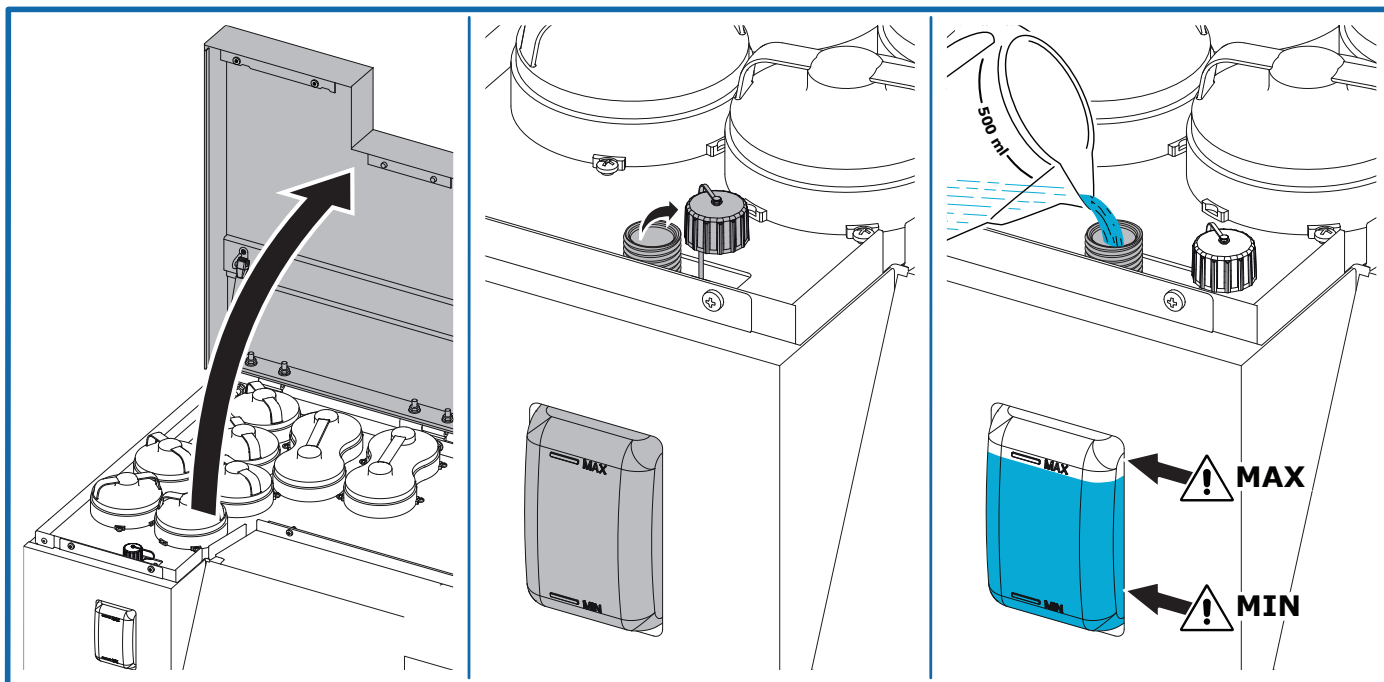

8 TECHNICAL DATA

8.1 Technical data

Power supply (a)
Single-phase 100 - 240 V~ ± 10%
Frequency (a)
50/60 Hz
Fuses (a)
F 10 A
Maximum power consumption (a)
from 150 to 600 W, based on configuration
Noise level (b)
Level of equivalent acoustic pressure: < 70 dB (A)
Operating environmental conditions (c)
Temperature: between 10 °C (50 °F) and 40 °C (104 °F)
Relative humidity: between 5% and 85%, without condensation
Vibrations
The machine does not transmit vibrations to the floor that may compromise the stability and precision of any nearby equipment.
Canister capacities
1.5 - 2.5 - 5 liters (1.58 q - 2.64 q - 1.32 G)
Number of canisters
<ul style="list-style-type: none"> • [S] up to 20 • [M] up to 24 • [L] up to 32
Dispensing technology
bellow pump, STD (0.25 l/min)bellow pump, STD (0.5 l/min) [double pump]
Maximum flow diameter of nozzle centers (d)
[S] <ul style="list-style-type: none"> • 28 mm (1.1") [up to 16] • 39 mm (1.5") [from 17 to 20] [M] <ul style="list-style-type: none"> • 28 mm (1.1") [up to 16] • 39 mm (1.5") [from 17 to 20] • 45 mm (1.8") [from 21 to 24] [L] <ul style="list-style-type: none"> • 28 mm (1.1") [up to 16] • 39 mm (1.5") [from 17 to 20] • 45 mm (1.8") [from 21 to 32]

Dispensing system
<ul style="list-style-type: none"> • simultaneous on demand • simultaneous
Dispensing center
internal
Canister type
All-purpose (POM acetalic resin)
Type of colorants
Decorative and industrial: water, universal and solvent
Valve types
Membrane valves

(a) The power values are indicative and are strictly linked to the machine configuration. The machine serial number label contains the precise value for the specific machine configuration. The maximum possible power value was measured considering the most severe operating conditions.


(b) Value measured in the laboratory and documented in the relative test report, which is available from the manufacturer. Operating conditions: normal machine work cycle under simulated load conditions.

(c) The operating environmental conditions are strictly linked to the colorant types used (ask the product manufacturers for information). The specified values refer to the machine only.

(d) Hole diameters for pre-perforated pails = flow diameter + 15 mm (0.59"). The diameter may also depend on the water/solvent circuit split in the machine.

8.2 Dimensions and weight

Figures are purely indicative; they depend on the configuration of the machine and are referred to the machine with empty canisters and without accessories.

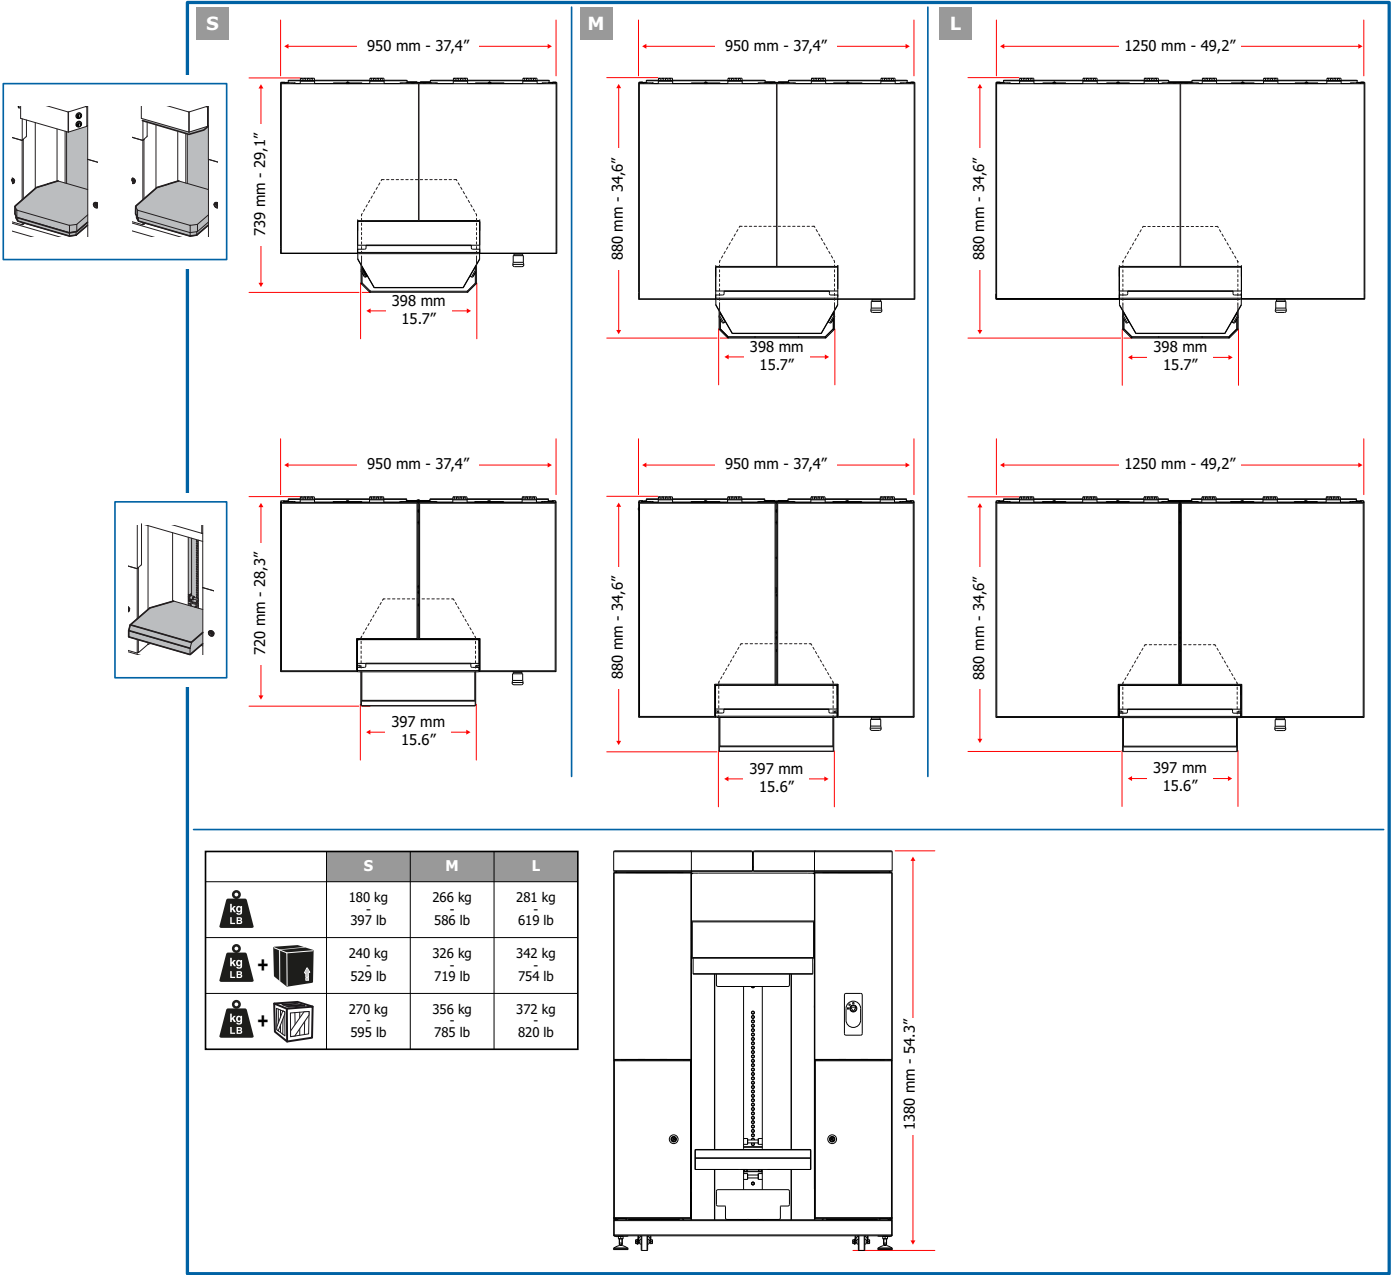

8.3 Declaration of conformity



Dichiarazione CE di Conformità EC Declaration of Conformity

Versione linguistica originale in Italiano

Translation of the original Italian version

DESCRIZIONE - DESCRIPTION

DISPENSATORE AUTOMATICO
AUTOMATIC DISPENSER

MODELLO - MODEL

MATRICOLA - SERIAL No.

[MACHINE NAME]

Fabbricante e persona autorizzata a costituire il fascicolo tecnico:
Manufacturer and person authorised to compile the technical file:

COROB S.p.A.

Via Agricoltura, 103 - 41038 San Felice s/P (MO) - Italy

Il fabbricante dichiara sotto la propria esclusiva responsabilità che la macchina alla quale questa dichiarazione si riferisce è conforme ai requisiti essenziali previsti dalle seguenti direttive:

The manufacturer certifies, under its own responsibility, that the machine to which this statement refers to, complies with the essential requirements foreseen by the regulations:

- Direttiva Macchine 2006/42/CE
- Direttiva Compatibilità Elettromagnetica 2014/30/EU
- Direttiva 2011/65/EU come modificata da 2015/863/EU
- Direttiva WEEE 2012/19/EU
- Direttiva 2014/53/EU

- Machinery Directive 2006/42/EC
- Electromagnetic Compatibility Directive 2014/30/EU
- Directive 2011/65/EU as amended by 2015/863/EU
- WEEE Directive 2012/19/EU
- Directive 2014/53/EU

Si garantisce poi che la progettazione della macchina e la relativa produzione è effettuata, e documentata, seguendo precise procedure aziendali conformi con la norma EN ISO 9001:2015 inerente i sistemi di gestione qualità.

It is furthermore guaranteed that the design of the machine and the relevant manufacturing are carried out, and supported by documents, following accurate factory procedures in accordance with the standard EN ISO 9001:2015 about quality management systems.

[Name and Surname of Special Proxy Holder in charge]

COROB S.p.A.

San Felice sul Panaro, DD/MM/YYYY

1 / 2 | CE IT DSP_CC 01_2025

COROB S.p.A.

corob.com

con Socio Unico
Società soggetta a direzione e
coordinamento da parte di Graco Inc.

Via Agricoltura, 103
41038 San Felice s/P (MO) - Italy
p +39 0535 663111
f +39 0535 663285

C.F./P.I./R.I. Modena 03754020968
Cap. Soc. € 12.150.000 i.v.
R.E.A. MO 343030

BG - Производителят, който е лице, упълномощено за изготвяне на техническата документация, декларира на собствена изключителна отговорност, че машината, за която се отнася тази декларация, е в съответствие със съществените изисквания, предвидени от следните Директиви: Директива 2006/42/EC - Машини - Директива 2014/30/EU относно Електромагнитна съвместимост - Директива 2011/65/EU изменена с 2015/863/EU - Директива WEEE 2012/19/EU - Директива 2014/53/EU. Освен това се гарантира, че проектирането на машината и съответното производство са извършени и документирани при спазване на конкретни фирмени процедури в съответствие със стандарт EN ISO 9001:2015, отнасящ се до системите за управление на качеството.
CS - Vytvoře a osoba pověřená sestavením technické dokumentace stvrzuji na svou vlastní zodpovědnost, že zařízení, ke kterému se toto toto prohlášení vztahuje, je v souladu se základními požadavky stanovenými následujícími směrnici: Směrnice o strojích zařízení 2006/42/EC - Směrnice o elektromagnetické kompatibilitě 2014/30/EU - Směrnice 2011/65/EU ve znění 2015/863/EU - Směrnice WEEE 2012/19/EU - Směrnice 2014/53/EU. Dále se zaručuje, že stroj byl navržen a vyroben, a výroba je zdokumentována, v souladu s přesnými firmními postupy, které odpovídají normě EN ISO 9001:2015 o systémech řízení jakosti.
DA - Fabrikanten og personen bemyndiget til at udarbejde den tekniske dokumentation erklærer på eget ansvar at maskinen, som denne erklæring henviser til, er i overensstemmelse med de væsentlige krav i de følgende direktiver: Maskindirektivet 2006/42/EC - Direktivet om elektromagnetisk kompatibilitet 2014/30/EU - Direktivet 2011/65/EU som ændret ved 2015/863/EU - Direktivet WEEE 2012/19/EU - Direktivet 2014/53/EU. Det garanteres desuden, at designet af maskinen og den relevante produktionsproces er udført og dokumenteret ifølge præcise fabriksprocedurer i overensstemmelse med standarden EN ISO 9001:2015 vedrørende kvalitetsstyringssystemer.
DE - Der Hersteller und autorisierte Verfasser der technischen Dokumentation erklärt unter eigener exklusiver Verantwortung, dass die Maschine, auf die sich diese Erklärung bezieht, den Grundanforderungen entspricht, die von den folgenden Richtlinien vorgesehen werden: Maschinenrichtlinie 2006/42/EC - Richtlinie zur elektromagnetischen Verträglichkeit 2014/30/EU - Richtlinie 2011/65/EU geändert durch 2015/863/EU - Richtlinie WEEE 2012/19/EU - Richtlinie 2014/53/EU. Darüber hinaus wird garantiert, dass die Planung der Maschine und ihre Herstellung unter Befolgung von genauen Unternehmensprossen, die der Norm EN ISO 9001:2015 hinsichtlich der Qualitätsmanagement-Systeme entsprechen, durchgeführt und dokumentiert wird.
EL - Ο κατασκευαστής, και ο εξουσιοδοτημένος συντάκτης του τεχνικού φακέλου, πιστοποιεί, ότι, με δική του υπαπόσταση, το μηχανήμα στο οποίο αναφέρεται το παρόν, συμμορφώνεται με τις ουσιαστικές απαιτήσεις που προβλέπονται από τους κανονισμούς Οδηγία Μηχανήματος 2006/42/EC - Οδηγία Ηλεκτρομαγνητικής Συμβατότητας 2014/30/EU - Οδηγία 2011/65/EU όπως τροποποιήθηκε από το 2015/863/EU - Οδηγία WEEE 2012/19/EU - Οδηγία 2014/53/EU. Εγγυόμαστε περαιτέρω ότι ο σχεδιασμός του μηχανήματος και η σχετική κατασκευή του εκτελείται και υποστηρίζεται από έγκυρα, ακολουθώντας τις ακριβείς εργασιακές διαδικασίες σύμφωνα με το πρότυπο EN ISO 9001:2015 σχετικά με τα συστήματα διαχείρισης ποιότητας.
ES - El fabricante y la persona autorizada para componer el fascículo técnico declara, bajo su propia y exclusiva responsabilidad, que la máquina a la que hace referencia esta declaración guarda conformidad con los requisitos esenciales previstos por las directivas siguientes: Directiva de máquinas 2006/42/EC - Directiva de compatibilidad electromagnética 2014/30/EU - Directiva 2011/65/EU modificada por 2015/863/EU - Directiva WEEE 2012/19/EU - Directiva 2014/53/EU. Se garantiza además que el diseño de la máquina y su producción se han efectuado y documentado de acuerdo con procedimientos de fábrica precisos conformes a la normativa EN ISO 9001:2015 relativa a los sistemas de gestión de calidad.
ET - Tootja ja tehnikale tootiku koostajaks volitatud isik kinnitab oma täielikul vastutusel, et seade, millele käesolev avaldus viitab, vastab järgnevatel regulatsioonidel põhinevatele: Masinadirektiiv 2006/42/EC - Elektromagnetilise ühilduvuse direktiiv 2014/30/EU - Direktiiv 2011/65/EU muudetud 2015/863/EU-ga - Direktiiv WEEE 2012/19/EU - Direktiiv 2014/53/EU. Peale selle on garanteeritud, et seadme projekteerimisel ja tootmisel on järgitud täpsed tehaseprotsedure, mis vastavad standardile EN ISO 9001:2015 kvaliteedijuhtimissüsteemide kohta, ning et sead teotab ka vastav dokumentatsioon.
FI - Valmistaja ja henkilö, joka on valtuutettu laatimaan tekninen asiakirja-aineisto, vakuuttavat omalla vastuullaan, että kone, johon tämä lausunto viittaa, vastaa seuraavien direktiivien olennaisia vaatimuksia: Konedirektiivi 2006/42/EC - Sähkömagneettista yhteensopivuutta koskeva direktiivi (EMC) 2014/30/EU ja Direktiivi 2011/65/EU sellaisena kuin se on muutettuna direktiivillä 2015/863/EU - Direktiiv WEEE 2012/19/EU - Direktiivi 2014/53/EU. Lisäksi taataan, että koneen suunnittelussa ja valmistuksessa ja näiden dokumentoinnissa noudutetaan tehtaan tarkkoja menettelytapoja, jotka täyttävät laadunhallintaa koskevan EN ISO 9001:2015 -standardin vaatimukset.
FR - Le fabricant, et toute personne autorisée à établir le dossier technique, déclare sous sa propre responsabilité que la machine à laquelle se rapporte cette déclaration est conforme aux exigences essentielles prévues par les directives suivantes : Directive Machines 2006/42/EC - Directive Compatibilité Électromagnétique 2014/30/EU - Directive 2011/65/EU telle que modifiée par 2015/863/EU - Directive WEEE 2012/19/EU - Directive 2014/53/EU. Le fabricant garantit également que la conception de la machine, ainsi que sa production, ont été effectuées et documentées, en suivant des procédures d'entreprise précises conformes à la norme EN ISO 9001:2015 relative aux systèmes de gestion qualité.
GA - Dearbhainn an deántóir, agus an duine atá údaraithe chun an comhad teicniúil a chur le chéile, ar a fhreagraicht féin go bhfuil an gléas a mbaineann an ráiteas seo leis i gcomhréir leis na riachtanais atá leagtha amach sna treoraíoch a leanas: Treoir um Innealra 2006/42/EC - Treoir um Chomhoibinnacht Leictreamaighnéadach 2014/30/EU - Treoir 2011/65/EU ama leasú le 2015/863/EU - Treoir WEEE 2012/19/EU - Treoir 2014/53/EU. Deimhnítear freisin go bhfuil dearadh an ghléas agus a dhéantús déanta, agus doiciméidáilte, de réir gnásanna beachta an chomhlachta atá i gcomhréir leis an rial EN ISO 9001:2015 a bhaineann le córais bainistíochta cáilíochta.
HR - Proizvođač, i osoba ovlaštena za sastavljanje tehničke dokumentacije, izjavljuju pod svojom punom odgovornošću da je stroj na koji se odnosi ova izvjava sukladan bitnim zahtjevima sljedećih direktiva: Direktive o strojevima 2006/42/EC - Direktive o elektromagnetnoj kompatibilnosti 2014/30/EU - Direktive 2011/65/EU izmijenjena i dopunjena 2015/863/EU - Direktive WEEE 2012/19/EU - Direktive 2014/53/EU. Također, jamči se da su projektiranje stroja i njegova proizvodnja izvedeni i dokumentirani sljedeć precizne tvorničke procedure sukladne normi EN ISO 9001:2015 o sustavima upravljanja kvalitetom.
HU - A gyártó, valamint a műszaki fűzet összeállítására felhatalmazott személy saját felelősségű tudatában kijelentik, hogy a jelen nyilatkozat tárgyát képező gép megfelel az alábbi irányelvek alapvető rendelkezéseinek: 2006/42/EC Gépek irányelv - 2014/30/EU Elektromágneses kompatibilitás irányelv - 2011/65/EU irányelv, módosítással módosított 2015/863/EU irányelv - WEEE 2012/19/EU irányelv - 2014/53/EU irányelv. A gyártó garantálja továbbá, hogy a gép tervezése, kivitelezése, valamint a folyamat dokumentálása az üzemi előírások precíz betartásával történt, a minőségkezelési rendszerekkel foglalkozó EN ISO 9001:2015 szabvánnyal összhangban.
IS - Framleiðandinn, og einstaklingurinn sem hefur heimild til að taka saman tekniskjölin, vottar, í eigin ábyrgð, að vélin sem viðar er til í þessari yfirlýsingu, sé í samræmi við þær grunnkröfur sem gert er ráð fyrir í eftirfarandi reglugerðum: Vélátalskipun 2006/42/EC - Tilskipun um rafsegulviðsamhæfi 2014/30/EU - Tilskipun 2011/65/EU eins og henni var breytt með 2015/863/EU - Tilskipun WEEE 2012/19/EU - Tilskipun 2014/53/EU. Ennfremur er ábyrgð að hönnun vélarinnar og tengd framleiðsla fer fram, og er það skjalfest, í samræmi við nákvæmt framleiðsluferil og í samræmi við EN ISO 9001:2015 staðalinn um gæðastjórnunarkerfi.
LT - Gamintojas ir asmuo įgijotas sudaryti techninę dokumentaciją, savo atsakomybe pareiškia, kad staklės, kurioms skirta ši deklaracija, atitinka esminius šių direktyvų reikalavimus: Mašinų direktyva 2006/42/EC - Elektromagnetinio suderinamumo direktyva 2014/30/EU - Direktyva 2011/65/EU su pakeitimais, padarytais 2015/863/EU - Direktyva WEEE 2012/19/EU - Direktyva 2014/53/EU. Taip pat užtikrinama ir dokumentais patvirtinama, kad staklės buvo sukurtos ir pagamintos tiksliai laikantis gamybos reikalavimų pateiktų EN ISO 9001:2015 standarte, dėl kokybės valdymo sistemos.
LV - Ražotājs un persona, kas ir pilnvarota sastādīt tehnisko dokumentāciju, apliecina uz savu atbildību, ka mašina, uz kuru šī deklarācija attiecas, atbilst šādu direktīvu: pamatprasībām Mašīnu Direktīva 2006/42/EC - Elektromagnētiskās saderības Direktīva 2014/30/EU - Direktīva 2011/65/EU grozīta ar 2015/863/EU panti - Direktīva WEEE 2012/19/EU - Direktīva 2014/53/EU. Tiek arī nodrošināts, ka mašīnas dizains, pēc precīziem biznesa procesiem atbilst standartā EN ISO 9001:2015 prasībām attiecībā uz vadības sistēmu kvalitāti.
MT - Il-manifattur, u l-persuna awtorizzata bax tikompila l-fajl tekniku jidjikkjaraw taht i l-responsabilita tagħhom stess li il-magna li għaliha qed isir din id-dikjarazzjoni hija konformi għar-rekwiżiti essenzjali previsti mid direttivi li ġejjin: Direktiva dwar il-Magni 2006/42/EC - Direktiva dwar il-Kompatibilità Elettronmagjetika 2014/30/EU - Direktiva 2011/65/EU kif emendata b'2015/863/EU - Direktiva WEEE 2012/19/EU - Direktiva 2014/53/EU. Dan jgħura wkoll li l disinn tal magna u l-produzzjoni tagħha jsru, u jgu ddokumentati wara proċess tan-nejgozju preċiż li huma konformi ma' EN ISO 9001:2015 dwar is-sistemi ta' gestjoni tal-kwalita.
NL - De fabrikant en gemachtigde voor het samenstellen van het technisch dossier verklaart dat het betreffende toestel voldoet aan de toepasselijke fundamentele voorschriften van de volgende richtlijnen: Machinerichtlijn 2006/42/EC - EMC-richtlijn 2014/30/EU - Richtlijn 2011/65/EU zoals gewijzigd bij 2015/863/EU - Richtlijn WEEE 2012/19/EU - Richtlijn 2014/53/EU. Verder wordt gegarandeerd dat het ontwerp en de productie van het toestel werd gedocumenteerd en geïmplementeerd volgens de vereisten van de norm EN ISO 9001:2015 voor kwaliteitsmanagementsystemen.
NO - Produzenten og den personen som er autorisert til å utstede den tekniske dokumentasjonen, erklærer under eget ansvar, at den maskinen denne erklæringen viser til, er i samsvar med de grunnleggende kravene som fremsettes i følgende direktiv: Maskindirektivet 2006/42/EC - Direktivet om elektromagnetisk kompatibilitet 2014/30/EU - Direktiv 2011/65/EU som endret ved 2015/863/EU - Direktiv WEEE 2012/19/EU - Direktiv 2014/53/EU. Det garanteres videre at utformingen av maskinen og den påfølgende framstillingen er blitt utført og dokumentert etter spesifikke prosedyrer for selskapet, i samsvar med regelverket NS-EN ISO 9001:2015 om ledelsessystem for kvalitet.
PL - Producent oraz osoba upoważniona do sporządzenia dokumentacji technicznej zaświadcza na własną, wyłączną odpowiedzialność, że maszyna, której dotyczy niniejsza deklaracja, jest zgodna z zasadniczymi wymaganiami przewidzianymi w następujących dyrektywach: Dyrektywa Maszynowa 2006/42/EC - Dyrektywa Kompatybilności Elektromagnetycznej 2014/30/EU - Dyrektywa 2011/65/EU zmieniona przez 2015/863/EU - Dyrektywa WEEE 2012/19/EU - Dyrektywa 2014/53/EU. Ponadto gwarantuje się, że fazy projektowania oraz produkcji maszyny zostały przeprowadzone oraz są udokumentowane według dokładnych procedur zakładowych, zgodnych z normą EN ISO 9001:2015, dotyczącą systemów zarządzania jakością.
PT - O fabricante e a pessoa autorizada a preencher o documento técnico declaram, a sua inteira e exclusiva responsabilidade, que a máquina a que se refere esta declaração está em conformidade com os requisitos essenciais estabelecidos pelas seguintes diretivas: Diretiva Máquinas 2006/42/EC - Diretiva Compatibilidade Eletromagnética 2014/30/EU - Diretiva 2011/65/EU alterada pela 2015/863/EU - Diretiva WEEE 2012/19/EU - Diretiva 2014/53/EU. É também garantido que a conceção e produção da máquina são efetuadas e documentadas de acordo com procedimentos empresariais específicos em conformidade com a norma EN ISO 9001:2015 relativa aos sistemas de gestão da qualidade.
RO - Fabricantul și persoana autorizată pentru realizarea dosarului tehnic declară pe propria răspundere că mașina la care se referă prezenta declarație se conformează cerințelor esențiale prevăzute de următoarele directive: Directiva 2006/42/EC Mașini - Directiva 2014/30/EU Compatibilitatea electromagnetă - Directiva 2011/65/EU astfel cum a fost modificat de 2015/863/EU - Directiva WEEE 2012/19/EU - Directiva 2014/53/EU. Se garantează, de asemenea, că proiectarea mașinii și producția acesteia, documentate corespunzător, se efectuează cu respectarea unor proceduri de înțelegere specifice, conforme cu standardul EN ISO 9001:2015 aferent sistemelor de management al calității.
SK - Vytvořa a osoba poverená vypracovaním technickej dokumentácie na vlastnú zodpovednosť prehlasujú, že stroj, na ktorý sa toto prehlásenie vzťahuje, je v súlade so základnými požiadavkami, ktoré vyžadujú nasledujúce smernice: Smernica o strojných zariadeniach 2006/42/EC - Smernica o elektromagnetickej kompatibiliti 2014/30/EU - Smernica 2011/65/EU zmenená a doplnená 2015/863/EU - Smernica WEEE 2012/19/EU - Smernica 2014/53/EU. Ďalej sa zaručuje, že stroj bol navrhnutý a vyrobený, a výroba je zdokumentovaná, v súlade s presnými firmnými postupmi, ktoré zodpovedajú norme EN ISO 9001:2015 o systémoch riadenia kvality.
SL - Protizvajalec in oseba, pooblašena za sestavo tehničnega dokumenta, s polno odgovornostjo izdaja potrdilo, da je stroj, predmet te izjave, izdelan v skladu z osnovnimi zahtevami, kot jih določajo predpisi: Direktiva o strojih 2006/42/EC - Direktiva o elektromagnetni združljivosti 2014/30/EU - Direktiva 2011/65/EU kakor je bila spremenjena z 2015/863/EU - Direktiva WEEE 2012/19/EU - Direktiva 2014/53/EU. Jamčimo tudi za obliko sistema in predmetno izdelavo, pri katerih smo opravili postopke in pripravi ustrezno dokumentacijo v skladu z ustreznimi tovarniško prakso in predpisom EN ISO 9001:2015, ki velja za sisteme zagotavljanja kakovosti.
SV - Tillverkaren och den person som har befogenhet att sammanställa den tekniska dokumentationen intygar, på eget ansvar, att maskinen denna försäkran hänvisar till överensstämmer med de väsentliga krav som ställs av följande direktiv: Maskindirektivet 2006/42/EC - Direktivet om elektromagnetisk kompatibilitet 2014/30/EU - Direktivet 2011/65/EU ändrat genom 2015/863/EU - Direktivet WEEE 2012/19/EU - Direktivet 2014/53/EU. Det garanteras vidare att utformningen av maskinen och därtill hörande tillverkning genomförs dokumenterat, i enlighet med exakta fabriksförfaranden som följer standard EN ISO 9001:2015 om system för kvalitetsstyrning.
TR - Üretici ve teknik dosyay oluşturmada görevli kişi bu beyanını ilgili ölçüde makinanın, aşağıdaki direktifler tarafından engellenen temel gerekliliklere uygun ölçülerini kendi sorumluluğu altında beyan eder: 2006/42/EC Makine Direktifi - 2014/30/EU Elektromanyetik Uyumluluk Direktifi - 2015/863/EU tarafından değiştirilen 2011/65/EU sayılı Direktif - WEEE 2012/19/EU Direktifi - 2014/53/EU Direktifi. Bundan başka, makinanın tasarımı ve ilgili üretimi, kalite yönetimi sistemlerine ilişkin EN ISO 9001:2015 standardına uygun kesin işletme prosedürlerinin izlenmesi yoluyla gerçekleştirilmesi ve belgelendirilmesi sağlanır.

UK Declaration of Conformity

Description	AUTOMATIC DISPENSER
Model	[MACHINE NAME]
Serial Number	
Manufacturer:	COROB S.p.A. Via Agricoltura, 103 - 41038 San Felice s/P (MO) – Italy

The manufacturer certifies, under its own responsibility, that the machine to which this statement refers to, complies with the relevant statutory requirements applicable to the specific machine:

- The Supply of Machinery (Safety) Regulations 2008 (S.I. 2008:1957)
- The Electrical Equipment (Safety) Regulations 2016 (S.I. 2016:1101)
- The Electromagnetic Compatibility Regulations 2016 (S.I. 2016:1091)
- The Restriction of the Use of Certain Hazardous Substances in Electrical and Electronic Equipment Regulations 2012 (S.I. 2012 No. 3032)
- The Waste Electric and Electronic Equipment (WEEE) Regulations 2013
- The Radio Equipment Regulations 2017 (S.I. 2017:1206)

[Name and Surname of Special Proxy Holder in charge]

COROB S.p.A.

San Felice sul Panaro, DD/MM/YYYY

1 / 1 | UK DOC IT DSP_01 01_2025

COROB S.p.A.

corob.com

con Socio Unico
Società soggetta a direzione e
coordinamento da parte di Graco Inc.

Via Agricoltura, 103
41038 San Felice s/P (MO) - Italy
p +39 0535 663111
f +39 0535 663285

C.F./P.I./R.I. Modena 03754020968
Cap. Soc. € 12.150.000 i.v.
R.E.A. MO 343030

8.4 Warranty

In order for the warranty to be valid, please complete the form included in the machine packing, and send it to the address listed on the form itself.



ATTENTION

Contact our authorized and qualified personnel only for all your service needs. Use only original spare parts for all maintenance and replacement interventions.

Altering or removing the guards and safety devices provided on the machine will not only void the warranty immediately, but is also dangerous and illegal.


The manufacturer may not be held liable for personal injury or property damage caused by improper use of the equipment or tampering with the guards and safety devices installed on the machine.

The following shall **void the manufacturer's warranty**:

- Improper use of the machine.
- Failure to observe the instructions and maintenance rules set forth in the manual.
- Making or having changes and/or repairs made on the machine by personnel outside the service organization authorized by the manufacturer and/or made using non-original spare parts.

9 ASSEMBLY INSTRUCTIONS

9.1 Manual plugger

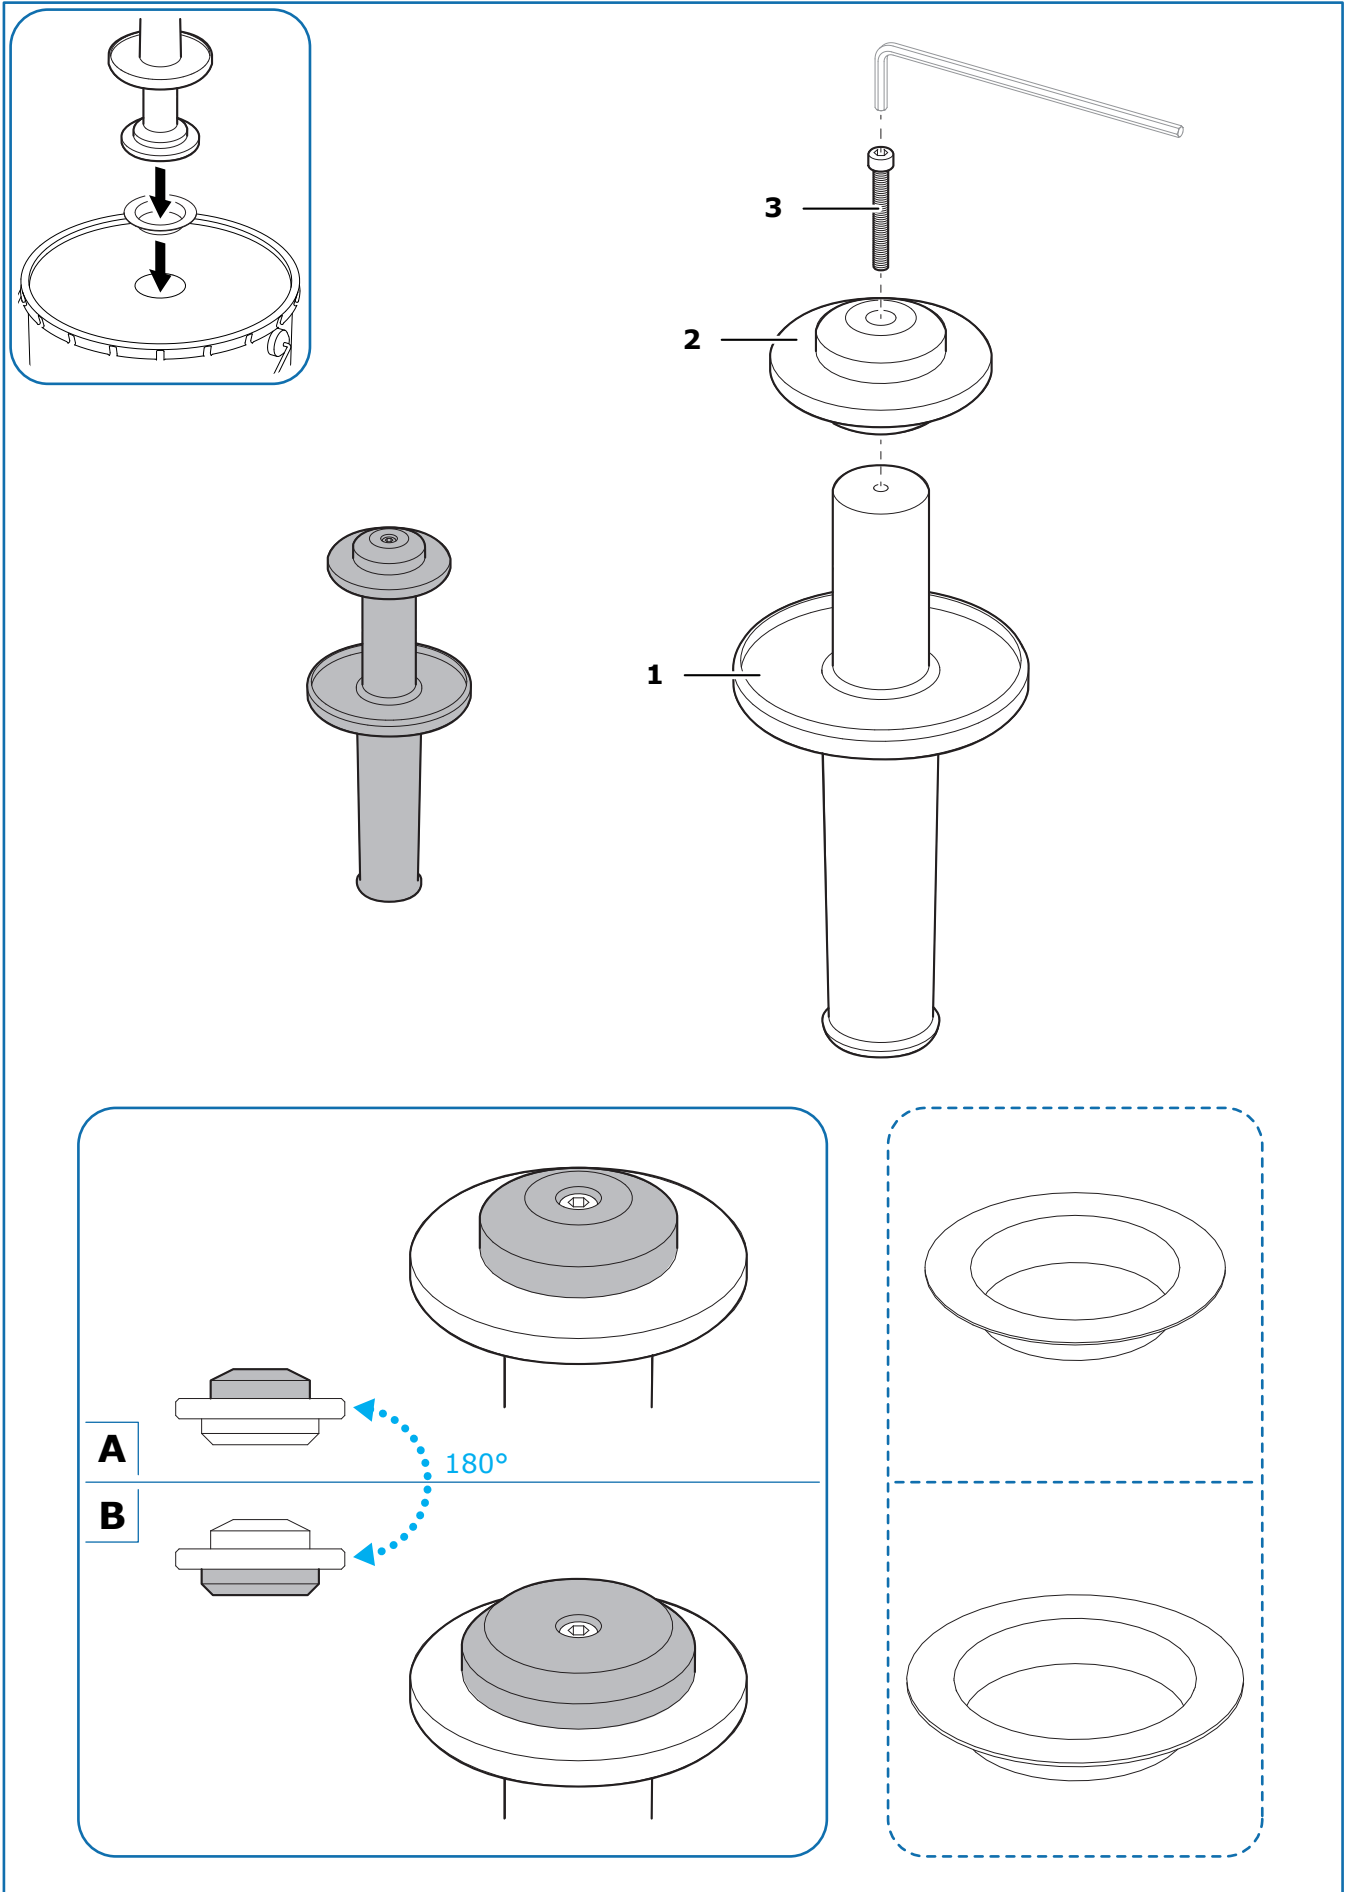

10 SUPPORT ASSEMBLY INSTRUCTIONS

Installation must be carried out only by qualified personnel.

Personnel in charge of these operations must wear the following personal protective equipment:




MECHANICAL RISK PROTECTION GLOVES (TEAR, WEAR)

10.1 Monitor support kit assembly instructions

SAFETY INSTRUCTIONS	
	The assembly must be carried out exclusively by specialized personnel. Read the instructions before proceeding with the assembly.
	Wear Personal Protective Equipment during assembly stages.
	Do not exceed the maximum load allowed on the support arm: 11 kg / 24 lb.
	Do not place any objects other than monitor, keyboard and mouse on top of the support kit.


10.1.1 Box contents

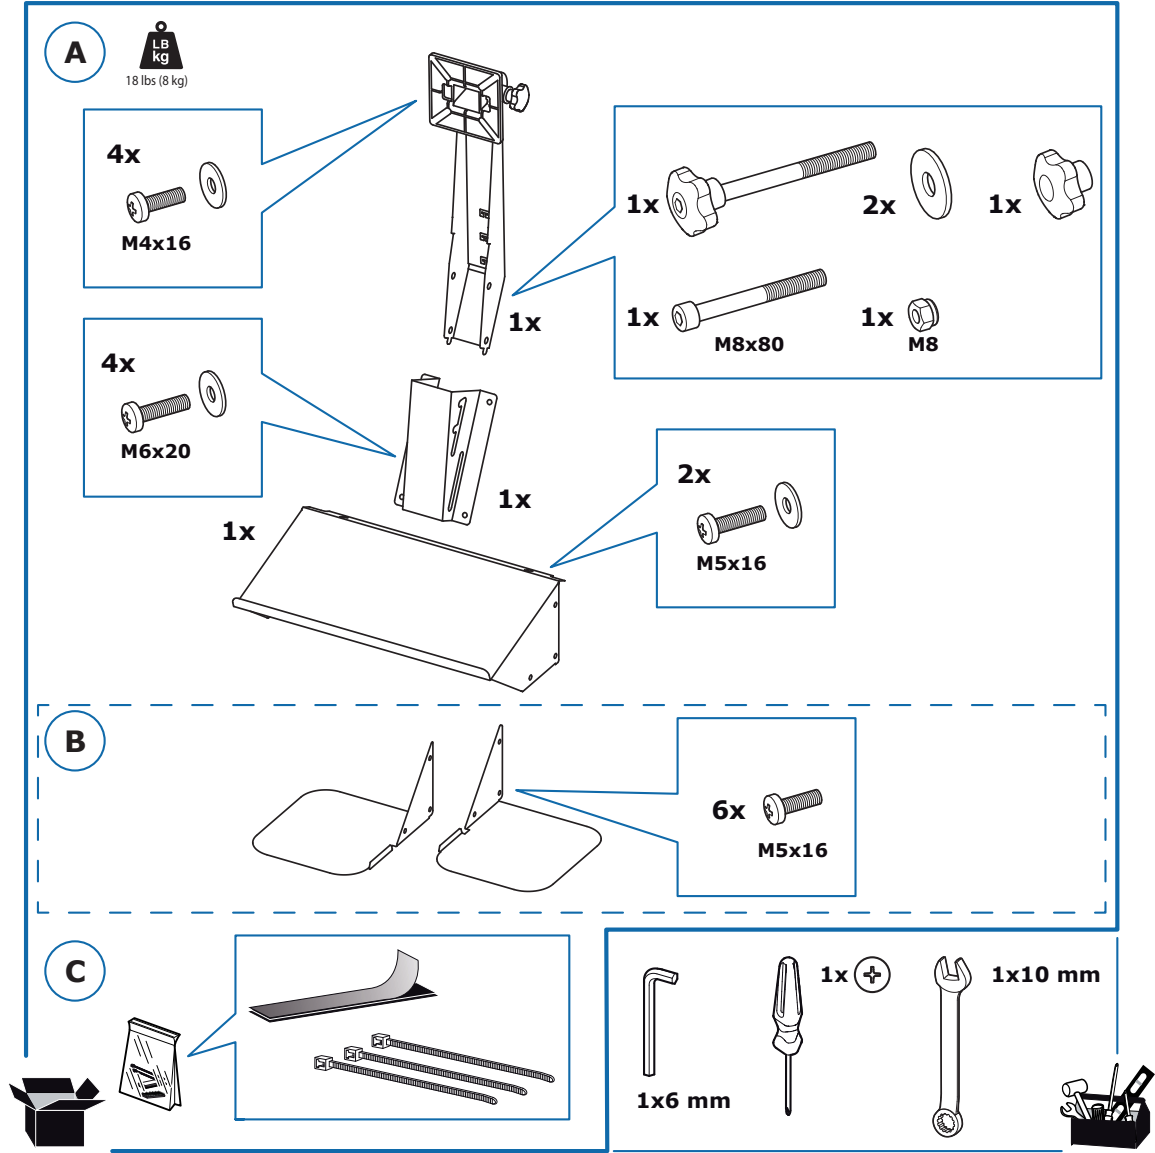

- **A** - Computer, monitor and keyboard support kit, with corresponding mounting screws and knobs.
- **B** - Mouse support shelves (optional).
- **C** - Material to secure cables and keyboard.


10.1.2 Mounting the mouse support shelves (optional)

Working on a bench, mount the two mouse support shelves on the keyboard support shelf.

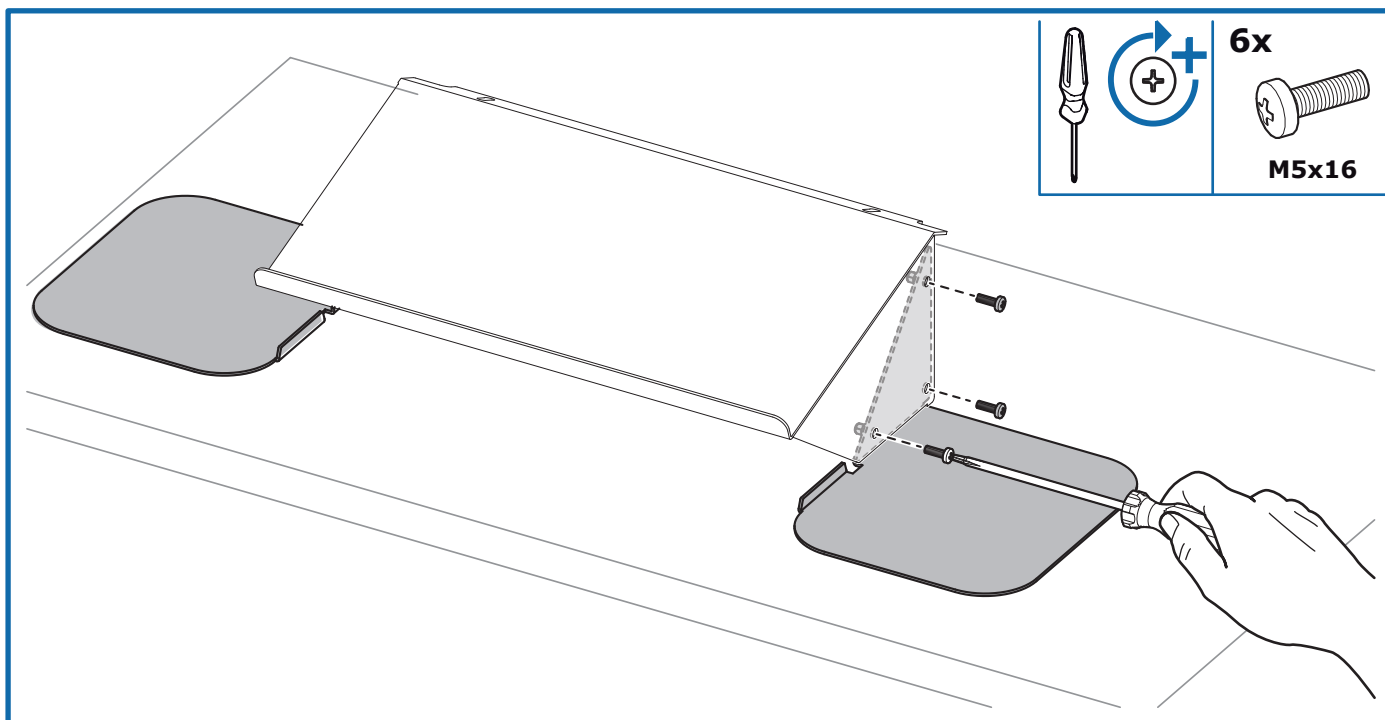


10.1.3 Mansioning connection cables

Remove the screws of the machine front panel, tilt it forward and mansion the cables in the slots provided. Once done, screw back the front panel.

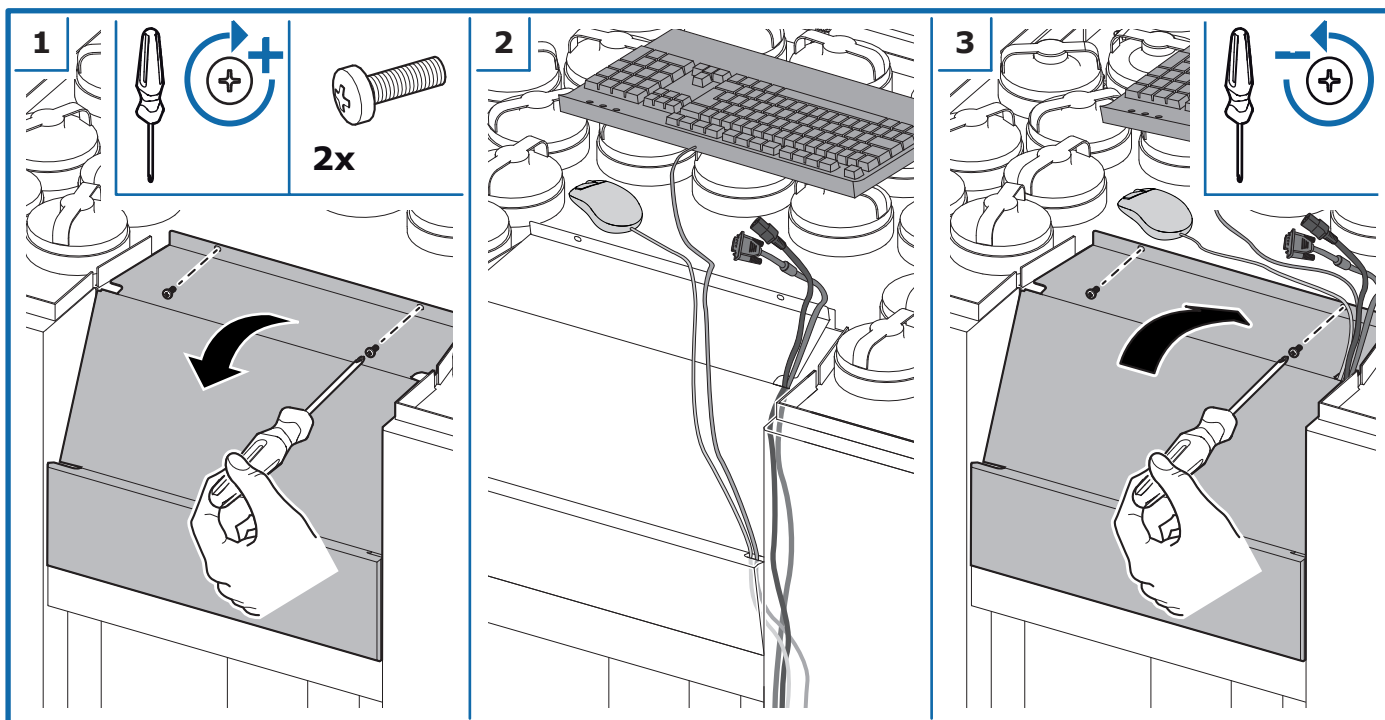


10.1.4 Mounting the column support

Mount the column support on the machine front panel.

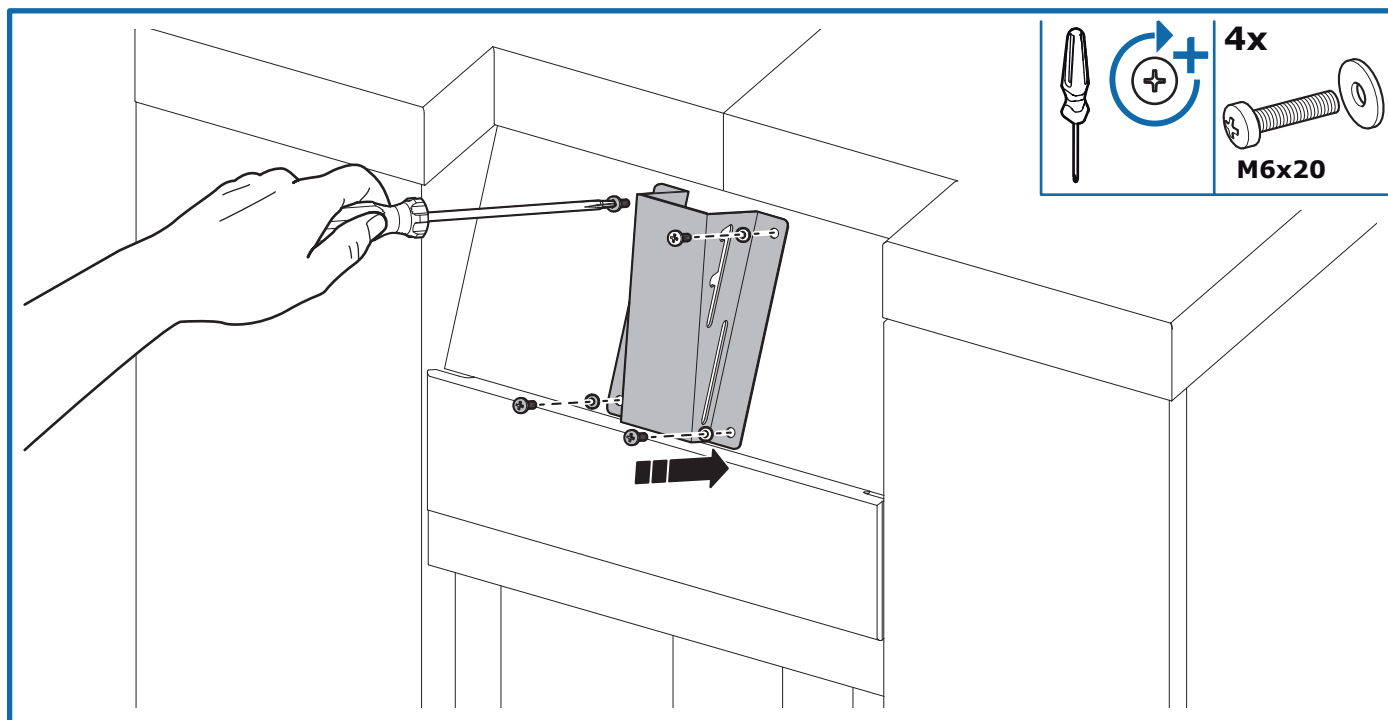

10.1.5 Mounting the keyboard support shelf

Mount the keyboard support shelf on the machine front panel.

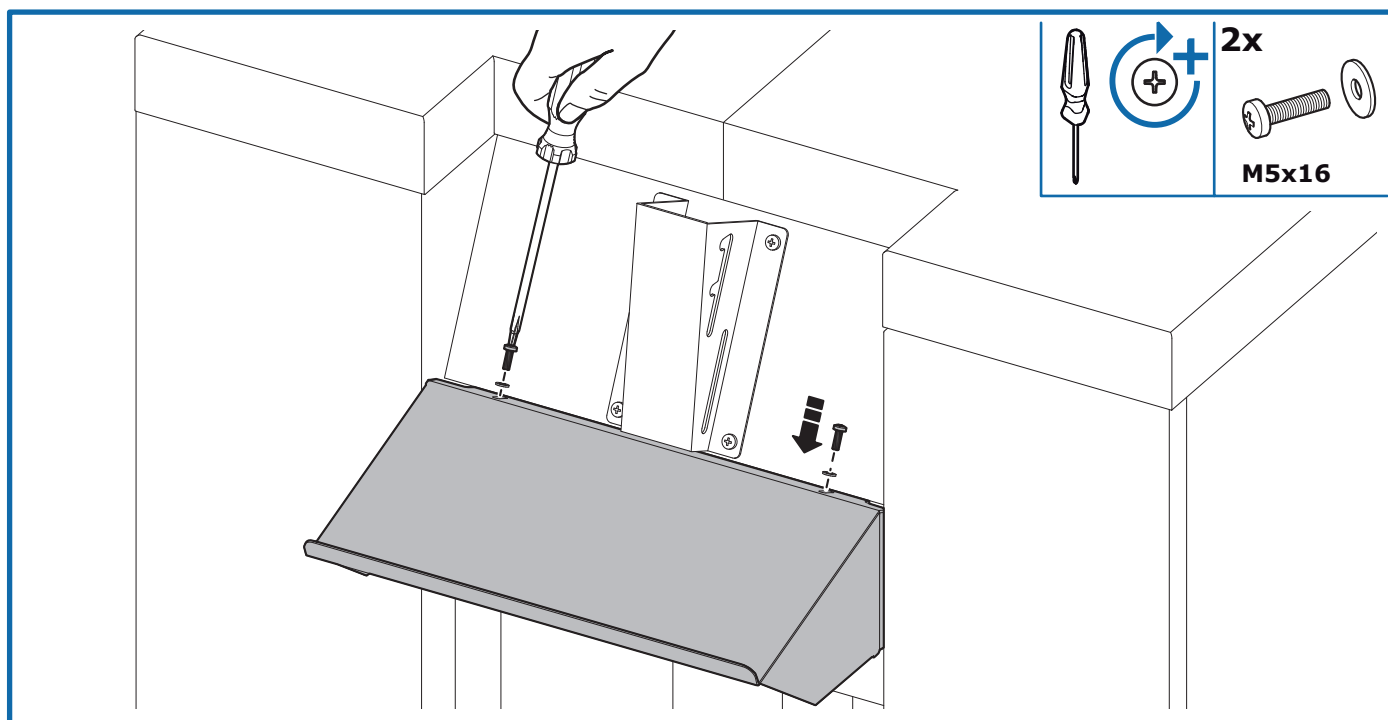


10.1.6 Mounting the monitor on the column

1. Working on a bench, secure the monitor to the column.


10.1.7 Mounting the column on the machine

2. Insert the column in the support.
3. Mount the two knobs and the mounting screw.
4. Connect the signal and power cables to the monitor and secure the cables using the cable ties.

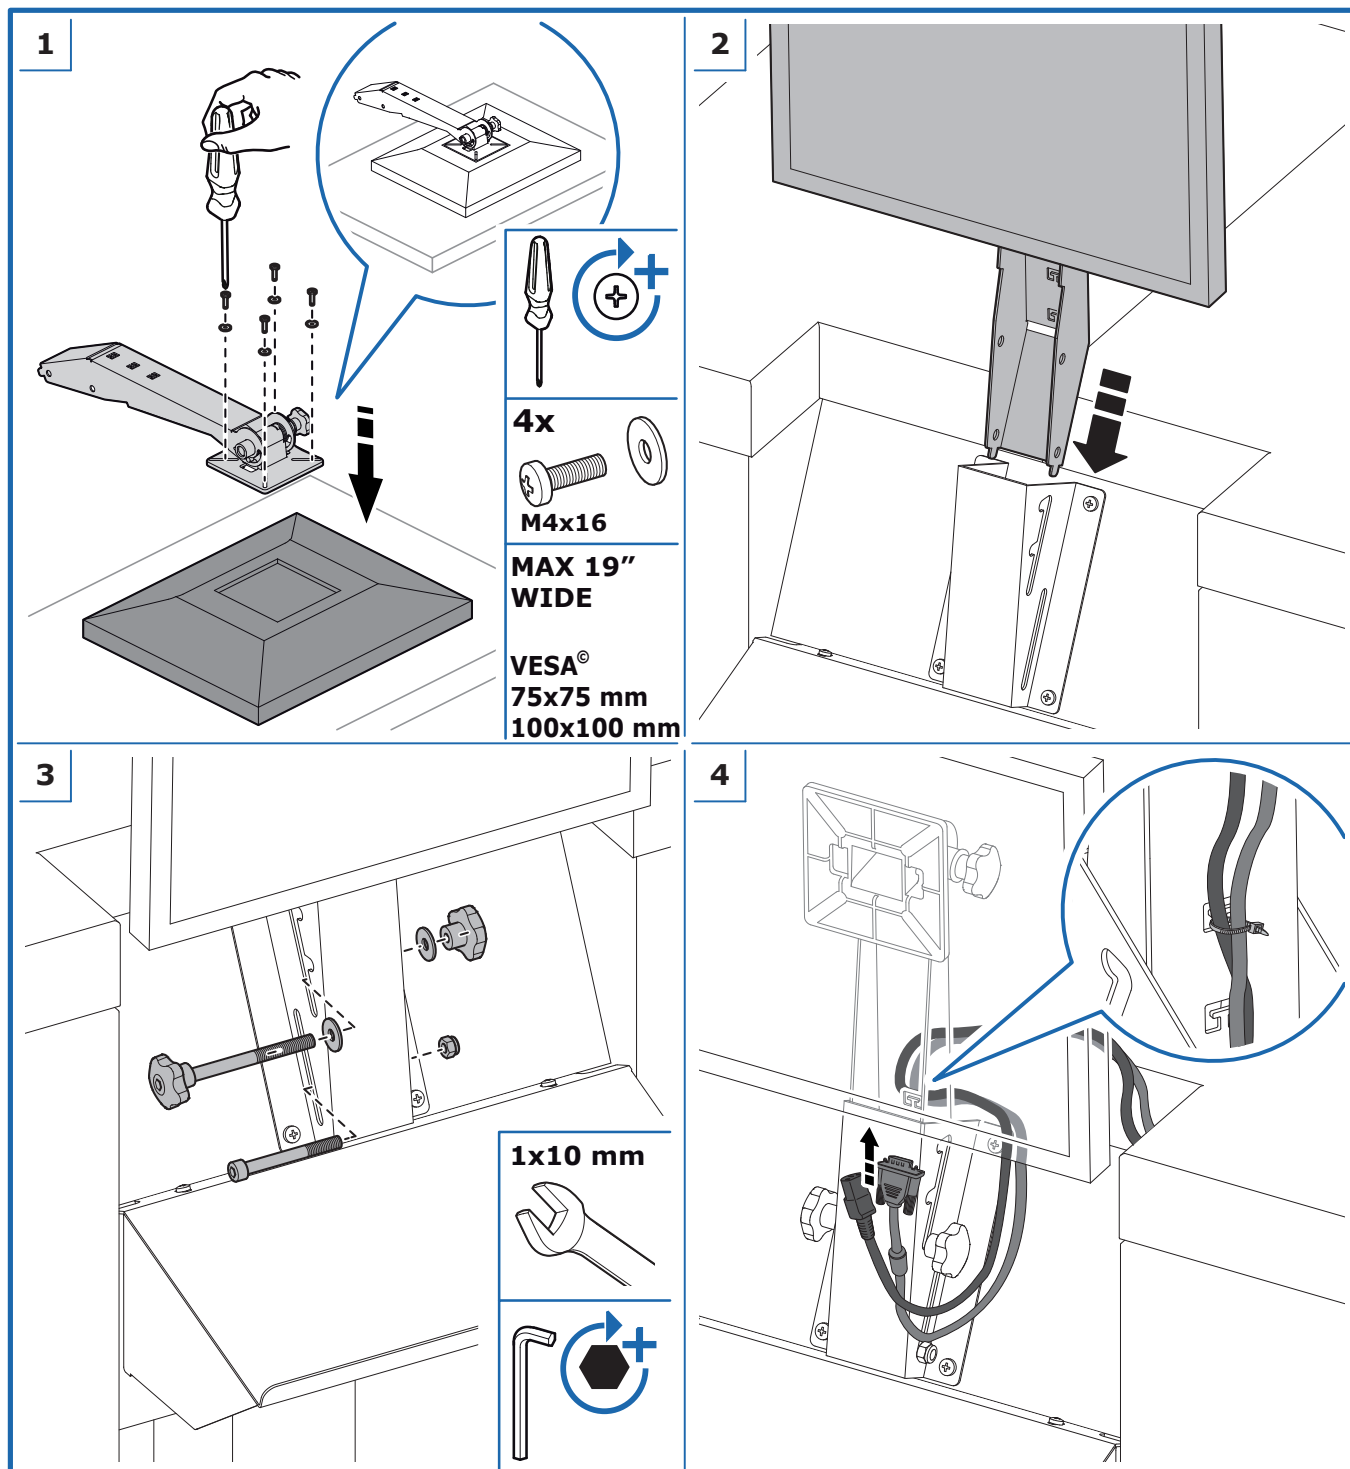

10.1.8 Preparing the workstation

1. Adjust the height of the monitor support column.
2. Adjust monitor position with the knobs as desired.
3. Place keyboard and mouse on the corresponding support shelves.
4. Connect the cables as needed.

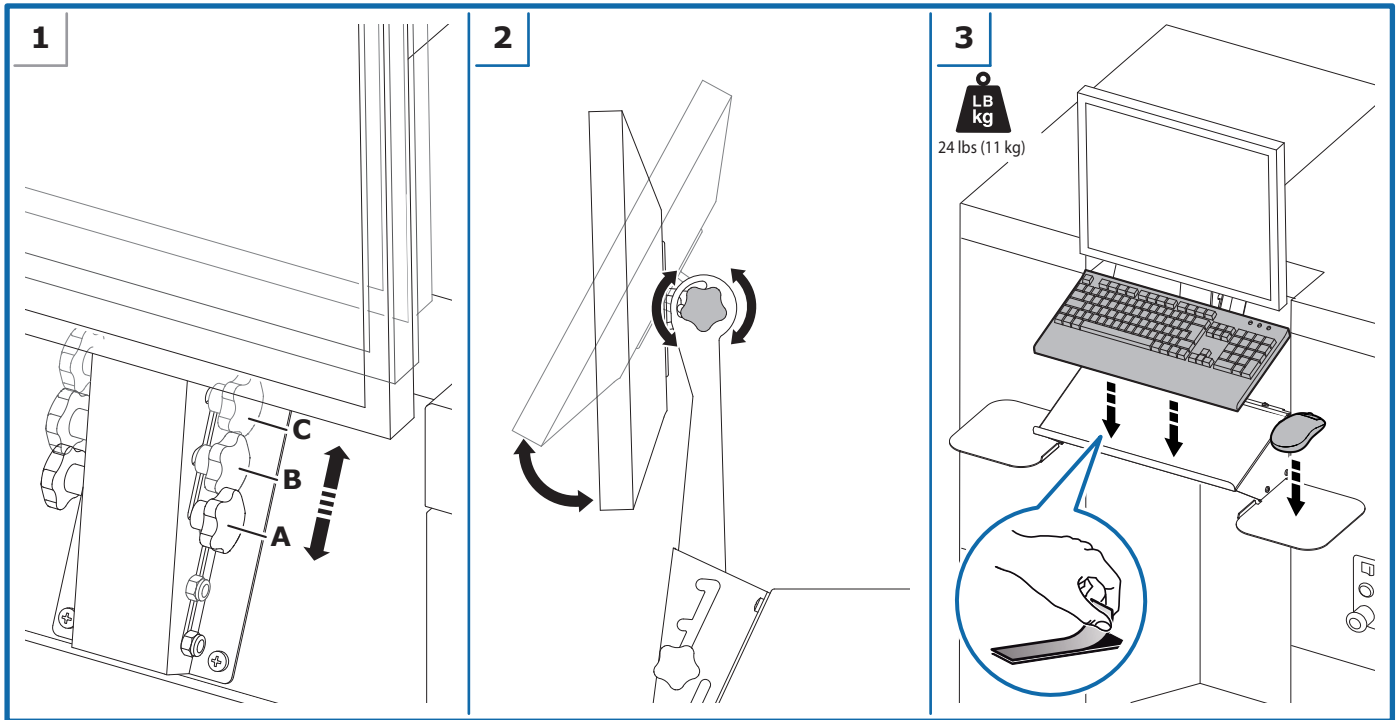

10.2 LCD support assembly instructions



ATTENTION

Do not install LCD monitors with characteristics other than those indicated.

