


CLEVERmix 20

V02

Gyroscopic mixer

User's Manual

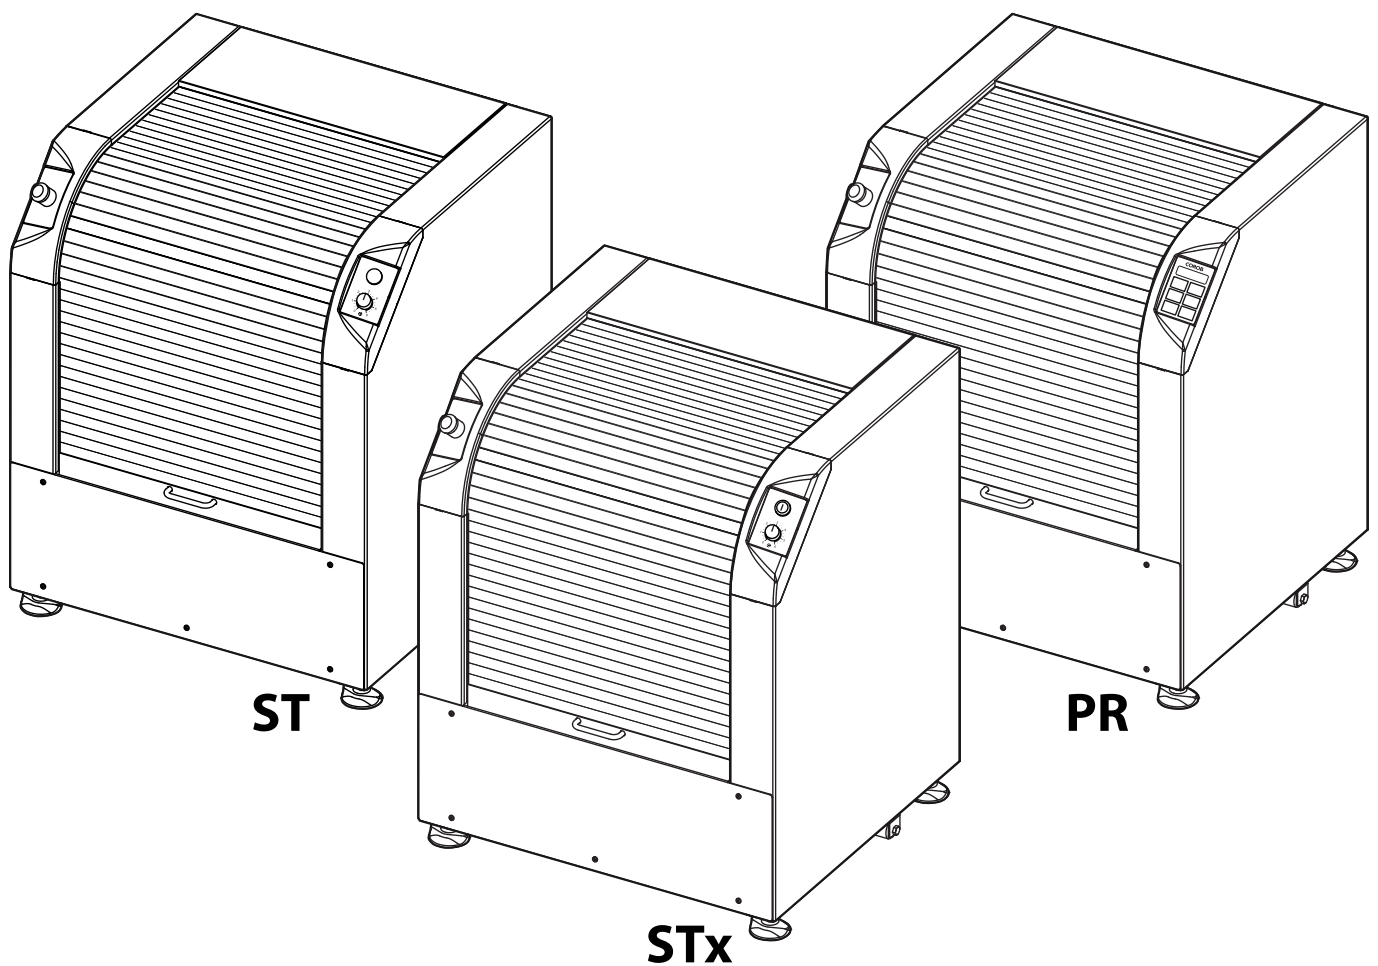

COPYRIGHT

© COPYRIGHT 2025, COROB S.p.A.

All rights reserved in all countries

If you require additional copies of this manual or further technical information about it, please write to:

Corob S.p.A., with a sole shareholder, a company subject to the management and coordination of Graco Inc.

Via Agricoltura 103 • 41038 San Felice s/P • Modena • Italy

Phone: +39-0535-663111 • Fax: +39-0535-663285

COROB India Pvt. Ltd.

Regd. Office: 502 & 503, Kohinoor City Wing A Office Area Industrial Estate and Premises Cooperative Society Ltd.,

Wing B, 5th Floor, Kirol Road, Off LBS Marg, Kurla Mumbai Mumbai MH 400070 IN

Phone: +91 22 6649 7777

Factory: Shed No 1-B and 1-A, Nandigram Realtors, N H No 48,

Near Nandigram Jain Temple, Umbergaon, Bhilad, Valsad, Gujarat, 396105

Phone: +91 7211199701

www.corob.com

INTELLECTUAL PROPERTY RIGHTS AND DISCLAIMER

No part of this manual may be translated into any other languages and/or adapted and/or reproduced in any form, or by any means, electronic or mechanical, including but not limited to photocopying and recording, without prior written permission of COROB S.p.A.

COROB is a registered trademark and/or commercial trademark used on an exclusive basis by COROB S.p.A. and its affiliated companies (hereinafter "COROB").

A failure of a trademark to appear hereunder does not mean that COROB does not use the trademark in question nor does it constitute a waiver by COROB of any related intellectual property rights.

Valuable proprietary technical information contained in the present manual are referring to proprietary know-how, designs, drawings and/or applications used on an exclusive basis by COROB frequently covered by Patents and/or Patent Applications and thus protected by International and National Intellectual Property Laws.

Unless otherwise indicated, all references to the names, data and addresses of companies other than COROB and its affiliated companies are purely examples and serve to clarify the use of the COROB products.

COROB has carefully reviewed the wording and images contained in the present manual, nevertheless COROB reserves the right to modify and/or update the information herein to correct editorial errors and/or inaccuracy of the information herein without notice or commitment on its part.

This manual contains all information necessary for the foreseeable and normal use of the COROB products by the final user.

The manual does not contain guidelines and/or information for product repair. For safety reasons, only trained and authorised technical personnel should perform such interventions. Failure to do so may result in personal injury or damage to the product.

For the purpose mentioned above, COROB has appointed authorised technical personnel.

Authorized technical personnel shall mean technicians who have attended a technical training course held by COROB and/or its affiliated companies.

Unauthorised interventions could void the warranty coverage of your COROB product pursuant to the sales contract or to the General Sales Conditions of COROB. COROB can be held responsible only within the limits of the warranty coverage provided by the General Sales Conditions.

COROB does not intend to limit or exclude its liability against any statutory provisions under any applicable law. Therefore the reference to above warranty limitations or exclusions may not apply.

The final user can ask COROB or visit the web site www.corob.com for contact details about the nearest authorized technical service.

COPYRIGHT	2
1 GENERAL INFORMATION	5
1.1 Purpose and use of the manual.....	5
1.1.1 <i>Conventionally used graphics</i>	5
1.2 Definitions	5
2 PROPERTIES	6
2.1 Description of the machine.....	6
2.2 Usable cans.....	7
2.3 Intended use and misuse	7
2.4 Identifying information	8
3 SAFETY.....	9
3.1 Safety warnings and unauthorized use.....	9
3.2 Warnings on the use of products	10
3.3 Residual risk.....	11
3.4 Position of labels	13
3.5 Safety devices	14
3.5.1 <i>Checking the safety devices</i>	15
3.6 Emergency stop	15
3.7 Resetting the machine after an emergency stop	15
3.8 Emergency situations.....	16
3.9 Requirements of the installation site	16
4 SHIPPING AND HANDLING	17
4.1 General warnings.....	17
4.2 Unpacking and placement.....	17
4.2.1 <i>Use of a lifting device</i>	18
4.2.2 <i>Removal from the pallet without lifting equipment</i>	20
4.3 Standard material supplied	20
4.4 Storage.....	21
4.5 Disposal and recycling	21
5 STARTING UP	22
5.1 General warnings.....	22
5.2 Grounding instructions (ETL version only).....	22
5.3 Control devices model ST	24
5.4 Control devices model STx.....	25
5.5 Control devices model PR.....	25
5.6 Connections.....	26
5.7 Electrical connection and start-up	27
5.7.1 <i>Machine information (PR model only)</i>	27
5.8 Shut-down	28
6 USE.....	29
6.1 General warnings.....	29
6.2 Loading of cans	29
6.3 Running a mixing cycle, model ST	31
6.3.1 <i>Advance stop</i>	32
6.4 Running a mixing cycle, model STx	32
6.4.1 <i>Advance stop</i>	32
6.5 Running a mixing cycle, model PR	33
6.5.1 <i>Advance stop</i>	33
6.5.2 <i>Error conditions (model PR only)</i>	34

7	ORDINARY MAINTENANCE	35
7.1	General warnings.....	35
7.2	Cleaning.....	35
7.2.1	<i>External cleaning</i>	35
7.2.2	<i>Internal cleaning</i>	35
7.3	Lubrication.....	36
7.3.1	<i>Lubricating the clamping screws</i>	36
7.3.2	<i>Lubricating the door sliding guides.....</i>	37
8	TECHNICAL SPECIFICATIONS	38
8.1	Technical data.....	38
8.2	Dimensions and weight.....	39
8.3	Declaration of conformity	40
8.4	Warranty.....	46

1 GENERAL INFORMATION

1.1 Purpose and use of the manual

Read this manual carefully before using the machine.

This manual contains instructions on the use and routine maintenance needed to uphold the machine's performance over time. The manual contains all information needed to correctly use the machine and avoid any accident.

The manual is to be considered an integral part of the machine, and must be stored until it is fully dismantled.

The manual contains all information available at the time of preparation regarding the machine and any accessories; for accessories, the manual includes any variations or changes that involve different operating procedures.

The manual could be available in paper (inserted in the product packing) or in digital format accessible from COROB website. It is possible to ask the manufacturer a paper copy of the manual.

Should it be lost or partially ruined, so that its contents can no longer be read in full, you must request a new manual from the manufacturer.

If the images contained in this manual show the machine without the guards and/or employees without personal protective equipment, it is only for the purpose to make clearer the discussion of the issues.

Some of the illustrations in this manual were taken from prototypes; some details may differ on machines in standard production.

1.1.1 Conventionally used graphics

Boldface type is used to highlight notes or information of particular importance to a topic.



HAZARD

Indicates a risk of personal injury.



WARNING

Indicates a risk of damage to the machine that could interfere with its operation.



ATTENTION

Indicates important instructions referring to precautionary rules and/or measures to adopt.



NOTE

Indicates situations and/or operations that involve the management software installed on the computer.

SAFETY INSTRUCTIONS

Indicates that to carry out the intervention described, the use of the specified tools is required.

1.2 Definitions

OPERATOR

A person familiar with the methods to produce paints or similar products, trained and authorized to operate and use the machine by its controls and to load and unload production materials with all safety devices installed and enabled. He or she must work only in safety conditions and is allowed to carry out routine maintenance operations.

MAINTENANCE TECHNICIAN/INSTALLATION TECHNICIAN

Specialist prepared and trained in a technical field (mechanical and electrical) and assigned by the manufacturer to work on the machine to perform machine installation, adjustments, repair breakdowns or carry out maintenance.

2 PROPERTIES

2.1 Description of the machine

The gyroscopic mixer **CLEVERmix 20 V02** with manual clamping system allows mixing of non-explosive paints contained into metal or plastic containers.


It is suitable to handle cans of different size and shape. With specially profiled clamping plates available for installation upon request, the machine can also handle square cans. The machine is also capable to mix more than one can simultaneously.

Positioning and clamping of the can must be performed manually by the operator.

The mixing cycle always ends with the can in vertical position.

The machine is equipped with a shutter door.

The models ST and STx are certified as ETL Standard compliant.

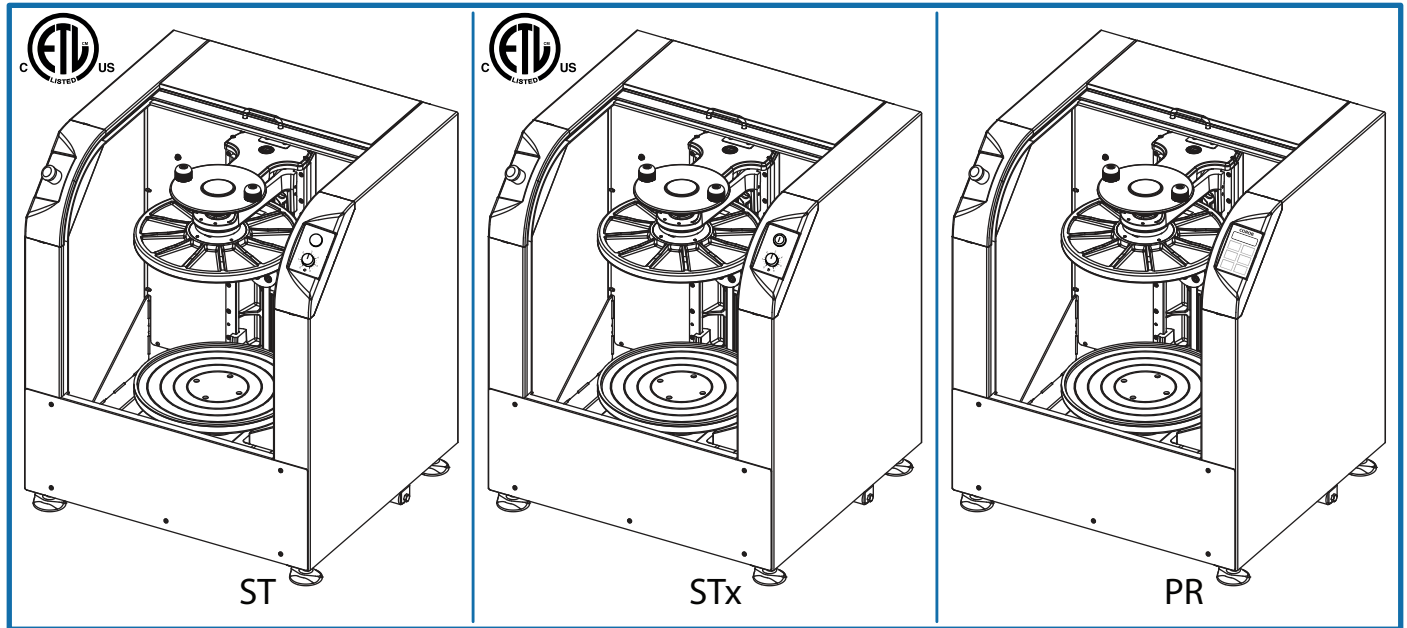

The machine is available in the following models:

CLEVERmix 20 V02 ST

A timer allows to set the desired mixing timer and to start the mixing cycle.

CLEVERmix 20 V02 STx

It features a timer to set the desired mixing time and a green illuminated button that allows to start the mixing cycle.

CLEVERmix 20 V02 PR

It features a membrane keyboard that allows to choose a pre-set mixing program.

The adjusting keys **+** and **-** allow to manually vary the pre-set mixing time.

A display shows the description of the pre-set program, the actions performed by the machine and any error messages.

2.2 Usable cans

	ST - Stx	PR
Mixing speed	self-adjusted, based on the weight /product features ratio (200 rpm max)	pre-set (customized cycles)
Maximum mixing time	approx. 6 min	9 min 45 sec
Clamping	Manual	
Working cycle	Continuous	
Direction of rotation of the mixing mechanics	monodirectional	bidirectional
Type of can	round - square - oval	
Maximum can weight	35 kg / 77 lb	
Minimum can height	without can adaptor: 100 mm [3.93"] with can adaptor: 89 mm [3.50"]	
Maximum can height (*)	410 mm [16.1"]	
Maximum can diameter	390 mm [15.3"]	

The maximum can height is lower if a custom can centering device is present on bottom plate or if the can adaptor is used.

2.3 Intended use and misuse

Intended use and reasonably foreseeable misuse

The machine is intended for professional use to mix non-explosive paints contained into metal or plastic containers.

To shake paints or tinting products that contain flammable solvents it is mandatory that these are packaged in UN approved containers.

The use of flammable paints or tinting products that can emit potentially explosive vapors can lead to explosion or fire risks.

To find out how to avoid the risk of generating dangerous situations for the operator or the risk of explosion or fire, consult the manufacturer of the products to be mixed (base, colorants).

Scrupulously follow the instructions for use given on the colorant package and carefully read the **MATERIAL SAFETY DATA SHEETS (MSDS)** that the dealer or manufacturer of the product is required to provide.

The machine must be used in small, medium and large point of sales or professional paint stores.

The machine must be used only within the limitations set forth by the technical specifications and according to the procedures described in this manual.

Any use of the machine other than that stated, which cannot be implied or deduced from this manual, is to be considered improper and unintended therefore it voids any manufacturer's liability arising from non-compliance with these requirements.

2.4 Identifying information

The machine has an identification plate (chapter [Position of labels](#)) indicating:

1. Manufacturer's name.
2. Marking.
3. Machine model.
4. Month and year of manufacture.
5. Serial number.
6. Electrical specifications.



ATTENTION

Do not remove or tamper with the identification plate in any way.

3 SAFETY

3.1 Safety warnings and unauthorized use



SAFETY INSTRUCTIONS

COMPULSORY

- **Read the user's manual carefully before carrying out any operation on the machine.**
- The machine must be used only for its intended purpose.
- Pay close attention to the signs on the machine.
- When prescribed, wear personal protective equipment.
- Only qualified and appropriately trained personnel (MAINTENANCE TECHNICIAN) are authorized to access the machine parts protected by panels for extraordinary maintenance and repair interventions.
- Any routine maintenance intervention performed by the operator must be carried out with the machine off and the power supply cable disconnected from the mains socket outlet.
- The machine must be used by a single operator. Unauthorized people who could reach or touch machine parts during operation must not be admitted in the nearby area.
- The workplace for the operator who must use the machine is located at the front.
- The machine must be used by an operator who has attained the age of majority and is in suitable psychophysical conditions defined by an occupational physician.
- The substances that may be used on the machine -- such as colorants, paints, solvents, lubricants and cleansers -- may be hazardous to your health; handle, store and dispose of these substances in keeping with current regulations and the instructions provided with the product.
- During routine maintenance operations, scrupulously follow the safety instructions given in the corresponding chapters before accessing the dangerous area.



SAFETY INSTRUCTIONS

PROHIBITED

- It is forbidden to use cans having characteristics other than those stated in this manual.
- It is forbidden to use the clamping movement of plates to close the can lid.
- It is forbidden to climb onto the machine.
- Do not use the machine as a working surface. Do not leave any objects on the machine during its operation.
- **THE MACHINE IS NOT EXPLOSION PROOF. DO NOT USE IT IN CLASSIFIED ZONES (ENVIRONMENTS AT RISK OF EXPLOSION).**
- Do not smoke near the machine.
- Avoid naked flames or material that may create sparks and cause a fire.
- The machine must not be employed for food use.
- The OPERATOR must not carry out operations reserved to the MAINTENANCE TECHNICIAN or the INSTALLATION TECHNICIAN. The manufacturer CANNOT BE HELD RESPONSIBLE for damages deriving from the non-observance of this prohibition.
- It is strictly forbidden to use the machine without protections or with any safety devices present on the machine disabled, broken down, or removed. The panels must be kept closed at all times.
- If the machine catches fire, **never use water**. Use only dry powder or carbon dioxide fire extinguishers, and strictly follow the instructions and warnings indicated by the manufacturer and listed on the extinguisher.



SAFETY INSTRUCTIONS

ELECTRICAL HAZARD

- The user must connect the machine to a TN or TT power supply system, equipped with an RCD (Residual Current Devices) protection device that automatically intervenes in the event of a fault.
- **ALWAYS PLUG THE MACHINE INTO A SOCKET THAT ENSURES PROPER GROUNDING.** The line must be protected from overloads, short-circuits and direct contacts according to current accident prevention regulations. Incorrect grounding may lead to the risk of electrical shock.
- The machine must not be powered by a power source having specifications other than those listed on the identification plate.
- To prevent any risk of electrical shock or injuries, use the machine indoors only. It is prohibited to use the machine outdoors where it could be subjected to rain or high humidity.
- Always unplug the power supply cable from the socket outlet before carrying out any maintenance operations.
- The machine is isolated from the power supply line when the power cable is disconnected; it must therefore be installed near an easily accessible mains socket outlet.
- Do not use extension cords to power the machine.
- Do not use multisockets to connect other equipment to the same socket that powers the machine.
- Periodically check the condition of the power supply cable; if it is damaged, replace it with a new cable supplied by the manufacturer.

3.2 Warnings on the use of products



HAZARD

The machine is suitable for use with tinting products in general. Scrupulously follow the instructions for use given on the product package and carefully read the **MATERIAL SAFETY DATA SHEETS** (MSDS) that the dealer or manufacturer of the product is required to provide.

Observe all of the safety instructions provided. When compulsory, wear the specified personal protective equipment.

Below are some of the most common warnings and safety precautions provided by tinting products manufacturers.

1. Harmful if swallowed.
2. Avoid eye and skin contact. In case of eye and skin contact, rinse with plenty of water.
3. Keep out of the reach of children.
4. When compulsory, wear the specified personal protective equipment.
5. In case of accidental product leaks or spills, thoroughly ventilate the area and proceed as indicated in this manual and in the instructions provided with the product itself.
6. Do not dispose of colorant in the sewage system. Follow local regulations when disposing of waste.

3.3 Residual risk

Risk
 Risk of electrocution - Risk of electrical shock if you power the machine from a socket not equipped with ground connection.
Preventive measure & P.P.E.
Power the machine through a grounded socket outlet.
Re. in the manual
ch. Starting up
Risk
 Risk of electrocution / burning - Risk of electrical shock if you access machine parts protected by panels without first cutting off electrical power.
Preventive measure & P.P.E.
<p>The operator is not authorised to access the machine parts protected by panels.</p> <p>For the maintenance technician: before performing any maintenance intervention, shut off the machine and disconnect the power supply cable from the mains socket outlet.</p> <p>Wait for some minutes before touching the motor.</p>
Risk
 Dorsal/lumbar injuries - Handling heavy loads when moving the machine and loading cans in the machine may cause injuries.
Preventive measure & P.P.E.
<p>Do not exceed the weight limits stated by the current regulations in force.</p> <p>Use appropriate lifting equipment or provide for two operators to carry out the task.</p>
 MECHANICAL RISK PROTECTION GLOVES (TEAR, WEAR)
Re. in the manual
ch. Shipping and handling - Use
Risk
 Risk of slipping / falling - Improper use of the machine (for example, use it as a ladder to take items from high shelves above the machine) can cause injuries.
Preventive measure & P.P.E.
It is forbidden to climb onto the machine.
Re. in the manual
ch. Use

Risk	
	Risk of falling objects / crushing - When loading a can in the machine, there is a risk it may fall onto the operator. During machine operation, any objects left on the machine may fall onto the operator.
Preventive measure & P.P.E.	
Position the can so that the whole base rests on the bottom clamping plate. Do not exceed the maximum weight allowed for the can or cans to be mixed. Do not use the machine as a working surface. Do not leave any objects on the machine during its operation.	
	MECHANICAL RISK PROTECTION GLOVES (TEAR, WEAR)
Re. in the manual	
ch. Usable cans - Use	
Risk	
	Risk of crushing - Improper movement of the door may cause injuries.
Preventive measure & P.P.E.	
Do not put objects on top of the machine. Keep your hands away from the dangerous area. Before performing any intervention, press the emergency stop button.	
	MECHANICAL RISK PROTECTION GLOVES (TEAR, WEAR)
Re. in the manual	
ch. Safety devices - Loading of cans	
Risk	
	Risk of cuts - Risk of injuries and abrasions caused by sharp edges and end parts of the cans to be handled.
Preventive measure & P.P.E.	
Wear appropriate personal protective equipment (gloves). Do not use the machine with damaged cans or cans not sealed properly.	
	MECHANICAL RISK PROTECTION GLOVES (TEAR, WEAR)
Re. in the manual	
ch. Use	
Risk	
	Risk of explosion
Preventive measure & P.P.E.	
Do not use the machine in classified areas (areas at risk for explosion). Avoid naked flames or material that may create sparks and cause a fire. Respect the conditions for the intended use of the machine and the recommendations indicated in chapter Intended use and misuse . Respect the environment working conditions indicated in chapter Requirements of the installation site .	
Re. in the manual	
ch. Intended use and misuse ch. Requirements of the installation site	

Risk



Risk of poisoning and sensitization - Eye and skin contacts and inhalation of vapors/powders caused by product spills from the can being broken.

Fumes generated by the colorants used may cause poisoning and/or sensitization during machine cleaning and disposal operations.

Preventive measure & P.P.E.

Do not use the machine with damaged cans or cans not sealed properly.

Read the warnings in the Material Safety Data Sheets of the colorants used. The MSDS must be provided by the colorant manufacturer.

Keep the room suitably ventilated.


Wear appropriate personal protective equipment (safety goggles, gloves and mask).

Personal Protective Equipment as specified in MSDS.

Re. in the manual

ch. [Warnings on the use of products](#) - [Shipping and handling](#) - [Use](#) - [Ordinary maintenance](#)

3.4 Position of labels

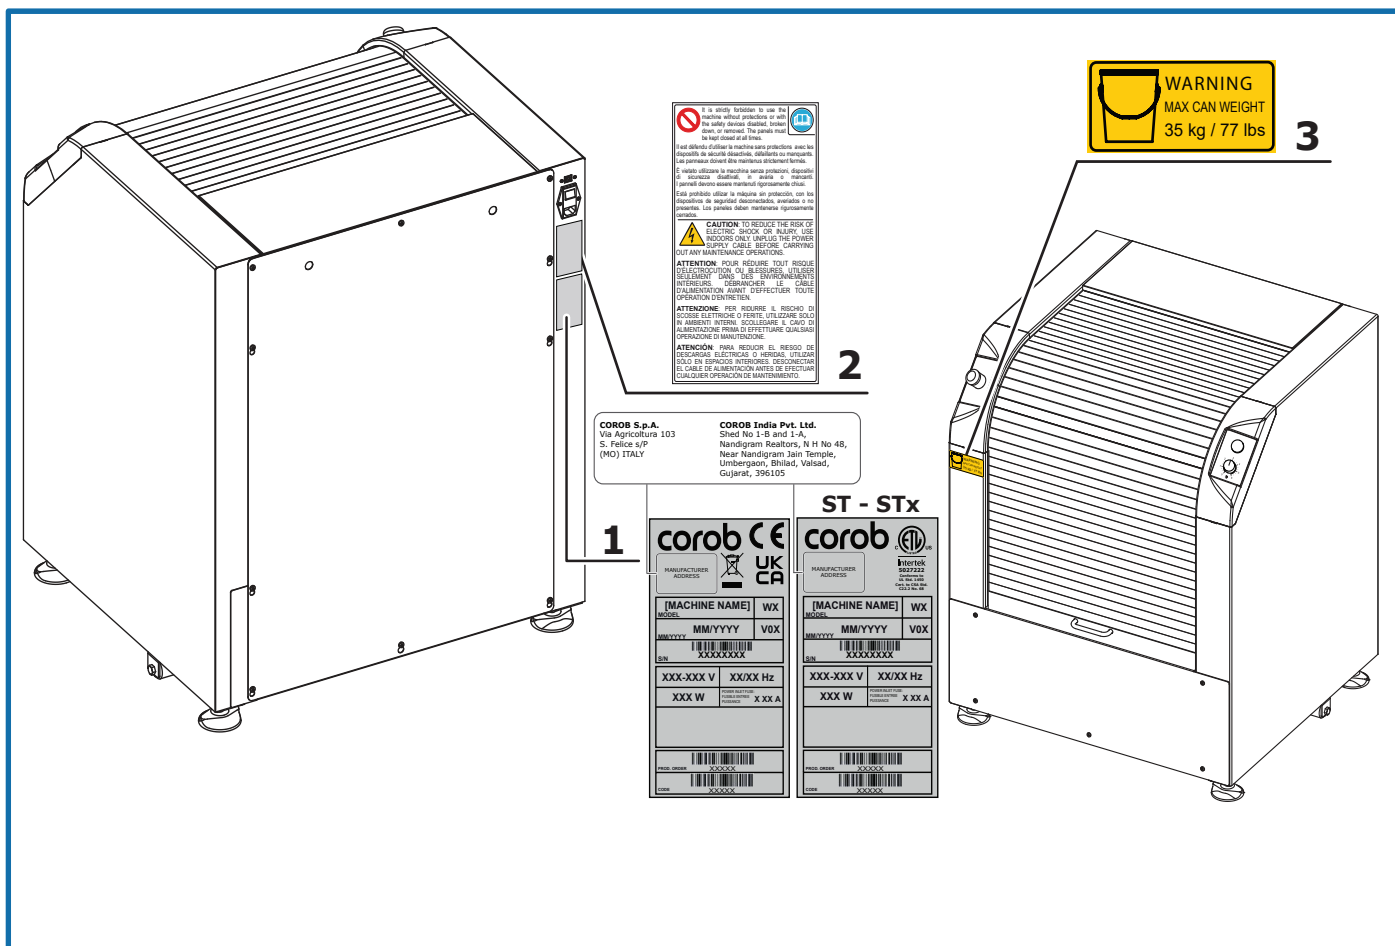


1. Identification plate (chapter [Definitions](#))
2. Label “General warnings”
3. Label “Maximum can weight”



ATTENTION

Do not remove or make illegible the safety or instruction labels. Replace any label which has become illegible or is missing, by requesting it to the manufacturer.

3.5 Safety devices

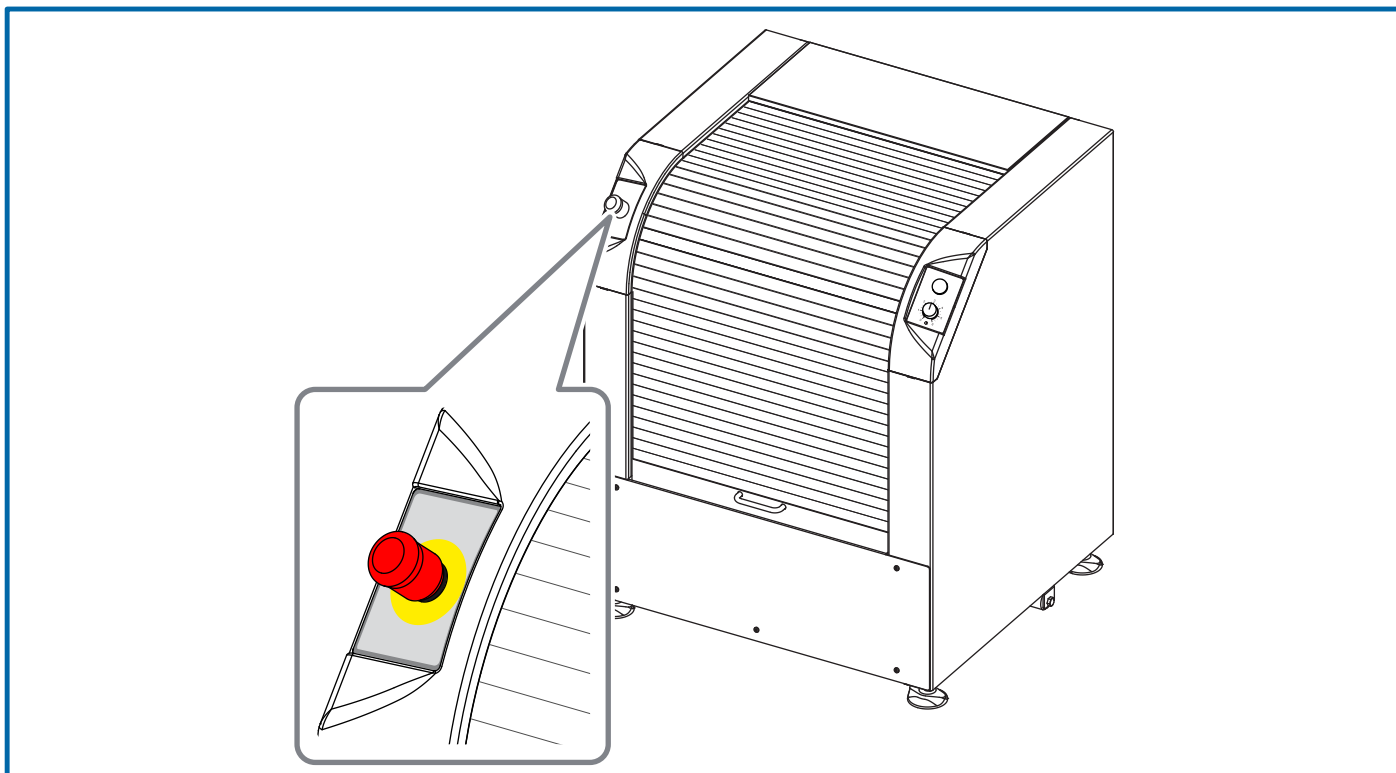

Emergency button

Red mushroom-head button.

Pressing the button causes the machine to stop immediately in emergency mode, ceasing all movements.

Once pressed, the button can be released by pulling it outward.



WARNING

DO NOT ROTATE THE BUTTON: SIMPLY PULL IT.

To open the door, it is necessary to release the emergency button.

Door safety device

The machine is equipped with a safety device that prevents the machine to be started when the door is open.

Opening the door during operation will cause mixing to stop immediately.



HAZARD

In the event of a breakdown of the safety devices, it is forbidden to use components not provided by the manufacturer. If necessary, contact the manufacturer's authorized technical service only.

3.5.1 Checking the safety devices

At least twice a year, you have to check the efficiency of the safety devices of the machine and the correct operation of the control and signaling devices (chapter [Starting up](#)).

In the event of unexpected results or malfunctions, contact the manufacturer's technical service immediately.

Device and action	Expected outcome
Emergency button With the machine on and emergency button pressed, start a cycle. With the machine on and a mixing cycle in progress, press the emergency stop button.	The mixing cycle must not start. All mobile parts of the machine must stop.
Door safety device Try starting a cycle with the door open. With the machine on and mixing in progress, try to open the door with the handle.	The mixing cycle must not start. The display shows the door closing request message. When opening the door, all the moving parts of the machine must stop after a certain inertia.



HAZARD

Since this operation is carried out with the mechanics in motion, wait for the movements to stop completely and do not insert your hands inside the machine.

3.6 Emergency stop

In case of a breakdown or dangerous conditions, press the emergency stop button (chapter [Safety devices](#)). Pressing this button, power is cut off to the entire machine and all movements are stopped.

The display (model PR) will show a message that indicates the emergency stop condition.

After eliminating the cause of the malfunction or solved the dangerous condition, reset the button by pulling it.



WARNING

DO NOT ROTATE THE BUTTON: SIMPLY PULL IT.



WARNING

The use of the emergency stop button is to be considered as an emergency action exclusively, and not as a standard stop mode, in order to prevent machine deterioration.

3.7 Resetting the machine after an emergency stop

The emergency stop button can be reset by pulling it.



WARNING

DO NOT ROTATE THE BUTTON: SIMPLY PULL IT.

At machine reset, it may happen that the rotating mechanism is not in its starting position.

Model ST:

1. Set the timer to zero.
2. Release the mushroom-head button.
3. Close the door: the machine carries out an automatic plates repositioning, bringing the rotating mechanism in vertical position.

Model STx:

1. Set the timer to zero.
2. Release the mushroom-head button.
3. Close the door.
4. Press the green cycle start button  : the machine carries out an automatic plates repositioning, bringing the rotating mechanism in vertical position.

Model PR:

1. Release the mushroom-head button.
2. Close the door.
3. Press the cycle start/stop key  : the machine carries out an automatic plates repositioning, bringing the rotating mechanism in vertical position.

The same procedure applies in case of power outage.

3.8 Emergency situations

In case of emergency situations, such as accidents, breakdowns or malfunctions:

1. Turn off the machine and unplug the power cable from the power outlet (chapter [Control devices model PR](#)).
2. Contact the manufacturer's authorized technical service.



HAZARD

Following emergency situations, the operator is prohibited from carrying out repairs to the machine. If necessary, contact the manufacturer's authorized technical service only.

3.9 Requirements of the installation site

Environment requirements for the site where the machine is to be used:

- Clean and dust-free.
- With level and stable floor. Do not install the machine on floating floors.
- Fitted with a dedicated grounded power supply socket.
- Equipped with sufficient lighting to ensure good visibility from every point of the machine (light value not lower than 500 Lux).
- Ventilated to prevent the concentration of harmful fumes: for example, for a 3 m high, 4x4 m room (total volume of 48 m³) an air change rate [ac/h] of 3 required.
- Temperature between 10 °C (50 °F) and 40 °C (104 °F) and relative humidity between 5% and 85%, without condensation.



WARNING

The environment working conditions are strictly related to the type of products used (ask for information from the paint manufacturer). The requirements indicated above are valid for the machine only.

Do not place the machine near heat sources or in direct sunlight. Also humidity sources should be avoided. The machine must be used indoors only.

Environment conditions outside the values indicated (chapter [Technical data](#)) may cause serious damage to the machine, especially the electronic equipment.



HAZARD

When using **products containing volatile solvents**, the room in which the machine is installed must be spacious and with good ventilation: for example, for a 3 m high, 4x4 m room (total volume of 48 m³) an air change rate [ac/h] of 3 required. No type of parts must be leant against or stocked close to the machine.

Avoid naked flames or material that may create sparks and cause a fire.

Do not smoke near the machine.

4 SHIPPING AND HANDLING

4.1 General warnings

Personnel in charge of these operations must wear the following personal protective equipment.



MECHANICAL RISK PROTECTION GLOVES (TEAR, WEAR)



HAZARD

To avoid personal injuries and property damage, use the utmost care and caution when handling the machine, and carefully follow the instructions given in this chapter.



WARNING

The packing must be handled only by qualified personnel using appropriate handling equipment. Do not stack items on the packing.

4.2 Unpacking and placement



1 x 19 mm [0.51"] To remove the fixing screws

1 x 10 mm [0.71"] To adjust machine feet

1 x 19 mm [0.71"] To adjust machine feet



HAZARD

The following procedure can be carried out by one single person.

Store the packing material for future use, or dispose of it according to current regulations. In any case, we recommend that you keep it for the entire duration of the machine warranty and for the machine final disposal phase.

Make sure the packing has not suffered any damage or tampering during shipping; if so, contact the authorized technical service or your dealer.

1. Cut the plastic ties wrapped around the package (for cardboard packing only).
2. Remove the covering from the pallet, also removing the corresponding fasteners.
3. Remove machine wrapping. Take out any accessories and/or material supplied with the machine.




HAZARD

Should the machine appear damaged during shipping, do not attempt to start it and contact the authorized technical service or dealer.

To move the machine without external cardboard, but still fixed to the pallet, use suitable lifting equipment. Fork the pallet in such a way as to distribute the weight equally on the forks and thus prevent the machine from tipping over.

4. Remove the two screws that secure the machine to the pallet as indicated in the following picture. Loosen the upper nut and undo the screw, then separate them in order to remove the screw from under the pallet.

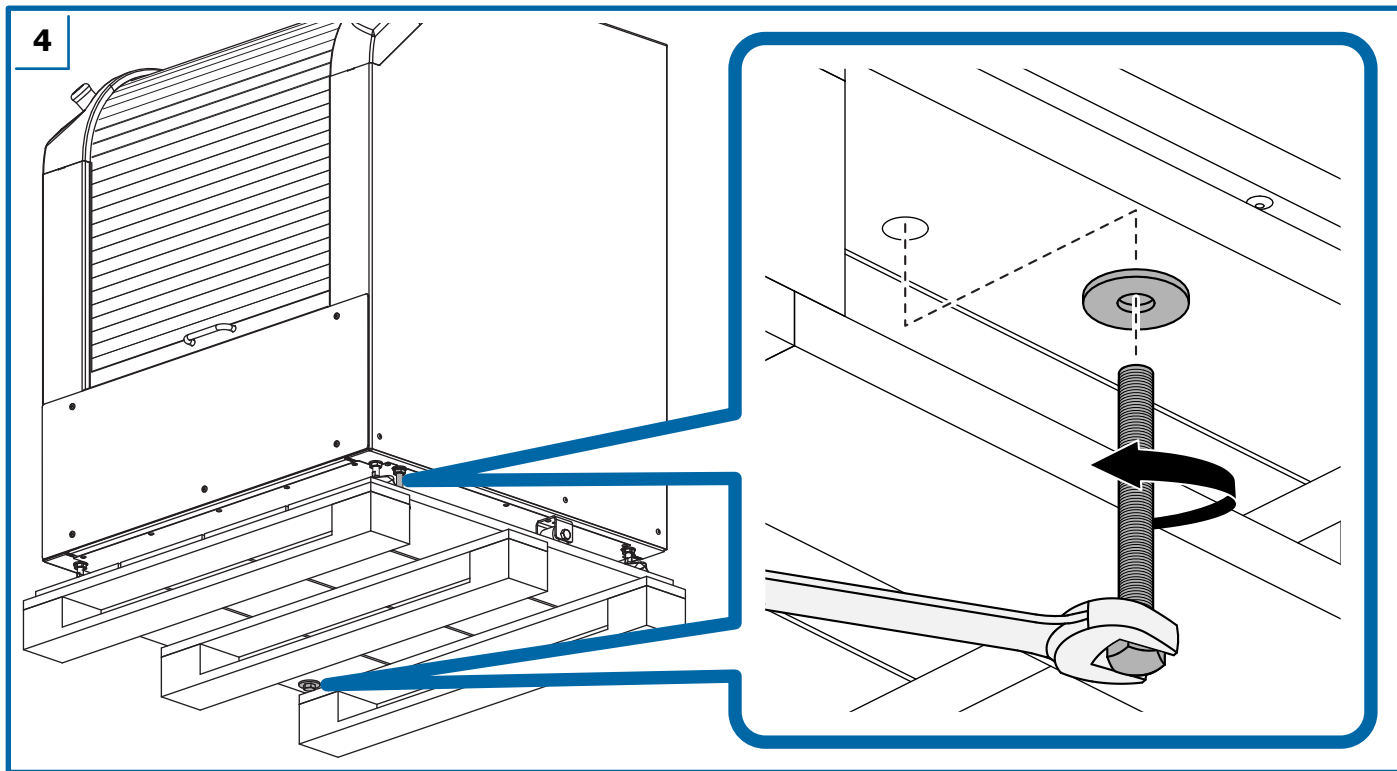

4.2.1 Use of a lifting device


1. Remove the machine from the pallet using a suitable lifting equipment and place the machine in its working position.



HAZARD


To lift and position the machine, you must use suitable lifting means only, that must be chosen based on machine weight (chapter [Technical Specifications](#)).

2. Raise all the four feet.

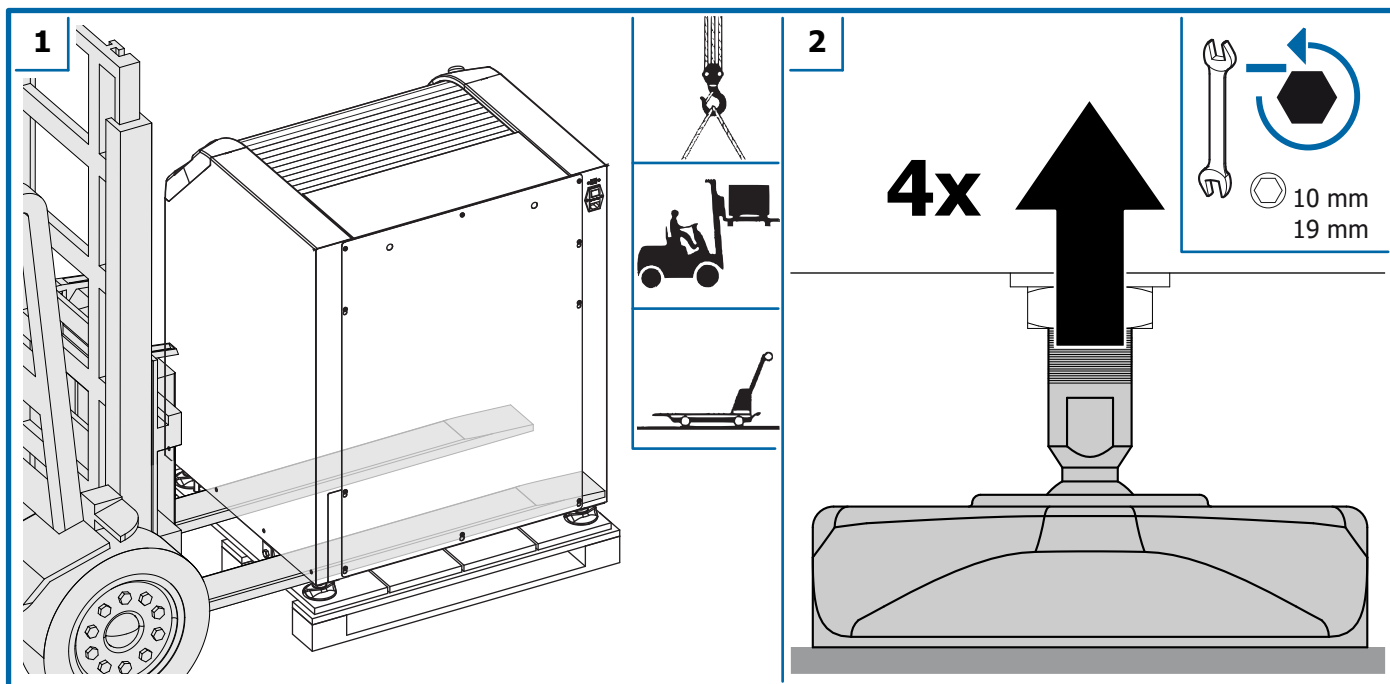

3. Lower the two rear feet; the machine will slightly tilt forward and it will be possible to move it on its wheels.
4. Lock the two rear feet.
5. Push the machine in its working position.
6. Lower the two front feet and level the machine.

7. Carry out a working cycle to check machine stability, and only then definitively lock the feet.

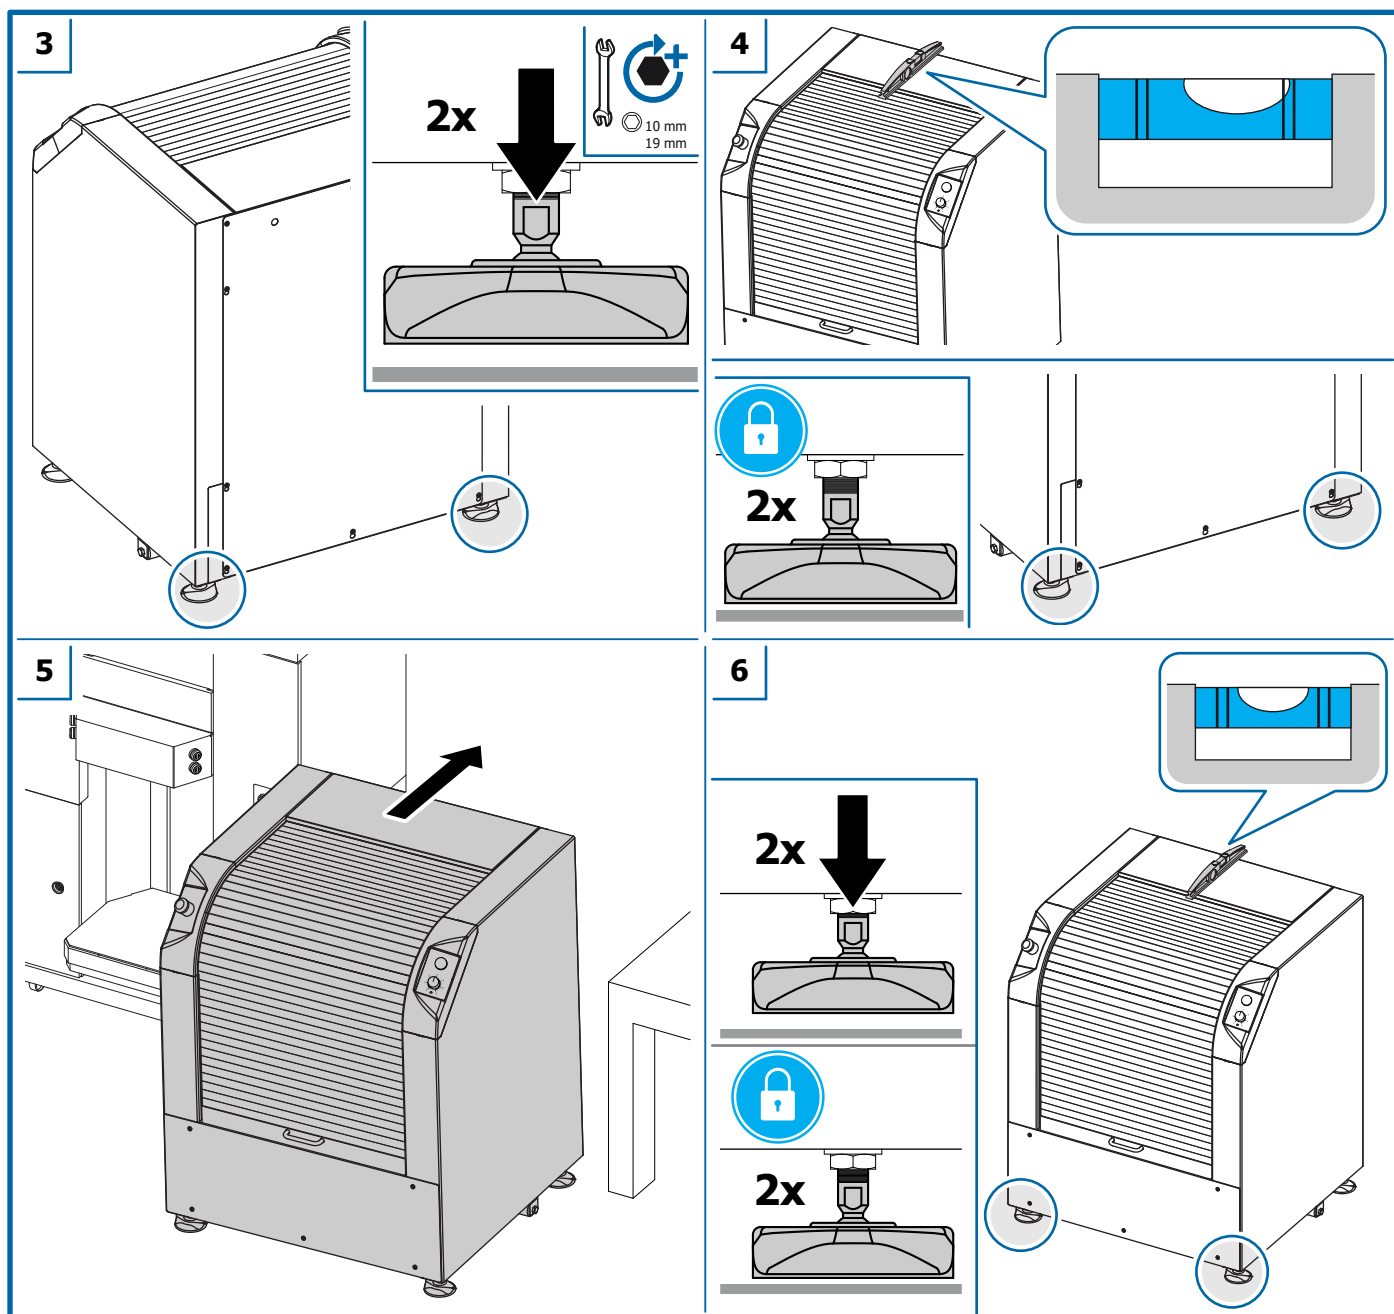

WARNING

The machine must be perfectly level in order to operate properly and prevent from vibrating during the mixing cycle.

Make sure the wheels are not resting on the floor. Do not install the machine on floating floors.

Make sure the non-slip rubber is present under the support feet.

To repack the machine, follow the unpacking instructions in reverse order. We recommend reusing the original packing any time the machine must be moved or shipped.

4.2.2 Removal from the pallet without lifting equipment

Without lifting equipment, it is also possible to remove the machine from the pallet manually.




HAZARD

The following procedure can be carried out by one single person.

Operate carefully so as not to damage the machine or cause personal injury.

Working from the front, after removing the fixing screws to the pallet:

1. Raise the two front feet of the machine, until the central wheels are resting on the pallet.
2. Push to move the machine backwards a few centimeters on the pallet, just enough to access the two screws A that fix the front bottom wooden block to the pallet platform (the machine leans slightly forward).

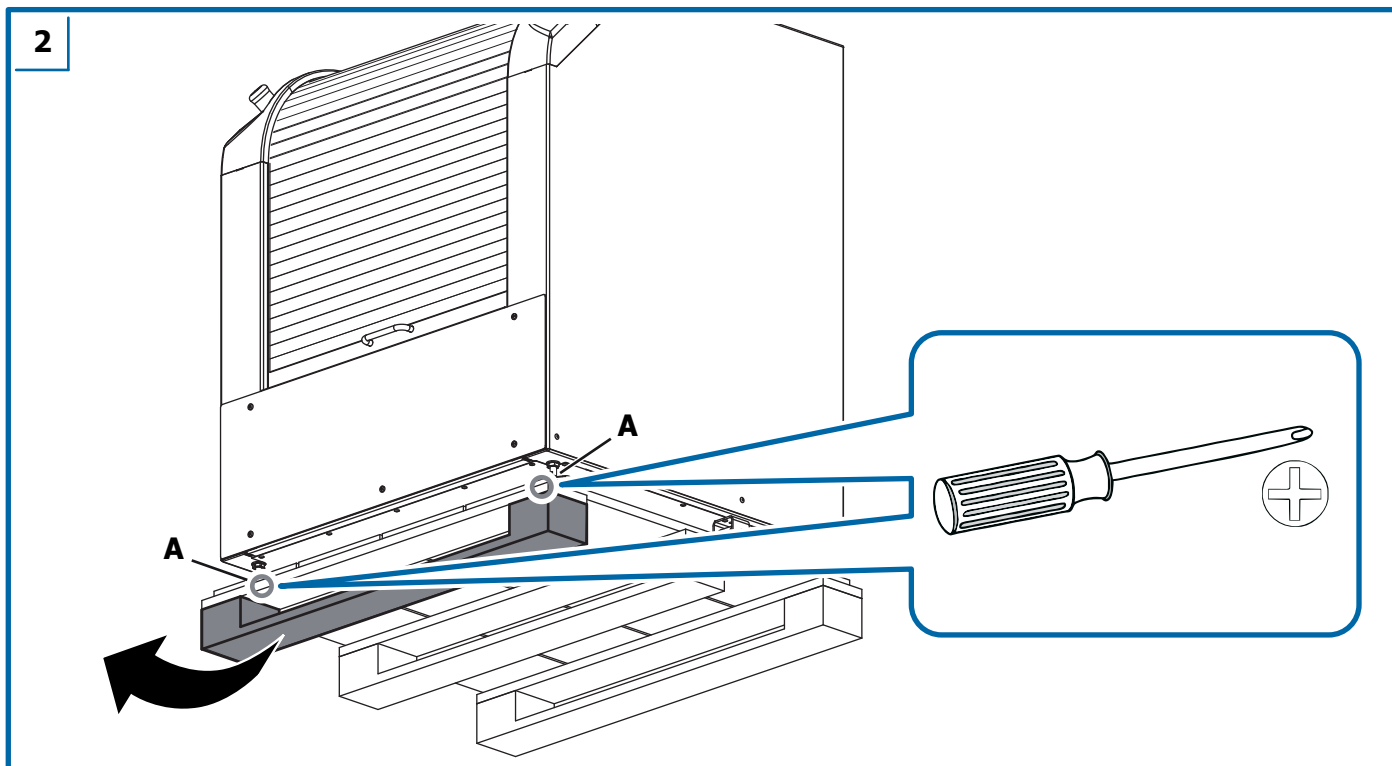

3. With the help of your foot, remove the front bottom wooden block and tilt the pallet that will act as a sled for the descent of the machine.
4. Grab the machine frontally (door open) and pull it down to the floor with care.

4.3 Standard material supplied

After unpacking the machine, make sure the following items are present:

- Power supply cable.
- Spare fuses.
- Product documentation.

Make sure that all of the above items are included in the packing; if not, contact the manufacturer.

4.4 Storage

To repack the machine, follow the unpacking instructions in reverse order. We recommend reusing the original packing any time the machine must be moved or shipped.

Use appropriate equipment to handle the packed machine. If stored, the machine must be kept in a safe and protected environment, with a suitable temperature and humidity degree and protected from dust.



WARNING

Do not stack items on the packing.


4.5 Disposal and recycling

This equipment must not be disposed of with unsorted municipal waste. Carry out a separate collection.

Pursuant to the WEEE Directive, collection, treatment, recovery and environmentally sound disposal of Waste Electrical and Electronic Equipment (WEEE) shall be carried out in compliance with the national measures of each EU-Member State implementing the Directive.

Differentiate the parts making up the machine based on the various materials they are made of (plastic, iron, etc.).

For the colorants remaining in the canisters, for the machine components most soiled with product and if any products have been used on the machine that require special disposal procedures, follow local regulations when disposing of waste.

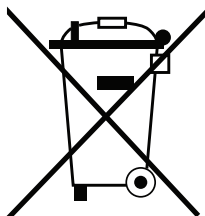

5 STARTING UP

5.1 General warnings

Personnel in charge of these operations must wear the following personal protective equipment.



MECHANICAL RISK PROTECTION GLOVES (TEAR, WEAR)



HAZARD

The user must connect the machine to a TN or TT power supply system, equipped with an RCD (Residual Current Devices) protection device that automatically intervenes in the event of a fault.

THIS EQUIPMENT MUST BE GROUNDED. Check the grounding of the power supply system before connecting the machine.

Do not use extension cords to power the machine.

Do not use multisockets to connect other equipment to the same socket that powers the machine.



WARNING

Do not attempt to power the machine from a source having specifications other than those listed on the identification plate.

The machine is isolated from the power supply line when the power plug is disconnected; it must therefore be installed near an easily accessible mains socket outlet.

5.2 Grounding instructions (ETL version only)

The conductors of the power cable which is supplied are color-coded as follows:

- GREEN/YELLOW = GROUND
- WHITE = NEUTRAL
- BLACK = LINE



HAZARD

This product must be grounded. In the event of an electrical short circuit, grounding reduces the risk of electric shock by providing an escape wire for the electric current. This product is equipped with a cord having a grounding wire with an appropriate grounding plug. The plug must be plugged into an outlet that is properly installed and grounded in accordance with all local codes and ordinances.

Improper use of the grounding plug can result in a risk of electrical shock. If repair or replacement of the cord or plug is necessary, do not connect the grounding wire to either flat blade terminal. The wire with insulation having an outer surface that is green with or without yellow stripes is the grounding wire.


Check with a qualified electrician or serviceman if the grounding instructions are not completely understood, or if in doubt as to whether the product is properly grounded. DO NOT modify the plug provided; if it will not fit the outlet, have the proper outlet installed by a qualified electrician.

Voltage supply up to 120 V

This product is for use on a nominal 120-V circuit and has a grounding plug similar to the plug illustrated.

A temporary adapter similar to the adapter illustrated (B) may be used to connect this plug to a 2-pole receptacle when a properly grounded outlet is not available. The temporary adapter shall be used only until a properly grounded outlet (A) is installed by a qualified electrician.

The green colored rigid ear, lug, or similar part extending from the adapter must be connected to a permanent ground such as a properly grounded outlet box cover. Whenever the adapter is used, it must be held in place by a metal screw.

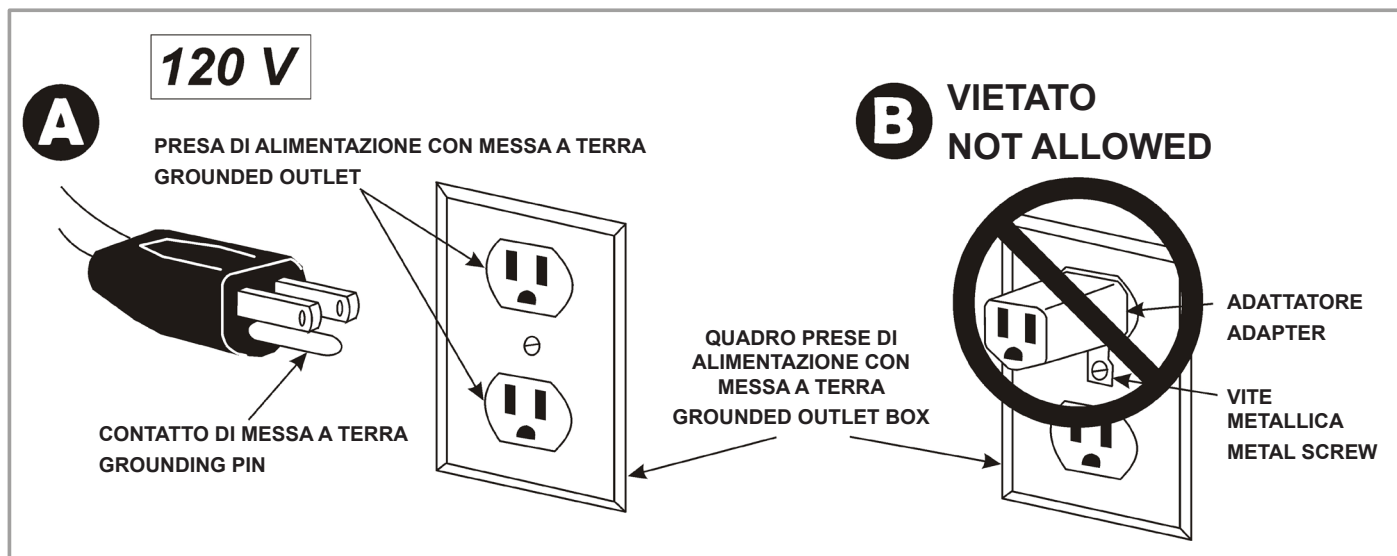

Voltage supply higher than 120 V

This product is for use on a circuit having a nominal rating more than 120 V and is factory-equipped with a specific electric cord and plug for connection to a proper electric circuit.

Only connect the product to an outlet having the same configuration as the plug. Do not use an adapter with this product.

When the product must be reconnected for use on a different type of electric circuit, the reconnection shall be made by qualified service personnel.

Extension cords



WARNING

Manufacturer strongly recommends NOT using an extension cord with this equipment.

Use only a 3-wire extension cord that has a 3-blade grounding plug, and a 3-slot receptacle that will accept the plug on the product. Make sure your extension cord is in good condition.


When using an extension cord, be sure to use one heavy enough to carry the current your product will draw. For lengths less than 25 feet, no. 18 AWG extension cords should be used.

An undersized cord will cause a drop in line voltage resulting in loss of power and overheating.

Note: The following table shows the correct size to use depending on cord length and nameplate ampere rating. If in doubt, use the next heavier gage. The smaller the gage number, the heavier the cord.

Ampere Rating Range	Volt	Length of cord in feet (ft.)								
	120 V	25 ft.	50	100	150	200	250	300	400	500
	240 V	50 ft.	100	200	300	400	500	600	800	1000
0 - 2		18	18	18	16	16	14	14	12	12
2 - 3		18	18	16	14	14	12	12	10	10
3 - 4		18	18	16	14	12	12	10	10	8
4 - 5		18	18	14	12	12	10	10	8	8
5 - 6		18	16	14	12	10	10	8	8	6
6 - 8		18	16	12	10	10	8	6	6	6
8 - 10		18	14	12	10	8	8	6	6	4
10 - 12		16	14	10	8	8	6	6	4	4
12 - 14		16	12	10	8	6	6	6	4	2
14 - 16		16	12	10	8	6	6	4	4	2
16 - 18		14	12	8	8	6	4	4	2	2
18 - 20		14	12	8	6	6	4	4	2	2

5.3 Control devices model ST

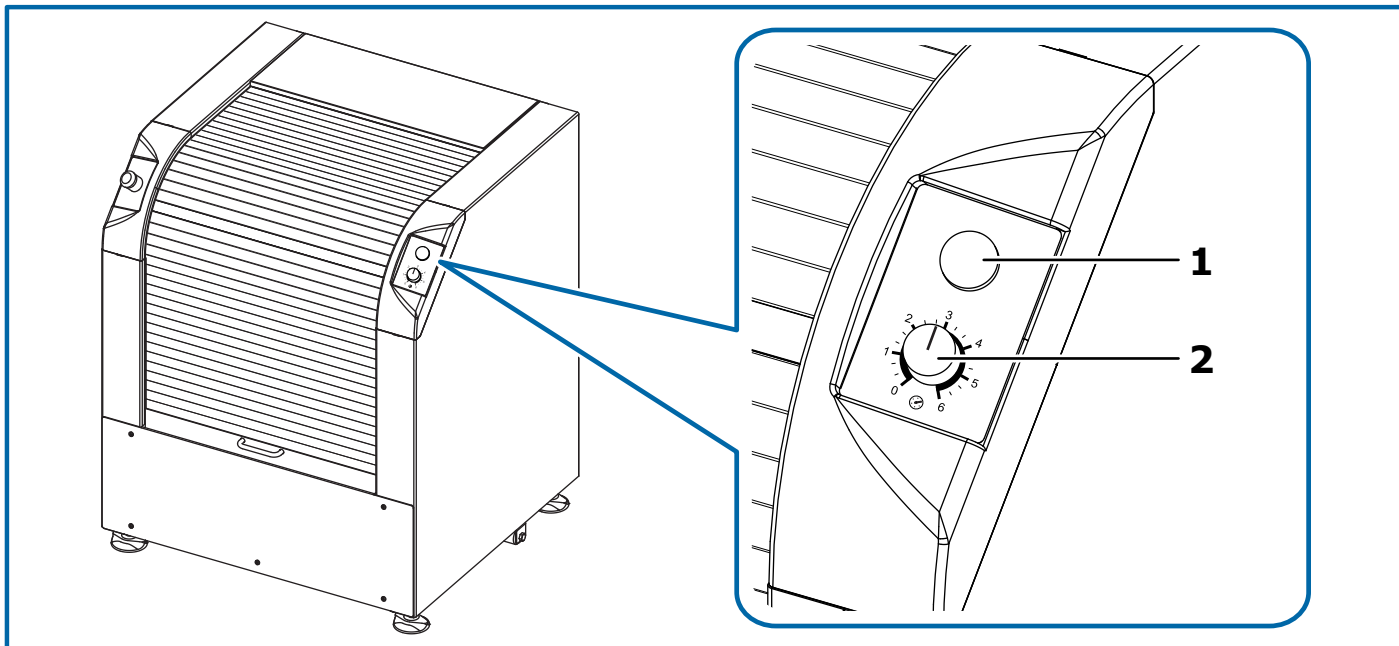

ON lamp (1)


When the lamp is lit, it indicates that the machine is powered and the main switch, placed at the back of the machine, is in the ON position (I).



Timer (2)

It allows to set the desired mixing time and at the same time to start the mixing process. The maximum programmable time corresponds to approximately 6 minutes.

5.4 Control devices model STx

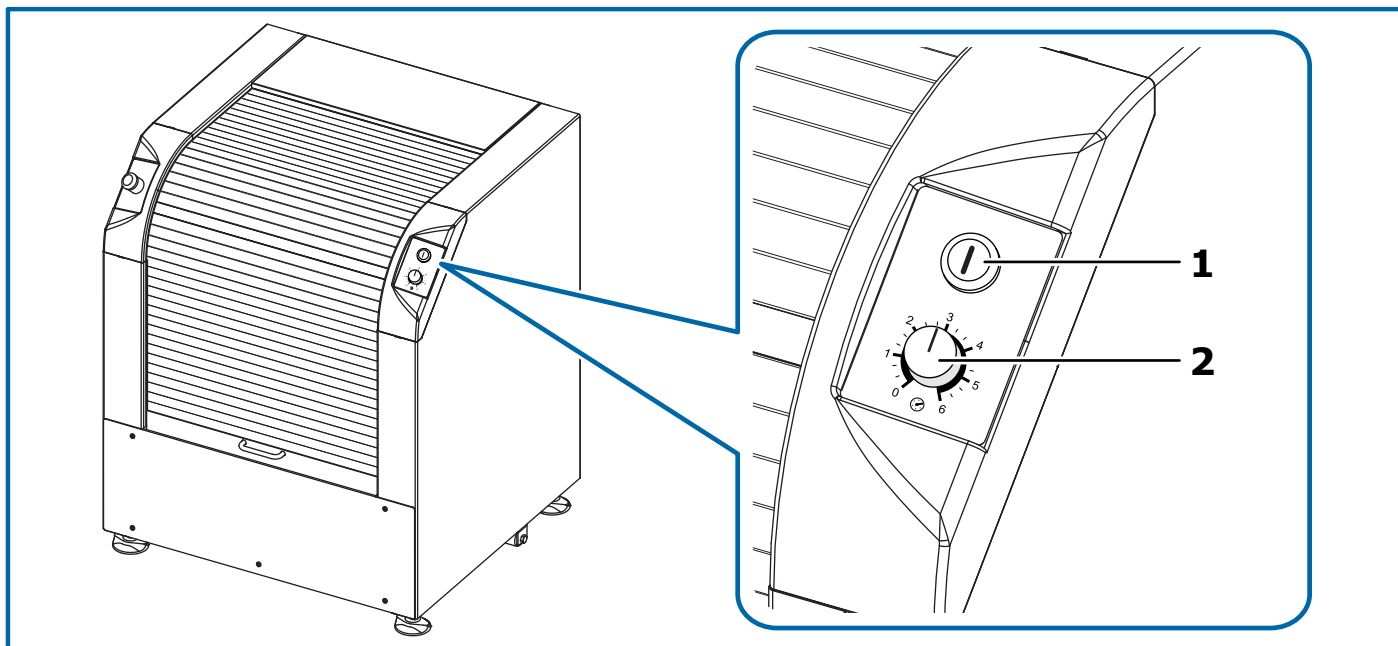

Button to start the mixing cycle (1)


Green illuminated button. It allows to start the mixing process of a can.



Timer (2)

It allows to set the desired mixing time and at the same time to start the mixing process. The maximum programmable time corresponds to approximately 6 minutes.

5.5 Control devices model PR

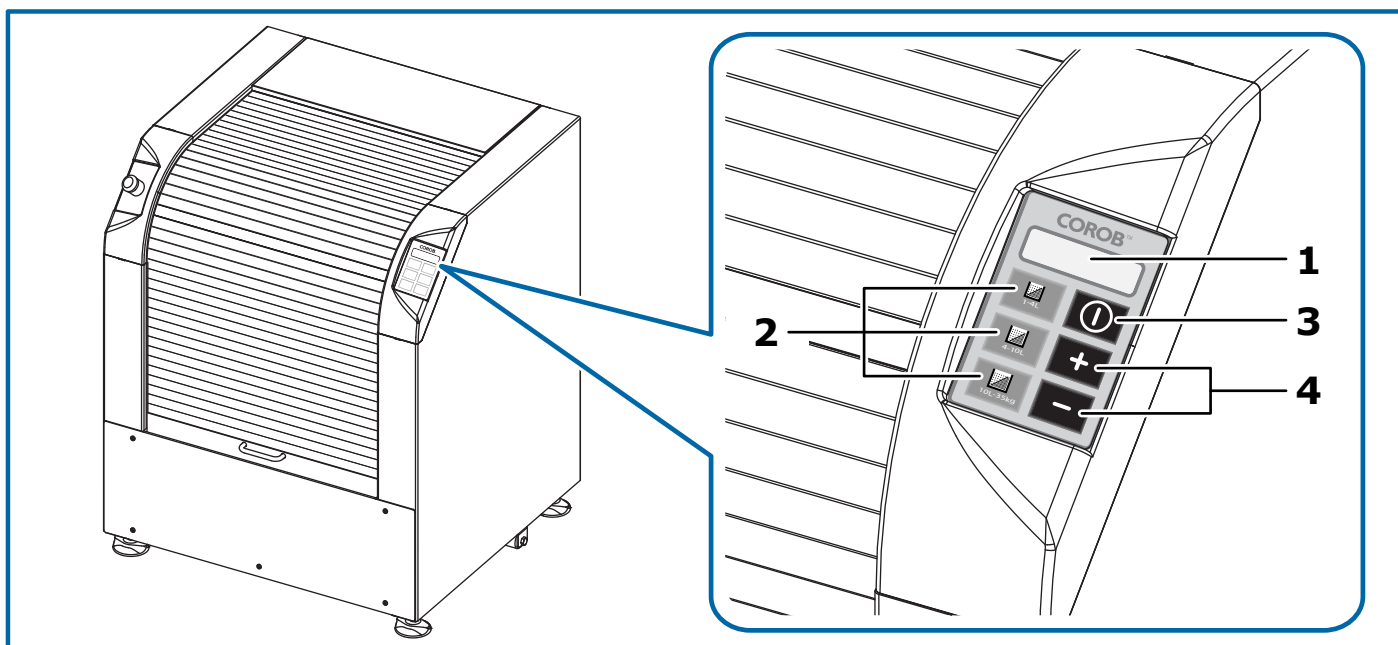

The control panel keyboard can be configured, this means that function keys may not be positioned in the same place and may change based on customer's personalization.

Display (1)

The display shows the name of the mixing program selected, as well as the messages concerning the actions undertaken by the machine during the automatic mixing cycle. The display lights up at machine start-up.

Keys to select pre-set programs (2)

Keys that allow you to select pre-set automatic mixing programs. They can be customized with text or a graphical representation of the customer's products.



Key to start / stop the cycle (3)

This key allows to start the mixing cycle of a can. If pressed during machine operation, the cycle stops.




Adjusting keys (4)

Keys that allow you to modify the mixing time.

They also allow to unlock the shutter door or command opening of the automatic door (key +).

5.6 Connections

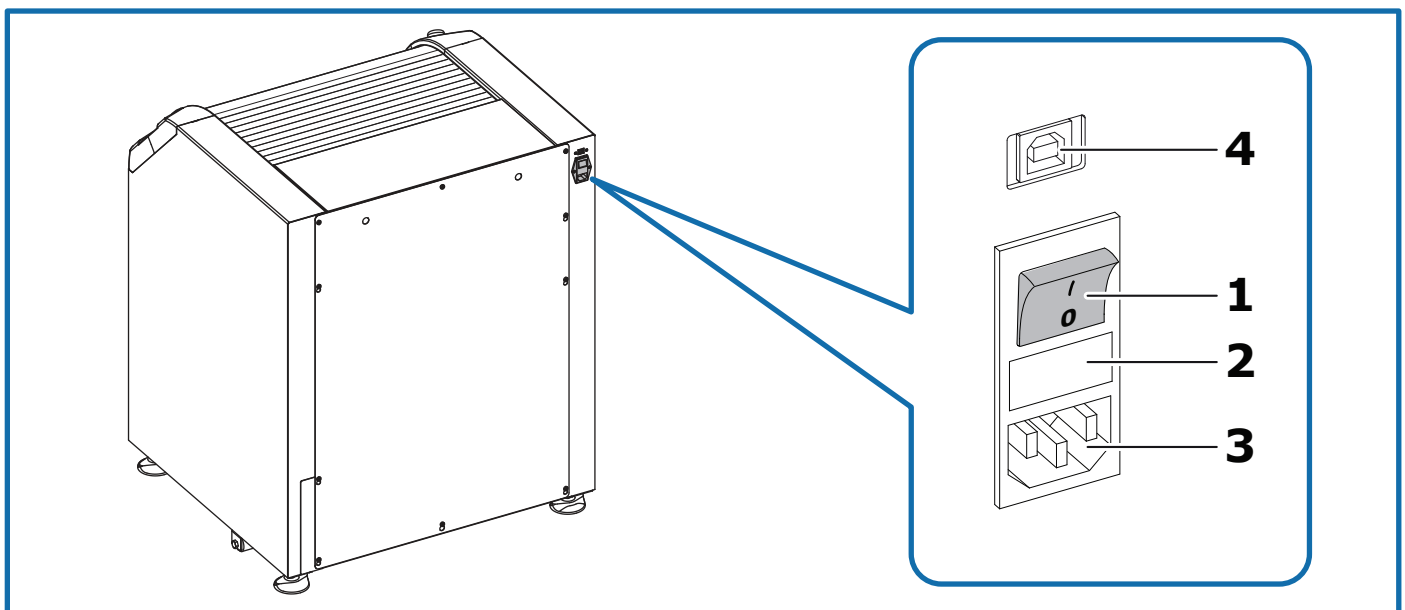

Machine main switch (1)

In ON position (I), the machine is powered. In OFF position (O), the power is cut off to the machine.

Fuse compartment (2)

The value of fuses is shown in the technical specifications table (chapter [Technical data](#)).


Main plug (3)

Main power supply to the machine.

USB port (model PR only) (4)

Connector for the USB interface connection to the service computer.

5.7 Electrical connection and start-up

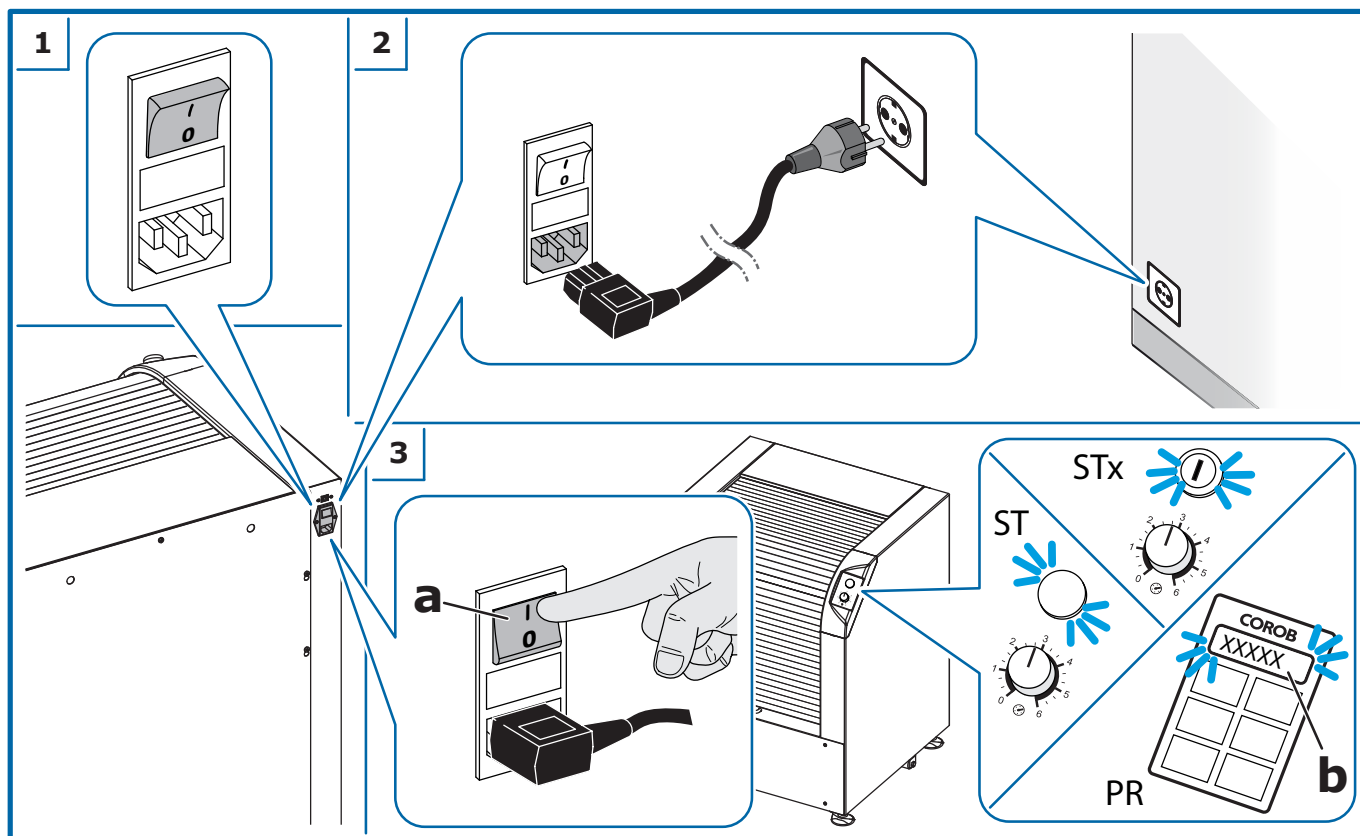

To power up and start the machine, proceed as follows:

1. Make sure that the emergency button is released and that the main switch is in the OFF position (0).
2. Insert the power supply cable socket into the main machine plug, and the other end to the mains socket outlet.
3. Turn the main switch to ON (I). At this point, for the ST model, the ON lamp will light, while for the PR model, the display will light to indicate that the machine is on.

For model PR, by turning the machine on with the emergency button pressed, the display shows, among other pieces of information, the number of machine cycles carried out and the firmware version installed.

5.7.1 Machine information (PR model only)


Turn ON the machine with the emergency button pressed to display following information:

- Application Firmware version
- Bootloader Firmware version
- Number of cycles executed
- Machine status [EMERGENCY]
- Company information [e.g. manufacturing date, machine serial number, configuration file code, and so on]

5.8 Shut-down

To shut off the machine:

1. Set the main switch located on the rear side of the machine to OFF (O).
2. Unplug the power supply cable from the mains socket outlet.

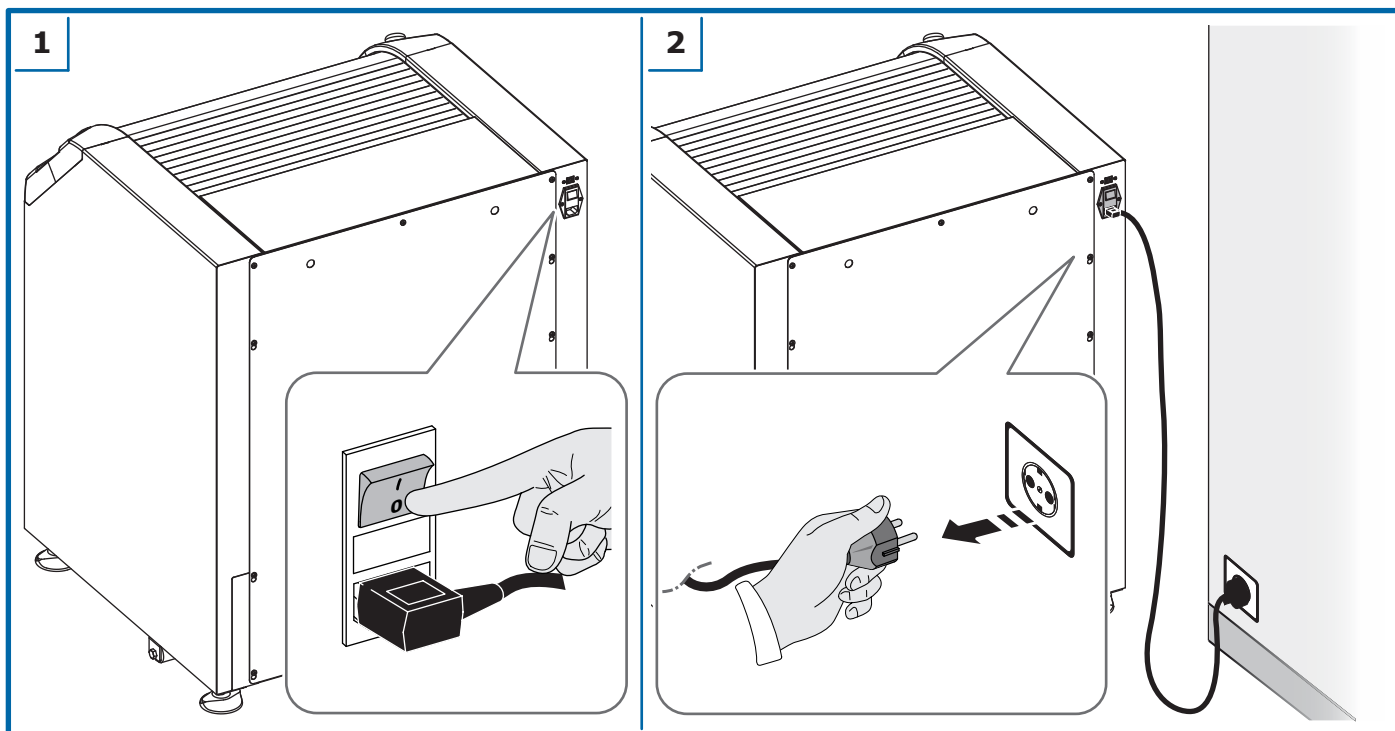

6 USE

6.1 General warnings

Personnel in charge of these operations must wear the following personal protective equipment.



MECHANICAL RISK PROTECTION GLOVES (TEAR, WEAR)



HAZARD

The machine must be used by a single operator. Unauthorized people who could reach or touch machine parts during operation must not be admitted in the nearby area.

It is strictly forbidden to use the machine without protections or with any safety devices present on the machine disabled, broken down, or removed. The panels must be kept closed at all times.

It is forbidden to use the clamping movement of plates to close the can lid.

It is forbidden to climb onto the machine.

Do not use the machine as a working surface. Do not leave any objects on the machine during its operation.

When handling cans, do not exceed the weight limits stated by the current regulations in force.

Scrupulously observe the handling instructions given by the paint manufacturer; if handled inappropriately, high pressures may develop inside the cans, causing the contents to leak suddenly, the lid to open, or even causing the can itself to break.

The substances that may be used on the machine--such as colorants, paints, solvents, lubricants and cleansers--may be hazardous to your health; handle, store and dispose of these substances in keeping with current regulations and the instructions provided with the product.

6.2 Loading of cans

When loading the cans in the machine, bear in mind some basic rules to ensure the safety of the operator and to avoid damage to the machine.



WARNING

Never use cans lower than 3.9" (100 mm) or weighing more than 88 lb (35 kg).

Do not put one can on top of another.

Do not use the machine with damaged cans or cans not sealed properly. Always make sure that the can lid is perfectly closed.



Do not make the machine work without a can in it.

Place the cans to be mixed in the center of the bottom clamping plate and secure the bail.

More than one can may be mixed at the same time provided that:

- **they are of the same height**
- **they do not overlap the clamping plates**
- **they are placed in the middle of the bottom clamping plate**
- **the sum of their capacities is not greater than the machine maximum capacity**
- **the bails are properly secured**



In order to grant correct can clamping and keep the machine's mechanical part in equilibrium during mixing, it is necessary for the combined center of gravity of the cans to lie in the middle of the bottom plate as far as possible. Otherwise the machine may become unstable on the support surface due to excess vibrations.

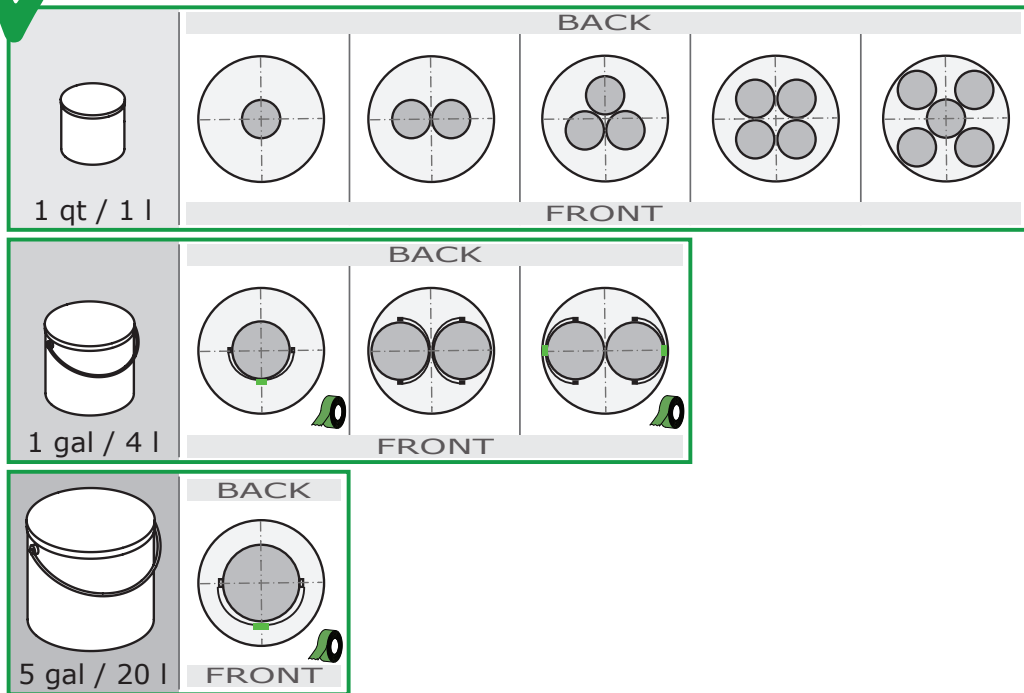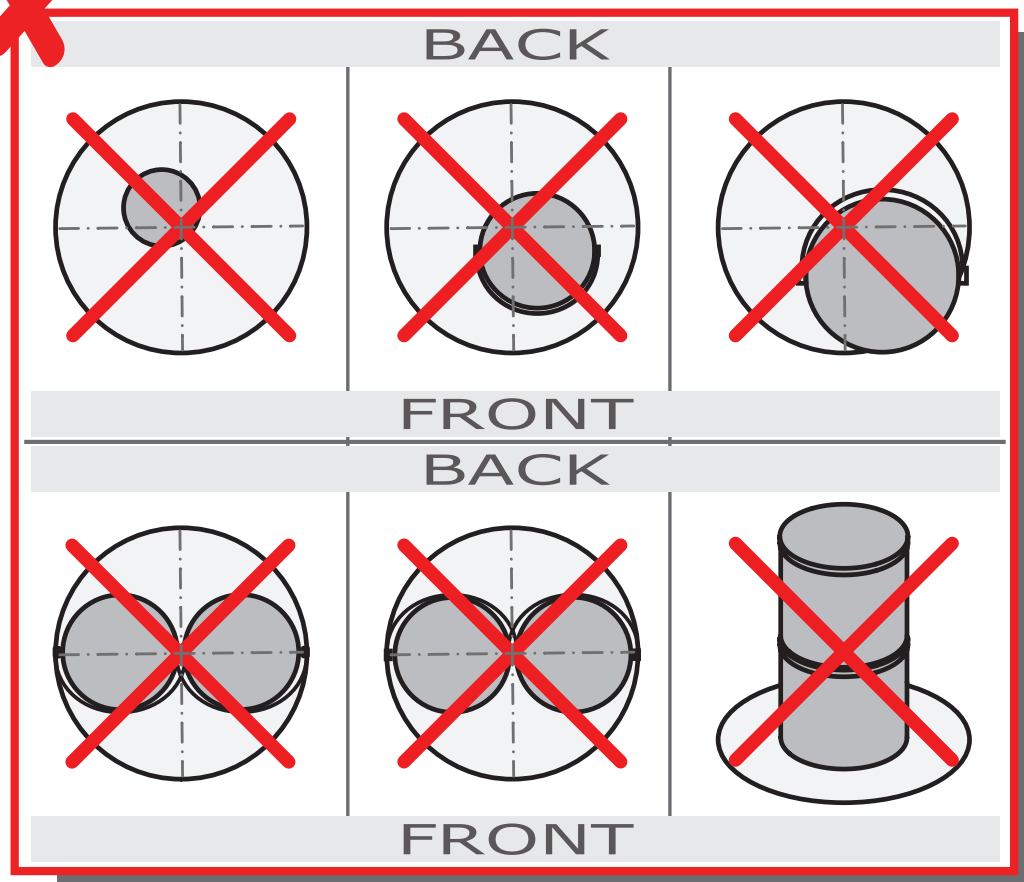



WARNING

IN ADDITION TO ALWAYS LOADING MULTIPLE CANS TOWARDS THE CENTER, POSITION THEM SO THAT THE BAILS ARE TOWARDS THE INSIDE OR OUTSIDE OF THE CLAMPING PLATE. DO NOT PLACE MULTIPLE CANS WITH THE HANDLES FACING THE FRONT OR BACK.

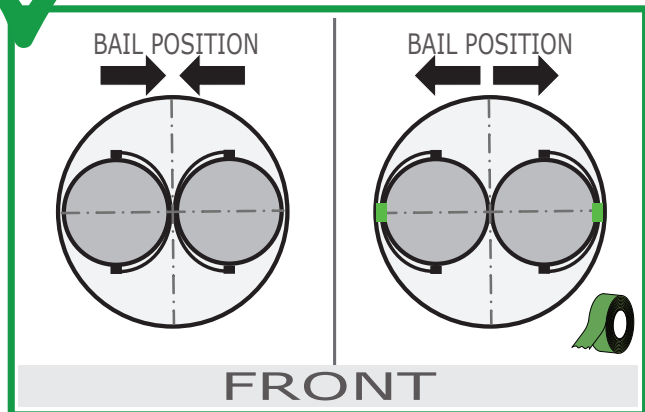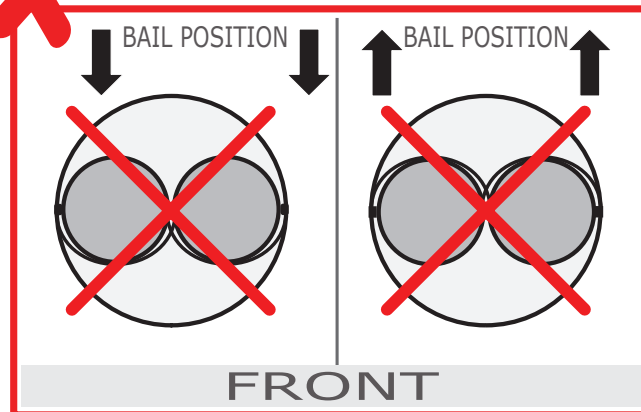


WARNING

Always secure the bail with adhesive tape to avoid damaging the can or prevent it from catching on the machine internal parts.

Only when multiple cans are placed with the bails facing inwards you can avoid securing them with adhesive tape, as they lock each other into place.

It is also suggested to seal the can lid with adhesive tape.

To load and unload the can, proceed as follows.

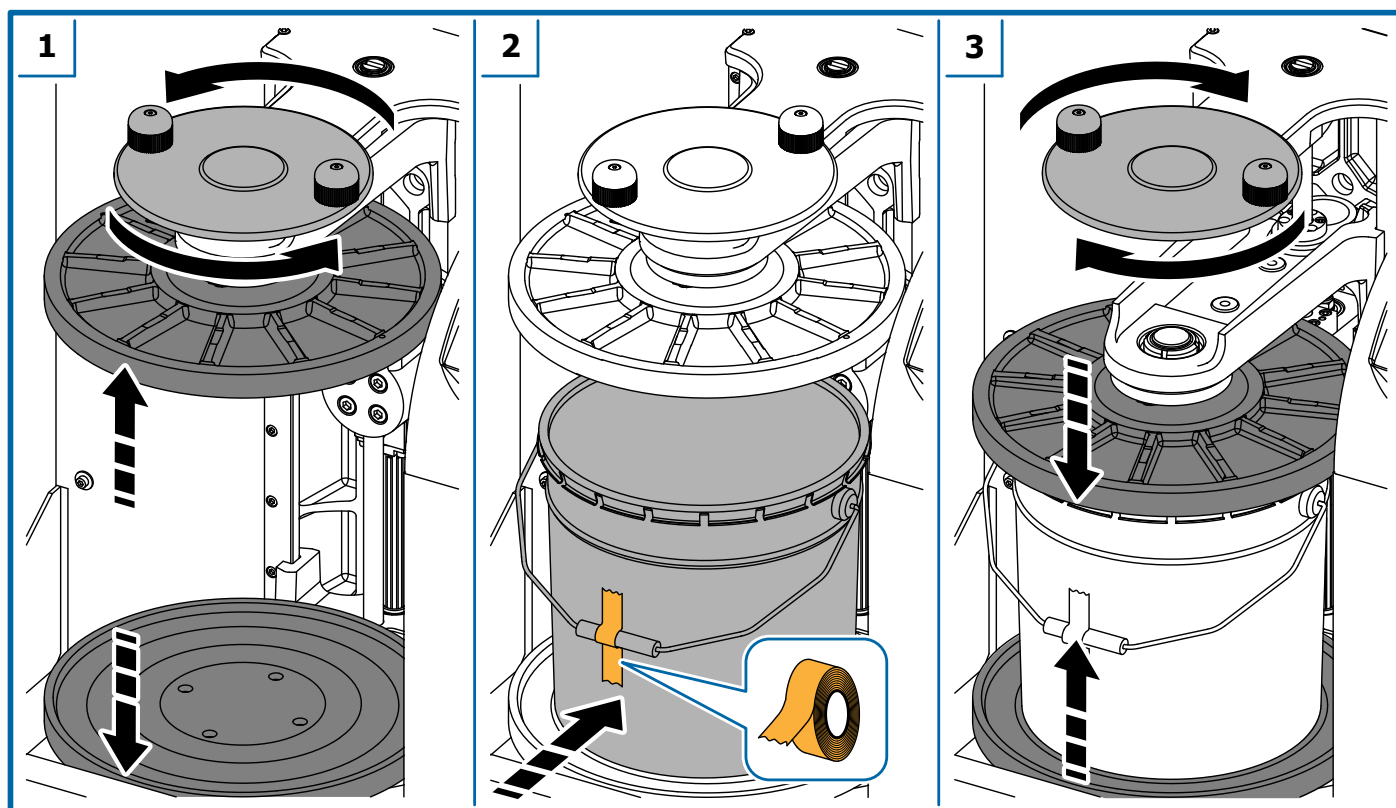


1. If you need to open the clamping plates in order to place the can, turn the clamping handle counter-clockwise until the plates are open as desired.
2. Place the new can or remove the already mixed one.

Adapter (optional)

The multi-can adapter allows to place simultaneously the following types of cans:

- 5 x 1/16 G (approx 0.2 liters) (can min height must be 89 mm)
- 5 x 1/4 G (approx 1 liter)
- 4 x 1 G (approx 3.8 liters)

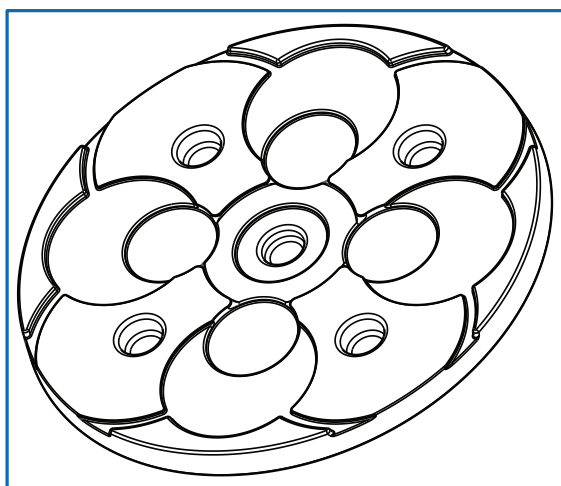

WARNING

CORRECT USE OF THE ADAPTER

Make sure you position correctly the cans in the spaces provided on the adapter.

3. Turn the clamping handle clockwise until the plates are perfectly clamped on the can. Turn the clamping handle a little further to properly secure the can. The clamping pressure applied manually by the operator is enough to ensure proper clamping of the can.

6.3 Running a mixing cycle, model ST

1. Open the door.
2. Load the can as indicated in chapter [Loading of cans](#).
3. Close the door.

The safety device prevents the mixing cycle to be started when the door is open.

4. Start the mixing process, by setting the desired mixing time with the timer .

When the mixing time has elapsed, mixing is over and the mobile mechanism slows down until it comes to a rest in its starting position.



HAZARD

It is forbidden to open the door during machine operation. Opening the door during operation will cause mixing to stop immediately.

Once the mixing cycle is complete, it is possible to remove the can.

The machine is now ready to carry out another mixing cycle.



HAZARD

In any emergency event occurring when the mixing cycle is in progress press the emergency stop button (chapter [Emergency stop](#)).

6.3.1 Advance stop

It is possible to stop a mixing cycle at any time.

To end the mixing cycle before the set time has elapsed, set the timer  to zero.

While a mixing cycle is in progress it is possible to vary the mixing time previously set.



HAZARD

Do not open the door to stop the machine. If repeated frequently, this operation may damage the machine.

6.4 Running a mixing cycle, model STx

1. Open the door.
2. Load the can as indicated in chapter [Loading of cans](#).
3. Close the door.

The safety device prevents the mixing cycle to be started when the door is open.

4. By means of the timer , set the desired mixing time.
5. Start the mixing cycle by holding down the start button  until when the green built-in lamp illuminates.

If, after pressing the start button  the cycle does not start, make sure that the door is correctly closed; if necessary, close it again and re-start the cycle.

During the mixing cycle it is possible to increase or decrease the mixing time previously set through the timer.

When the mixing time has elapsed, mixing is over and the mobile mechanism slows down until it comes to a rest. The green lamp of the start button  turns off.



HAZARD

It is forbidden to open the door during machine operation. Opening the door during operation will cause mixing to stop immediately.

Once the mixing cycle is complete, it is possible to remove the can.

The machine is now ready to carry out another mixing cycle.



HAZARD

In any emergency event occurring when the mixing cycle is in progress press the emergency stop button (chapter [Emergency stop](#)).

6.4.1 Advance stop

It is possible to stop a mixing cycle at any time.

To end the mixing cycle before the set time has elapsed, set the timer  to zero.

While a mixing cycle is in progress it is possible to vary the mixing time previously set.



HAZARD

Do not open the door to stop the machine. If repeated frequently, this operation may damage the machine.

6.5 Running a mixing cycle, model PR

1. Open the door.
2. Load the can as indicated in chapter [Loading of cans](#).
3. Close the door.

The safety device prevents the mixing cycle to be started when the door is open.

4. Based on the capacity of the can to be mixed, press the key corresponding to the program to execute.
 - Press the key **once** to select the program for **low density products (THIN paint)**
 - Press the key **twice** to select the program for **high density products (THICK paint)**

When a key is pressed, the display shows the name of the program selected.



For single or multiple cans, with a total volume up to 4 liters



For single or multiple cans, with a total volume from 4 to 10 liters



For single or multiple cans, with a total volume from 10 liters up to the maximum loading capacity of the machine (77 lb/35 kg)

5. If required, change the mixing time with the adjusting keys  .
6. Press the cycle start/stop key  or hold down the key corresponding the program selected.

When the mixing time has elapsed, mixing is over and the mobile mechanism slows down until it comes to a rest in its starting position.



HAZARD

It is forbidden to open the door during machine operation. Opening the door during operation will cause mixing to stop immediately.

Once the mixing cycle is complete, it is possible to remove the can.

The machine is now ready to carry out another mixing cycle; the program just executed will be proposed.



HAZARD

In any emergency event occurring when the mixing cycle is in progress press the emergency stop button (chapter [Emergency stop](#)).

6.5.1 Advance stop

It is possible to stop a mixing cycle at any time.

To end the mixing cycle before the set time has elapsed:

Model ST and STx: set the timer to zero.

Model PR:

- Press the cycle start/stop key 

or

- Press and hold down any of the cycle keys.



HAZARD

Do not open the door to stop the machine. If repeated frequently, this operation may damage the machine.

6.5.2 Error conditions (model PR only)

The machine will warn the user about possible operation anomalies or machine breakdowns through error codes shown on the display.

The error code is displayed continuously. In this situation, it is not possible to use the machine.

In such cases, press and release the emergency button, then press the cycle start button  and check if the fault is solved.

If this is not the case, call the authorized technical service, telling them the error code so they can identify the kind of fault occurred.



ATTENTION

For other alarm codes, contact authorized technical service.

7 ORDINARY MAINTENANCE

7.1 General warnings

Personnel in charge of these operations must wear the following personal protective equipment.



MECHANICAL RISK PROTECTION GLOVES (TEAR, WEAR)



HAZARD

Before carrying out any maintenance operations, you must turn off the machine and unplug the power supply cable from the mains socket outlet.

During machine maintenance operations there is a high risk of contact with the coloring product; strictly follow the indications of chapter [Warnings on the use of products](#).



WARNING

Following the analysis of the safety circuits in compliance with Standard UNI EN ISO 13849-1:2016, the contactor K1 no longer fulfils its safety function after the 19th operating year. Therefore it is necessary to replace this component after this time period, to ensure machine safe operating conditions.

The replacement must be carried out exclusively by trained and authorized service personnel.

For additional operations other than those indicated, contact the manufacturer or authorized service center.

7.2 Cleaning

The machine may get dirty accidentally (paint spills) or due to dust build-up over time. In the first instance, the machine must be cleaned immediately; periodic cleaning will suffice for the latter.



WARNING

NEVER USE A SOLVENT-BASED CLEANING PRODUCT OR ABRASIVE POWDER.

DO NOT USE WATER JETS OR STEAM TO CLEAN THE INTERIOR OF THE MACHINE.

7.2.1 External cleaning

We recommend a general cleaning of coverings, panels and control devices of the machine, to remove dirt, dust and any stains, using a soft and dry cloth, or slightly moistened with a mild cleansing solution.

To avoid the risk of slipping, keep the floor around the machine clean from possible product spills.

7.2.2 Internal cleaning

In the event of paint leaks inside the machine, clean immediately using a moistened cloth or a spatula.

Waste liquids are collected in the bottom plate and can be drained through the holes provided, by slightly tilting the machine.

The machine is provided with special splash-guards that protect the clamping screws from possible sprays of product.

7.3 Lubrication

Some mechanical components are used on the machine that do not require any form of preventive maintenance.

Every 1500 working cycles or every 6 months of operation approximately, we recommend performing following operations:

1. Clean and lubricate the clamping screws and the guides of the clamping mechanism.
2. Clean and lubricate the guides of the door.

Use grease type OKS 422 or similar grease having the following characteristics.

Technical characteristics of the lubricant	
Application field	Suitable for gears, screws and similar parts of machines exposed to high pressures and temperatures; it offers excellent resistance to extreme temperatures, high loads, vibrations and high running speeds.
Composition	Complex soap of barium and synthetic oil
Temperature range	from - 40°C to + 180°C
Consistency class	NLGI 2

7.3.1 Lubricating the clamping screws




WARNING

DO NOT REMOVE THE SPLASH-GUARDS THAT PROTECT THE UPPER CLAMPING SCREW.


The cleaning and lubricating operations must be carried out with the protections installed and following the indications of the next chapters.

1. Open the door.
2. Open the clamping plates by turning the clamping handle counter-clockwise.
3. Disconnect power supply (chapter [Shut-down](#)).
4. Carefully clean and grease the two clamping screws (upper and lower) from one end to the other.
5. Close and then reopen the clamping plates to allow the lubricant to spread more evenly.
6. Connect power supply and switch on the machine (chapter [Electrical connection and start-up](#)).

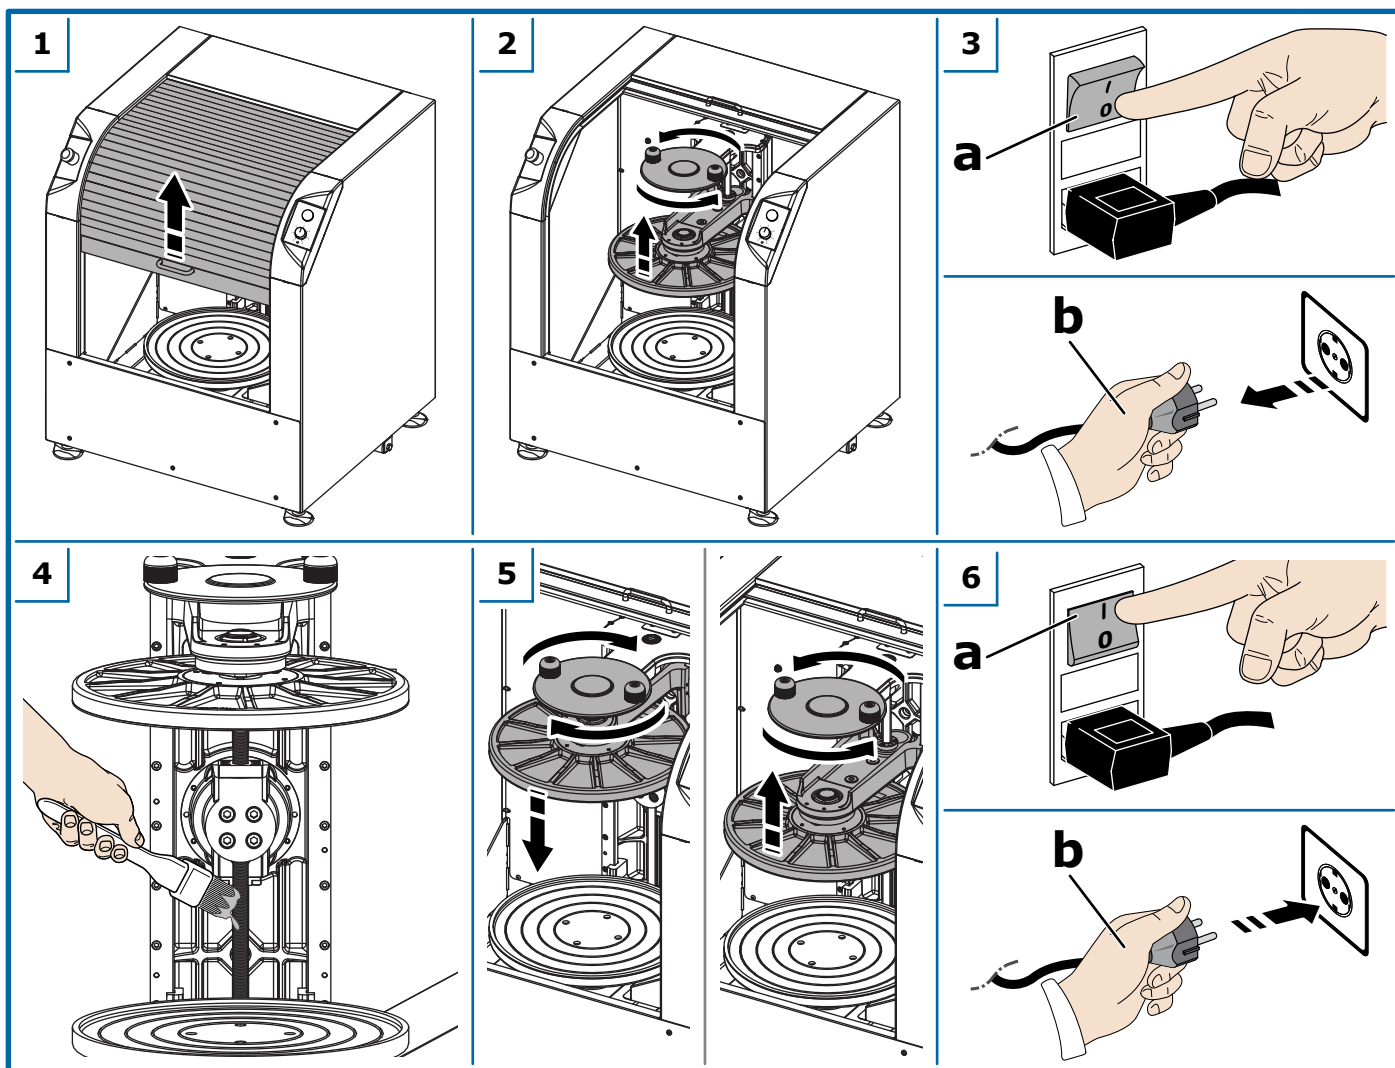

7.3.2 Lubricating the door sliding guides

1. Clean and lubricate in the points indicated in figure.
2. Slide the shutter door multiple times to evenly spread the lubricant.

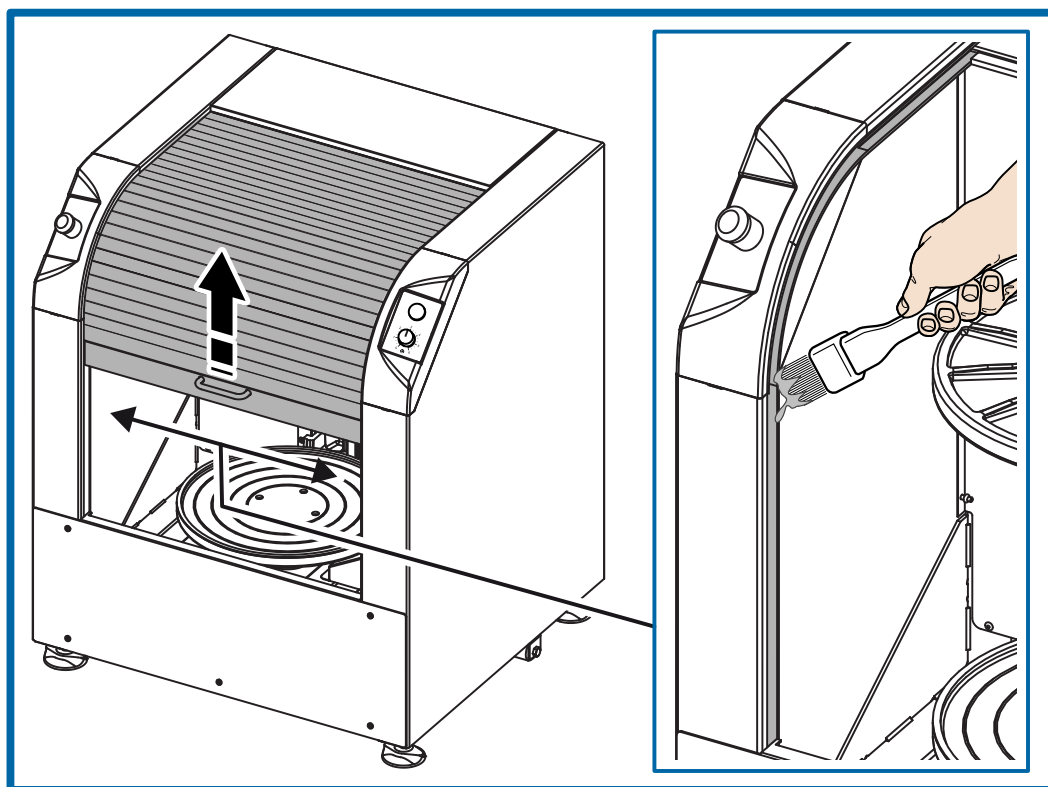


8 TECHNICAL SPECIFICATIONS

8.1 Technical data

Power supply
CE: Single-phase 200 - 240 V~ ± 10% <i>note: at 200 V power supply, machine performance reduction applies</i> Single-phase 100 - 110 - 127 V~ ± 10% <i>optional with autotransformer</i>
ETL (models ST and STx): Single-phase 200 - 208 V~ ± 10% Single-phase 110 - 120 V~ ± 10% <i>optional with autotransformer</i>
Frequency
50/60 Hz
Fuses
F 10 A
Maximum power absorbed
850 W
Mixing motor power
0.75 HP (0.55 kW)
Noise level (a)
Level of equivalent acoustic pressure: < 70 dB (A)
Working environmental condition
Temperature: between 10°C (50°F) and 40°C (104°F)
Relative humidity: between 5% and 85%, without condensation

(a) Value measured in the laboratory and documented in the relative test report, which is available from the manufacturer. Operating conditions: normal machine work cycle under simulated load conditions.

8.2 Dimensions and weight

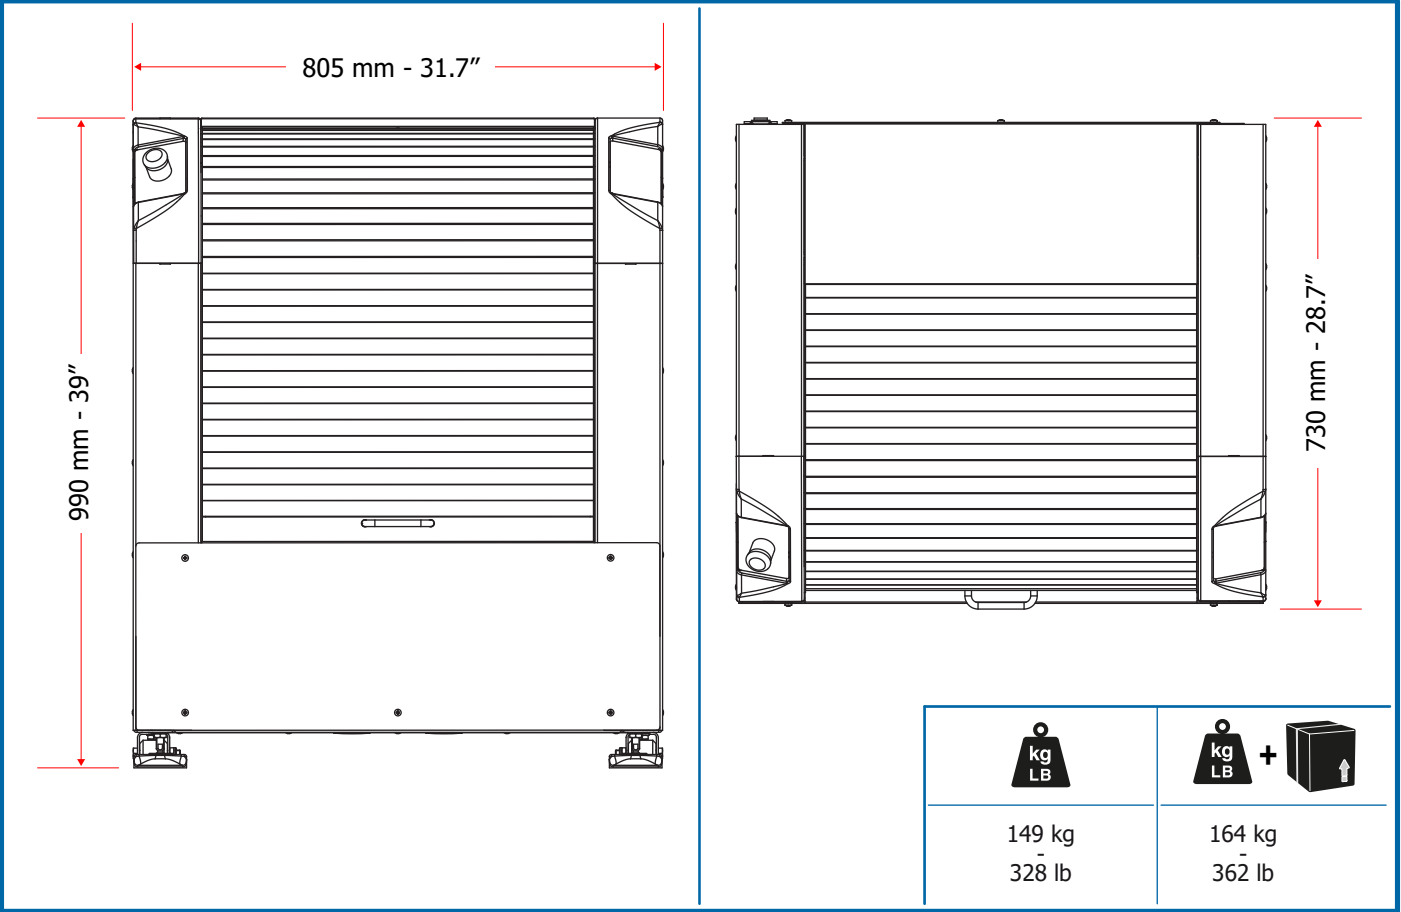

Adjusting height of the antivibration feet from 0" to 0.79" (0 to 25 mm).

8.3 Declaration of conformity



Dichiarazione CE di Conformità *EC Declaration of Conformity*

Versione linguistica originale in Italiano

Translation of the original Italian version

DESCRIZIONE - *DESCRIPTION*

AGITATORE GIROSCOPICO AUTOMATICO
AUTOMATIC GYROSCOPIC MIXER

MODELLO - *MODEL*

MATRICOLA - *SERIAL No.*

[MACHINE NAME]

Fabbricante e persona autorizzata a costituire il fascicolo tecnico:
Manufacturer and person authorised to compile the technical file:

COROB S.p.A.

Via Agricoltura, 103 - 41038 San Felice s/P (MO) - Italy

Il fabbricante dichiara sotto la propria esclusiva responsabilità che la macchina alla quale questa dichiarazione si riferisce è conforme ai requisiti essenziali previsti dalle seguenti direttive:

The manufacturer certifies, under its own responsibility, that the machine to which this statement refers to, complies with the essential requirements foreseen by the regulations:

- Direttiva Macchine 2006/42/CE
- Direttiva Compatibilità Elettromagnetica 2014/30/EU
- Direttiva 2011/65/EU come modificata da 2015/863/EU
- Direttiva WEEE 2012/19/EU

- *Machinery Directive 2006/42/EC*
- *Electromagnetic Compatibility Directive 2014/30/EU*
- *Directive 2011/65/EU as amended by 2015/863/EU*
- *WEEE Directive 2012/19/EU*

Si garantisce poi che la progettazione della macchina e la relativa produzione è effettuata, e documentata, seguendo precise procedure aziendali conformi con la norma EN ISO 9001:2015 inerente i sistemi di gestione qualità.

It is furthermore guaranteed that the design of the machine and the relevant manufacturing are carried out, and supported by documents, following accurate factory procedures in accordance with the standard EN ISO 9001:2015 about quality management systems.

[Name and Surname of Special Proxy Holder in charge]
COROB S.p.A.
San Felice sul Panaro, DD/MM/YYYY

BG - Производителят, който е лицето упълномощено за изготвяне на техническата документация, декларира на собствена изключителна отговорност, че машината, за която се отнася тази декларация, е в съответствие със съществените изисквания, предвидени от следните Директиви: Директива 2006/42/EC - Машини - Директива 2014/30/EU относно Електромагнитна съвместимост - Директива 2011/65/EU изменена с 2015/863/EU - Директива WEEE 2012/19/EU. Освен това се гарантира, че проектирането на машината и съответното производство са извършени и документирани при спазване на конкретни фирмени процедури в съответствие със стандарт EN ISO 9001:2015, отнасящ се до системите за управление на качеството.
CS - Výrobce a osoba pověřená sestavením technické dokumentace stvrzuji na svou vlastní zodpovědnost, že zařízení, je kterému se toto toto prohlášení vztahuje, je v souladu se základními požadavky stanovenými následujícími směrnici: Směrnice o strojních zařízeních 2006/42/EC - Směrnice o elektromagnetické kompatibilitě 2014/30/EU - Směrnice 2011/65/EU ve znění 2015/863/EU - Směrnice WEEE 2012/19/EU. Dále se zaručuje, že stroj byl navržen a vyroben, a výroba je zdokumentována, v souladu s přesnými firmními postupy, které odpovídají normě EN ISO 9001:2015 o systémech řízení jakosti.
DA - Fabrikanten og personen bemyndiget til at udarbejde den tekniske dokumentation erklærer på eget ansvar at maskinen, som denne erklæring henviser til, er i overensstemmelse med de væsentlige krav i de følgende direktiver: Maskindirektivet 2006/42/EC - Direktivet om elektromagnetisk kompatibilitet 2014/30/EU - Direktivet 2011/65/EU som ændret ved 2015/863/EU - Direktivet WEEE 2012/19/EU. Det garanteres desuden, at designet af maskinen og den relevante produktionsproces er udført og dokumenteret ifølge præcise fabriksprocedurer i overensstemmelse med standarden EN ISO 9001:2015 vedrørende kvalitetstyringssystemer.
DE - Der Hersteller und autorisierte Verfasser der technischen Dokumentation erklärt unter eigener exklusiver Verantwortung, dass die Maschine, auf die sich diese Erklärung bezieht, den Grundanforderungen entspricht, die von den folgenden Richtlinien vorgesehen werden: Maschinenrichtlinie 2006/42/EC - Richtlinie zur elektromagnetischen Verträglichkeit 2014/30/EU - Richtlinie 2011/65/EU geändert durch 2015/863/EU - Richtlinie WEEE 2012/19/EU. Darüber hinaus wird garantiert, dass die Planung der Maschine und ihre Herstellung unter Befolgung von genauen Unternehmensprozessen, die der Norm EN ISO 9001:2015 hinsichtlich der Qualitätsmanagement-Systeme entsprechen, durchgeführt und dokumentiert wird.
EL - Ο κατασκευαστής, και ο εξουσιοδοτημένος συντάκτης του τεχνικού φακέλου, πιστοποιεί, ότι, με δική του υπαιτιότητα, το μηχανήμα στο οποίο αναφέρεται το παρόν, συμμορφώνεται με τις ουσιαστικές απαιτήσεις που προβλέπονται από τους κανονισμούς: Οδηγία Μηχανήματος 2006/42/EC - Οδηγία Ηλεκτρομαγνητικής Συμβατότητας 2014/30/EU - Οδηγία 2011/65/EU όπως τροποποιήθηκε από το 2015/863/EU - Οδηγία WEEE 2012/19/EU. Εγγυάται περαιτέρω ότι ο σχεδιασμός του μηχανήματος και η σχετική κατασκευή του εκτελείται και υποστηρίζεται από έγγραφα, ακολουθώντας τις ακριβείς εργασιακές διαδικασίες σύμφωνα με το πρότυπο EN ISO 9001:2015 σχετικά με τα συστήματα διαχείρισης ποιότητας.
ES - El fabricante y la persona autorizada para componer el fascículo técnico declara, bajo su propia y exclusiva responsabilidad, que la máquina a la que hace referencia esta declaración guarda conformidad con los requisitos esenciales previstos por las directivas siguientes: Directiva de máquinas 2006/42/EC - Directiva de compatibilidad electromagnética 2014/30/EU - Directiva 2011/65/EU modificada por 2015/863/EU - Directiva WEEE 2012/19/EU. Se garantiza además que el diseño de la máquina y su producción se han efectuado y documentado de acuerdo con procedimientos de fábrica precisos conformes a la normativa EN ISO 9001:2015 relativa a los sistemas de gestión de calidad.
ET - Tootja ja tehnikale tootmiku koostajaks volitatud isik kinnitavad oma täielikul vastutusel, et seade, millele käesolev avaldus viitab, vastab järgnevat regulatsioonide põhinõudmistele: Masinadirektiiv 2006/42/EC - Elektromagnetilise ühilduvuse direktiiv 2014/30/EU - Direktiiv 2011/65/EU muudetud 2015/863/EU-ga - Direktiiv WEEE 2012/19/EU. Peale selle on garanteeritud, et seadme projekteerimisel ja tootmisel on järgitud täpseid tehaseprotseduure, mis vastavad standardile EN ISO 9001:2015 kvaliteedijuhtimissüsteemide kohta, ning et seda toetab ka vastav dokumentatsioon.
FI - Valmistaja ja henkilö, joka on valtuutettu laatimaan tekninen asiakirja-aineisto, vakuuttavat omalla vastuullaan, että kone, johon tämä lausunto viittaa, vastaa seuraavien direktiivien olennaisia vaatimuksia: Konedirektiivi 2006/42/EC - Sähkömagneettista yhteensopivuutta koskeva direktiivi (EMC) 2014/30/EU ja Direktiivi 2011/65/EU sellaisena kuin se on muutettuna direktiivillä 2015/863/EU - Direktiivi WEEE 2012/19/EU. Lisäksi taataan, että koneen suunnittelussa ja valmistelussa ja näiden dokumentoinnissa noudatetaan tehtaan tarkkoja menettelytapoja, jotka täyttävät laadunhallintaan koskevan EN ISO 9001:2015 -standardin vaatimukset.
FR - Le fabricant, et toute personne autorisée à établir le dossier technique, déclare sous sa propre responsabilité que la machine à laquelle se rapporte cette déclaration est conforme aux exigences essentielles prévues par les directives suivantes : Directive Machines 2006/42/EC - Directive Electromagnétique 2014/30/EU - Directive 2011/65/EU telle que modifiée par 2015/863/EU - Directive WEEE 2012/19/EU. Le fabricant garantit également que la conception de la machine, ainsi que sa production, ont été effectuées et documentées, en suivant des procédures d'entreprise précises conformes à la norme EN ISO 9001:2015 relative aux systèmes de gestion qualité.
GA - Dearbhaíonn an deántóir, agus an duine atá údaraithe chun an comhad teicniúil a chur le chéile, ar a fhreagracht féin go bhfuil an gléas a mbaineann an ráiteas seo leis i gcomhréir leis na riachtanais atá leagtha amach sna teoracha seo a leanas: Treoir um Innealra 2006/42/EC - Treoir um Chomhoiriúnacht Leictreamaighnéadach 2014/30/EU - Treoir 2011/65/EU arna leasú le 2015/863/EU - Treoir WEEE 2012/19/EU. Deimhnítear freisin go bhfuil deardadh an ghléis agus a dhéantús déanta, agus doiciméadaithe, de réir gnásanna beachta an chomhlachta atá i gcomhréir leis an rialí EN ISO 9001:2015 a bhaineann le córais bainistíochta cáilíochta.
HR - Proizvođač, i osoba ovlaštena za sastavljanje tehničke dokumentacije, izjavljuje pod svojom punom odgovornošću da je stroj na koji se odnosi ova izjava sukladan bitnim zahtjevima slijedećih direktiva: Direktive o strojevima 2006/42/EC - Direktive o elektromagnetskoj kompatibilnosti 2014/30/EU - Direktive 2011/65/EU izmijenjena i dopunjena 2015/863/EU - Direktive WEEE 2012/19/EU. Također, jamči se da su projektiranje stroja i njegova proizvodnja izvedeni i dokumentirani slijedećim preciznim tvorničkim procedure sukladne normi EN ISO 9001:2015 o sustavima upravljanja kvalitetom.
HU - A gyártó, valamint a műszaki fűzet összeállítására felhatalmazott személy saját felelősségük tudatában kijelentik, hogy a jelen nyilatkozat tárgyát képező gép megfelel az alábbi irányelvek alapvető rendelkezéseinek: 2006/42/EC Gépkezelési 2014/30/EU Elektromágneses kompatibilitás irányelv - 2011/65/EU irányelv, módosítottással módosított 2015/863/EU irányelv - WEEE 2012/19/EU irányelv. A gyártó garantálja továbbá, hogy a gép tervezése, kivitelezése, valamint a folyamat dokumentálása az üzemi előírások precíz betartásával történik, a minőségkezelési rendszerekkel foglalkozó EN ISO 9001:2015 szabvánnyal összhangban.
IS - Framleiðandinn, og einstaklingurinn sem hefur heimild til að taka saman tækniskjölinn, vottar, á eigin ábyrgð, að vélin sem vísað er til í þessari yfirlýsingu, sé í samræmi við þær grunnkröfur sem gert er ráð fyrir í eftirfarandi reglugerðum: Vélatskipun 2006/42/EC - Tilskipun um rafsegulviðsamhæfi 2014/30/EU - Tilskipun 2011/65/EU eins og henni var breytt með 2015/863/EU - Tilskipun WEEE 2012/19/EU. Ennfremur er ábyrgð að hönnun vélarinnar og tengd framleiðsla fer fram, og er það skjalfest, í samræmi við nákvæmt framleiðsluferli og í samræmi við EN ISO 9001:2015 staðalinn um gæðastjórnunarkerfi.
LT - Gamintojas ir asmuo įgaliojtas sudaryti techninę dokumentaciją, savo atsakomybe pareiškia, kad statklės, kurioms skirta ši deklaracija, atitinka esminius šių direktyvų reikalavimus: Mašinų direktyva 2006/42/EC - Elektromagnetinio suderinamumo direktyva 2014/30/EU - Direktyva 2011/65/EU su pakeitimais, padarytais 2015/863/EU - Direktyva WEEE 2012/19/EU. Taip pat užtikrinama ir dokumentais patvirtinama, kad statklės buvo sukurtos ir pagamintos tiksliai laikantis gamybos reikalavimų pateiktų EN ISO 9001:2015 standarte, dėl kokybės valdymo sistemos.
LV - Ražotājs un persona, kas ir pilnvarota sastādīt tehnisko dokumentāciju, apliecina uz savu atbildību, ka mašina, uz kuru šī deklarācija attiecas, atbilst šādu direktīvu: pamatprasībām Mašīnu Direktīva 2006/42/EC - Elektromagnētiskās sadarbības Direktīva 2014/30/EU - Direktīva 2011/65/EU grozīta ar 2015/863/EU pantu - Direktīva WEEE 2012/19/EU. Tiek arī nodrošināts, ka mašīnas dizains, pēc precīziem biznesa procesiem atbilst standartā EN ISO 9001:2015 prasībām attiecībā uz vadības sistēmu kvalitāti.
MT - Il-manifattur, u l-persuna awtorizzata biex tikkompila l-fajl tekniku jiddikjaraw taht i l-responsabbiltà tagħhom stess li l-magna li għallha qed issir din id-dikjarazzjoni hija konformi għar-rekwiżiti essenzjali previsti mid direttiv li jgħejjin: Direttiva dwar il-Magni 2006/42/EC - Direttiva dwar il-Kompatibilità Elettramanjetika 2014/30/EU - Direttiva 2011/65/EU kif emendata b'2015/863/EU - Direttiva WEEE 2012/19/EU. Dan jgħura wkoll li d disinn tal magna u l-produzzjoni tagħha jsiru, u jiġu ddokumentati wara proċessi tan-negozju preċiżi li huma konformi ma' EN ISO 9001:2015 dwar is-sistemi ta' għestjoni tal-kwalità.
NL - De fabrikant en gemachtigde voor het samenstellen van het technisch dossier verklaart dat het betreffende toestel voldoet aan de toepasselijke fundamentele voorschriften van de volgende richtlijnen: Machinerichtlijn 2006/42/EC - EMC-richtlijn 2014/30/EU - Richtlijn 2011/65/EU zoals gewijzigd bij 2015/863/EU - Richtlijn WEEE 2012/19/EU. Verder wordt gegarandeerd dat het ontwerp en de productie van het toestel werd gedocumenteerd en geïmplementeerd volgens de vereisten van de norm EN ISO 9001:2015 voor kwaliteitsmanagementsystemen.
NO - Producenten og den personen som er autorisert til å utstede den tekniske dokumentasjonen, erklærer under eget ansvar, at den maskinen denne erklæringen viser til, er i samsvar med de grunnleggende kravene som fremsettes i følgende direktiv: Maskindirektivet 2006/42/EC - Direktivet om elektromagnetisk kompatibilitet 2014/30/EU - Direktiv 2011/65/EU som endret ved 2015/863/EU - Direktiv WEEE 2012/19/EU. Det garanteres videre at utformingen av maskinen og den påfølgende framstillingen er blitt utført og dokumentert etter spesifikke prosedyrer for selskapet, i samsvar med regelverket NS-EN ISO 9001:2015 om ledelsessystem for kvalitet.
PL - Producent oraz osoba upoważniona do sporządzenia dokumentacji technicznej zaświadcza na własną, wyłączną odpowiedzialność, że maszyna, której dotyczy niniejsza deklaracja, jest zgodna z zasadniczymi wymaganiami przewidzianymi w następujących dyrektywach: Dyrektywa Maszynowa 2006/42/EC - Dyrektywa Kompatybilność Elektromagnetycznej 2014/30/EU - Dyrektywa 2011/65/EU zmieniona przez 2015/863/EU - Dyrektywa WEEE 2012/19/EU. Ponadto gwarantuje się, że fazy projektowania oraz produkcji maszyny zostały przeprowadzone oraz są udokumentowane według dokładnych procedur zakładowych, zgodnych z normą EN ISO 9001:2015, dotyczącą systemów zarządzania jakością.
PT - O Fabricante e a pessoa autorizada a preencher o documento técnico declaram, à sua inteira e exclusiva responsabilidade, que a máquina a que se refere esta declaração está em conformidade com os requisitos essenciais estabelecidos pelas seguintes diretivas: Diretiva Máquinas 2006/42/EC - Diretiva Compatibilidade Eletromagnética 2014/30/EU - Diretiva 2011/65/EU alterada pela 2015/863/EU - Diretiva WEEE 2012/19/EU. É também garantido que a conceção e produção da máquina são efetuadas e documentadas de acordo com procedimentos empresariais específicos em conformidade com a norma EN ISO 9001:2015 relativa aos sistemas de gestão da qualidade.
RO - Fabricantul și persoana autorizată pentru realizarea dosarului tehnic declară pe propria răspundere că mașina la care se referă prezenta declarație se conformează cerințelor esențiale prevăzute de următoarele directive: Directiva 2006/42/EC Mașini - Directiva 2014/30/EU Compatibilitatea electromagnetică - Directiva 2011/65/EU astfel cum a fost modificată de 2015/863/EU - Directiva WEEE 2012/19/EU. Se garantează, de asemenea, că proiectarea mașinii și producția acesteia, documentate corespunzător, se efectuează cu respectarea unor proceduri de întreprindere specifice, conforme cu standardul EN ISO 9001:2015 aferent sistemelor de management al calității.
SK - Výrobca a osoba poverená vypracovaním technickej dokumentácie na vlastnú zodpovednosť prehlasujú, že stroj, na ktorý sa toto prehlásenie vzťahuje, je v súlade so základnými požiadavkami, ktoré vyžadujú nasledujúce smernice: Smernica o strojných zariadeniach 2006/42/EC - Smernica o elektromagnetickej kompatibilite 2014/30/EU - Smernica 2011/65/EU zmenená a doplnená 2015/863/EU - Smernica WEEE 2012/19/EU. Ďalej sa zaručuje, že stroj bol navrhnutý a vyrobený, a výroba je zdokumentovaná, v súlade s presnými firmnými postupmi, ktoré zodpovedajú norme EN ISO 9001:2015 o systémoch nadenia kvality.
SL - Proizvajalec in oseba, pooblaščená za sestavo tehničnega dokumenta, s polno odgovornostjo izdaja potrdilo, da je stroj, predmet te izjave, izdelan v skladu z osnovnimi zahtevami, kot jih določajo predpisi: Direktiva o strojih 2006/42/EC - Direktiva o elektromagnetni združljivosti 2014/30/EU - Direktiva 2011/65/EU kakor je bila spremenjena z 2015/863/EU - Direktiva WEEE 2012/19/EU. Jamčimo tudi za obliko sistema in predmetno izdelavo, pri katerih smo opravili postopke in pripravili ustrezno dokumentacijo v skladu z ustrezno tovarniško prakso in predpisom EN ISO 9001:2015, ki velja za sisteme zagotavljanja kakovosti.
SV - Tillverkaren och den person som har befogenhet att sammanställa den tekniska dokumentationen intygar, på eget ansvar, att maskinen denna försäkran hänvisar till överensstämmer med de väsentliga krav som ställs av följande direktiv: Maskindirektivet 2006/42/EC - Direktivet om elektromagnetisk kompatibilitet 2014/30/EU - Direktivet 2011/65/EU ändrat genom 2015/863/EU - Direktivet WEEE 2012/19/EU. Det garanteras vidare att utformningen av maskinen och därtill hörande tillverkning genomförs dokumenterat, i enlighet med exakta fabriksförfaranden som följer standard EN ISO 9001:2015 om system för kvalitetstyrning.
TR - Üretici ve teknik dosyası oluşturmakla görevli kişi bu beyanını ilgili olduğu makinenin, aşağıdaki direktifler tarafından öngörülen temel gerekliliklere uygun olduğunu kendi sorumluluğu altında beyan eder: 2006/42/EC Makine Direktifi - 2014/30/EU Elektromanyetik Uyumluluk Direktifi - 2015/863/EU tarafından değiştirilen 2011/65/EU sayılı Direktif - WEEE 2012/19/EU Direktifi. Bundan başka, makinenin tasarımı ve ilgili üretimi, kalite yönetim sistemlerine ilişkin EN ISO 9001:2015 standardına uygun kesin işletme prosedürlerinin izlenmesi yoluyla gerçekleştirilmesi ve belgelendirilmesi sağlanır.

Dichiarazione CE di Conformità EC Declaration of Conformity

Versione linguistica originale in Italiano

Translation of the original Italian version

DESCRIZIONE - DESCRIPTION

**AGITATORE GIROSCOPICO
GYROSCOPIC MIXER**

MODELLO - MODEL

MATRICOLA - SERIAL No.

[MACHINE NAME]

Fabbricante - Manufacturer

COROB India Pvt. Ltd. - Mumbai - India

**c/o Nandigram Factory: Shed No 1-B and 1-A, Nandigram Realtors, N H No 48, Near Nandigram Jain Temple,
Umbergaon, Bhilad, Valsad, Gujarat, 396105**

Mandatario e persona autorizzata a costituire il fascicolo tecnico:
Authorised representative and person authorised to compile the technical file:

COROB S.p.A. - Via Agricoltura, 103 - 41038 San Felice s/P (MO) - Italy

Il fabbricante dichiara sotto la propria esclusiva responsabilità che la macchina alla quale questa dichiarazione si riferisce è conforme ai requisiti essenziali previsti dalle seguenti direttive:

The manufacturer certifies, under its own responsibility, that the machine to which this statement refers to, complies with the essential requirements foreseen by the regulations:

- Direttiva Macchine 2006/42/CE
- Direttiva Compatibilità Elettromagnetica 2014/30/EU
- Direttiva 2011/65/EU come modificata da 2015/863/EU
- Direttiva WEEE 2012/19/EU

- Machinery Directive 2006/42/EC
- Electromagnetic Compatibility Directive 2014/30/EU
- Directive 2011/65/EU as amended by 2015/863/EU
- WEEE Directive 2012/19/EU

Nasser Arivoli (Managing Director)
COROB India Pvt. Ltd.
Mumbai, 15/06/2023



BG - Производителят, който е лицето упълномощено за изготвяне на техническата документация, декларира на собствена изключителна отговорност, че машината, за която се отнася тази декларация, е в съответствие със съществените изисквания, предвидени от следните Директиви: Директива 2006/42/EC - Машини - Директива 2014/30/EU относно Електромагнитна съвместимост - Директива 2011/65/EU изменена с 2015/863/EU - Директива WEEE 2012/19/EU.
CS - Vyrobc a osoba pověřená sestavením technické dokumentace stvrzují na svou vlastní odpovědnost, že zařízení, ke kterému se toto toto prohlášení vztahuje, je v souladu se základními požadavky stanovenými následujícími směrnici: Směrnice o strojních zařízeních 2006/42/EC - Směrnice o elektromagnetické kompatibilitě 2014/30/EU - Směrnice 2011/65/EU ve znění 2015/863/EU - Směrnice WEEE 2012/19/EU.
DA - Fabrikanten og personen bemyndiget til at udarbejde den tekniske dokumentation erklærer på eget ansvar at maskinen, som denne erklæring henviser til, er i overensstemmelse med de væsentlige krav i de følgende direktiver: Maskindirektivet 2006/42/EC - Direktivet om elektromagnetisk kompatibilitet 2014/30/EU - Direktivet 2011/65/EU som ændret ved 2015/863/EU - Direktivet WEEE 2012/19/EU.
DE - Der Hersteller und autorisierte Verfasser der technischen Dokumentation erklärt unter eigener exklusiver Verantwortung, dass die Maschine, auf die sich diese Erklärung bezieht, den Grundanforderungen entspricht, die von den folgenden Richtlinien vorgesehen werden: Maschinenrichtlinie 2006/42/EC - Richtlinie zur elektromagnetischen Verträglichkeit 2014/30/EU - Richtlinie 2011/65/EU geändert durch 2015/863/EU - Richtlinie WEEE 2012/19/EU.
EL - Ο κατασκευαστής, και ο εξουσιοδοτημένος συντάκτης του τεχνικού φακέλου, πιστοποιεί, ότι, με δική του υπαιτιότητα, το μηχανήμα στο οποίο αναφέρεται το παρόν, συμμορφώνεται με τις ουσιαστικές απαιτήσεις που προβλέπονται από τους κανονισμούς: Οδηγία Μηχανήματος 2006/42/EC - Οδηγία Ηλεκτρομαγνητικής Συμβατότητας 2014/30/EU - Οδηγία 2011/65/EU όπως τροποποιήθηκε από το 2015/863/EU - Οδηγία WEEE 2012/19/EU.
ES - El fabricante y la persona autorizada para componer el fascículo técnico declara, bajo su propia y exclusiva responsabilidad, que la máquina a la que hace referencia esta declaración guarda conformidad con los requisitos esenciales previstos por las directivas siguientes: Directiva de máquinas 2006/42/EC - Directiva de compatibilidad electromagnética 2014/30/EU - Directiva 2011/65/EU modificada por 2015/863/EU - Directiva WEEE 2012/19/EU.
ET - Tootja ja tehnilise toimiku koostajaks volitatud isik kinnitavad oma täielikul vastutusel, et seade, millele käesolev avaldus viitab, vastab järgnevatel regulatsioonidel põhinevatele masinadirektiivi 2006/42/EC - Elektromagnetilise ühilduvuse direktiivi 2014/30/EU - Direktiiv 2011/65/EU muudetud 2015/863/EU-ga - Direktiiv WEEE 2012/19/EU.
FI - Valmistaja ja henkilö, joka on valtuutettu laatimaan tekninen asiakirja-aineisto, vakuuttavat omalla vastuullaan, että kone, johon tämä lausunto viittaa, vastaa seuraavien direktiivien olennaisia vaatimuksia: Konedirektiivi 2006/42/EC - Sähkömagneettista yhteensopivuutta koskeva direktiivi (EMC) 2014/30/EU ja Direktiivi 2011/65/EU sellaisena kuin se on muutettuna direktiivillä 2015/863/EU - Direktiiv WEEE 2012/19/EU.
FR - Le fabricant, et toute personne autorisée à établir le dossier technique, déclare sous sa propre responsabilité que la machine à laquelle se rapporte cette déclaration est conforme aux exigences essentielles prévues par les directives suivantes: Directive Machines 2006/42/EC - Directive Compatibilité Électromagnétique 2014/30/EU - Directive 2011/65/EU telle que modifiée par 2015/863/EU - Directive WEEE 2012/19/EU.
GA - Dearbhaíonn an déantóir, agus an duine atá údaráithe chun an comhad teicniúil a chur le chéile, ar a fhreagracht féin go bhfuil an gléas a mbaineann an ráiteas seo leis i gcomhréir leis na riachtanais atá leagtha amach sna treoracha seo a leanas: Treoir um Innealra 2006/42/EC - Treoir um Chomhoiriúnacht Leictreamaighnéadach 2014/30/EU - Treoir 2011/65/EU ama leasú le 2015/863/EU - Treoir WEEE 2012/19/EU.
HR - Proizvođač, i osoba ovlaštena za sastavljanje tehničke dokumentacije, izjavljuje pod svojom punom odgovornošću da je stroj na koji se odnosi ova izjava sukladan bitnim zahtjevima slijedećih direktiva: Direktive o strojevima 2006/42/EC - Direktive o elektromagnetskoj kompatibilnosti 2014/30/EU - Direktive 2011/65/EU izmijenjena i dopunjena 2015/863/EU - Direktive WEEE 2012/19/EU.
HU - A gyártó, valamint a műszaki főzet összeállítására felhatalmazott személy saját felelősségük tudatában kijelentik, hogy a jelen nyilatkozat tárgyát képező gép megfelel az alábbi irányelvek alapvető rendelkezéseinek: 2006/42/EC Gépek irányelv - 2014/30/EU Elektromágneses kompatibilitás irányelv - 2011/65/EU irányelv, módosításról módosított 2015/863/EU irányelv - WEEE 2012/19/EU irányelv.
IS - Framleiðandinn, og einstaklingurinn sem hefur heimild til að taka saman tækniskjölinn, vottar, á eigin ábyrgð, að vélin sem vísað er til í þessari yfirlýsingu, sé í samræmi við þær grunnkröfur sem gert er ráð fyrir í eftirfarandi reglugerðum: Vélatskipun 2006/42/EC - Tilskipun um rafsegulsviðsamhæfi 2014/30/EU - Tilskipun 2011/65/EU eins og henni var breytt með 2015/863/EU - Tilskipun WEEE 2012/19/EU.
LT - Gamintojas ir asmuo įgaliojtas sudaryti techninę dokumentaciją, savo atsakomybe pareiškia, kad staklės, kurioms skirta ši deklaracija, atitinka esminius šių direktyvų reikalavimus: Mašinų direktyva 2006/42/EC - Elektromagnetinio suderinamumo direktyva 2014/30/EU - Direktyva 2011/65/EU su pakeitimais, padarytais 2015/863/EU - Direktyva WEEE 2012/19/EU.
LV - Ražotājs un persona, kas ir pilnvarota sastādīt tehnisko dokumentāciju, apliecina uz savu atbildību, ka mašīna, uz kuru šī deklarācija attiecas, atbilst šādu direktīvu: pamatprasībām Mašīnu Direktīva 2006/42/EC - Elektromagnētiskās sadarbības Direktīva 2014/30/EU - Direktīva 2011/65/EU grozīta ar 2015/863/EU pantu - Direktīva WEEE 2012/19/EU.
MT - Il-manifattur, u l-persuna awtorizzata biex tikkompila l-fajl tekniku jiddikjaraw taht ir -responsabbiltà tagħhom stess li l-magna li għaliha qed issir din id-dikjarazzjoni hija konformi għar-rekwiżiti essenzjali previsti mid direttivi li ġejjin: Direttiva dwar il-Magni 2006/42/EC - Direttiva dwar il-Kompatibilità Elettromanjetika 2014/30/EU - Direttiva 2011/65/EU kif emendata b'2015/863/EU - Direttiva WEEE 2012/19/EU.
NL - De fabrikant en gemachtigde voor het samenstellen van het technisch dossier verklaart dat het betreffende toestel voldoet aan de toepasselijke fundamentele voorschriften van de volgende richtlijnen: Machinerichtlijn 2006/42/EC - EMC-richtlijn 2014/30/EU - Richtlijn 2011/65/EU zoals gewijzigd bij 2015/863/EU - Richtlijn WEEE 2012/19/EU.
NO - Produsenten og den personen som er autorisert til å utstede den tekniske dokumentasjonen, erklærer under eget ansvar, at den maskinen denne erklæringen viser til, er i samsvar med de grunnleggende kravene som fremsettes i følgende direktiv: Maskindirektivet 2006/42/EC - Direktivet om elektromagnetisk kompatibilitet 2014/30/EU - Direktiv 2011/65/EU som endret ved 2015/863/EU - Direktiv WEEE 2012/19/EU.
PL - Producent oraz osoba upoważniona do sporządzenia dokumentacji technicznej zaświadcza na własną, wyłączną odpowiedzialność, że maszyna, której dotyczy niniejsza deklaracja, jest zgodna z zasadniczymi wymaganiami przewidzianymi w następujących dyrektywach: Dyrektywa Maszynowa 2006/42/EC - Dyrektywa Kompatybilności Elektromagnetycznej 2014/30/EU - Dyrektywa 2011/65/EU zmieniona przez 2015/863/EU - Dyrektywa WEEE 2012/19/EU.
PT - O Fabricante e a pessoa autorizada a preencher o documento técnico declaram, à sua inteira e exclusiva responsabilidade, que a máquina a que se refere esta declaração está em conformidade com os requisitos essenciais estabelecidos pelas seguintes diretivas: Diretiva Máquinas 2006/42/EC - Diretiva Compatibilidade Eletromagnética 2014/30/EU - Diretiva 2011/65/EU alterada pela 2015/863/EU - Diretiva WEEE 2012/19/EU.
RO - Fabricantul și persoana autorizată pentru realizarea dosarului tehnic declară pe propria răspundere că mașina la care se referă prezenta declarație se conformează cerințelor esențiale prevăzute de următoarele directive: Directiva 2006/42/EC Mașini - Directiva 2014/30/EU Compatibilitatea electromagnetică - Directiva 2011/65/EU astfel cum a fost modificat de 2015/863/EU - Directiva WEEE 2012/19/EU.
SK - Výrobca a osoba poverená vypracovaním technickej dokumentácie na vlastnú zodpovednosť prehlasujú, že stroj, na ktorý sa toto prehlásenie vzťahuje, je v súlade so základnými požiadavkami, ktoré vyžadujú nasledujúce smernice: Smernica o strojných zariadeniach 2006/42/EC - Smernica o elektromagnetickej kompatibilite 2014/30/EU - Smernica 2011/65/EU zmenená a doplnená 2015/863/EU - Smernica WEEE 2012/19/EU.
SL - Proizvajalec in oseba, pooblaščená za sestavo tehničnega dokumenta, s polno odgovornostjo izdaja potrdilo, da je stroj, predmet te izjave, izdelan v skladu z osnovnimi zahtevami, kot jih določajo predpisi: Direktiva o strojih 2006/42/EC - Direktiva o elektromagnetni združljivosti 2014/30/EU - Direktiva 2011/65/EU kakor je bila spremenjena z 2015/863/EU - Direktiva WEEE 2012/19/EU.
SV - Tillverkaren och den person som har befogenhet att sammanställa den tekniska dokumentationen intygar, på eget ansvar, att maskinen denna försäkran hänvisar till överensstämmer med de väsentliga krav som ställs av följande direktiv: Maskindirektivet 2006/42/EC - Direktivet om elektromagnetisk kompatibilitet 2014/30/EU - Direktivet 2011/65/EU ändrat genom 2015/863/EU - Direktivet WEEE 2012/19/EU.
TR - Üretici ve teknik dosyayı oluşturmakla görevli kişi bu beyanını ilgili olduđu makinenin, aşığdaki direktifler tarafından öngörülen temel gerekliliklere uygun olduđunu kendi sorumluluđu altında beyan eder: 2006/42/EC Makine Direktifi - 2014/30/EU Elektromanyetik Uyumluluk Direktifi - 2015/863/EU tarafından değıştirilen 2011/65/EU sayılı Direktif - WEEE 2012/19/EU Direktifi.

UK Declaration of Conformity

Description	AUTOMATIC MIXER
Model	[MACHINE NAME]
Serial Number	
Manufacturer:	COROB S.p.A. Via Agricoltura, 103 - 41038 San Felice s/P (MO) – Italy

The manufacturer certifies, under its own responsibility, that the machine to which this statement refers to, complies with the relevant statutory requirements applicable to the specific machine:

- The Supply of Machinery (Safety) Regulations 2008 (S.I. 2008:1957)
- The Electrical Equipment (Safety) Regulations 2016 (S.I. 2016:1101)
- The Electromagnetic Compatibility Regulations 2016 (S.I. 2016:1091)
- The Restriction of the Use of Certain Hazardous Substances in Electrical and Electronic Equipment Regulations 2012 (S.I. 2012 No. 3032)
- The Waste Electric and Electronic Equipment (WEEE) Regulations 2013

[Name and Surname of Special Proxy Holder in charge]
COROB S.p.A.
San Felice sul Panaro, DD/MM/YYYY

UK Declaration of Conformity

Description	AUTOMATIC MIXER
Model	[MACHINE NAME]
Serial Number	
Manufacturer:	COROB India Pvt. Ltd. - Mumbai - India, c/o Nandigram Factory: Shed No 1-B and 1-A, Nandigram Realtors, N H No 48, Near Nandigram Jain Temple, Umbergaon, Bhilad, Valsad, Gujarat, 396105

The manufacturer certifies, under its own responsibility, that the machine to which this statement refers to, complies with the relevant statutory requirements applicable to the specific machine:

- The Supply of Machinery (Safety) Regulations 2008 (S.I. 2008:1957)
- The Electrical Equipment (Safety) Regulations 2016 (S.I. 2016:1101)
- The Electromagnetic Compatibility Regulations 2016 (S.I. 2016:1091)
- The Restriction of the Use of Certain Hazardous Substances in Electrical and Electronic Equipment Regulations 2012 (S.I. 2012 No. 3032)
- The Waste Electric and Electronic Equipment (WEEE) Regulations 2013

Nasser Arivoli
(Managing Director)
COROB India Pvt. Ltd.
Mumbai, 15/06/2023

8.4 Warranty

In order for the warranty to be valid, please complete the form included in the machine packing, and send it to the address listed on the form itself.



ATTENTION

Contact our authorized and qualified personnel only for all your service needs. Use only original spare parts for all maintenance and replacement interventions.

Altering or removing the guards and safety devices provided on the machine will not only void the warranty immediately, but is also dangerous and illegal.

The manufacturer may not be held liable for personal injury or property damage caused by improper use of the equipment or tampering with the guards and safety devices installed on the machine.

The following shall **void the manufacturer's warranty**:

- Improper use of the machine.
- Failure to observe the instructions and maintenance rules set forth in the manual.
- Making or having changes and/or repairs made on the machine by personnel outside the service organization authorized by the manufacturer and/or made using non-original spare parts.